Self Diagnosis Supported model

SERVICE MANUAL

FE-2 CHASSIS

MODEL	COMMANDER	DEST	CHASSIS NO.	MODEL	COMMANDER	DEST	CHASSIS NO.
KV-25FX30B	RM-887	FR	SCC-Q54H-A	KV-29FX30B	RM-887	FR	SCC-Q54J-A
KV-25FX30E	RM-887	ESP	SCC-Q53J-A	KV-29FX30E	RM-887	ESP	SCC-Q53K-A
KV-25FX30K	RM-887	OIRT	SCC-Q51K-A	KV-29FX30K	RM-887	OIRT	SCC-Q51L-A

FD Trinitron

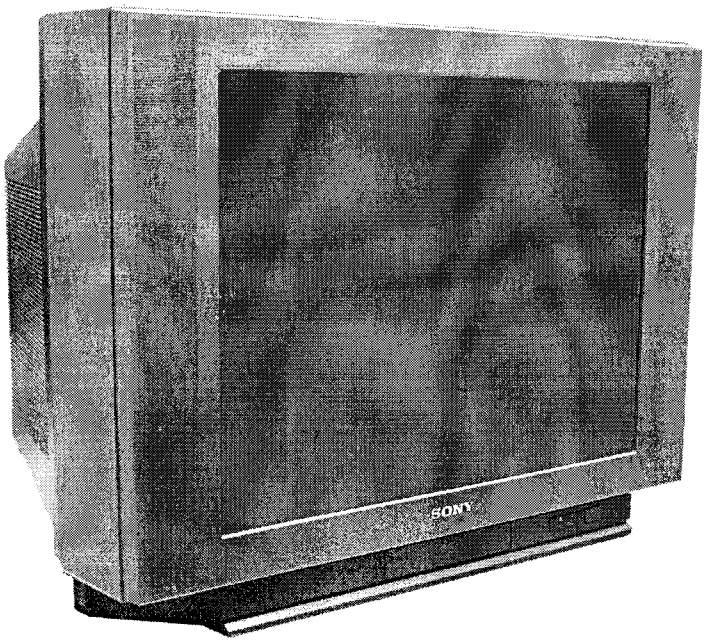



TRINITRON ® COLOR TV

SONY®

TABLE OF CONTENTS

Section	Title	Page
	Specifications	3
	Connectors	4
	Self Diagnostic Software	5
1. GENERAL		
	Switching On the TV and Automatically Tuning	6
	Introducing the Menu System	7
	Teletext	10
	Connecting Optional Equipment	10
	Specifications	11
	Troubleshooting	11
2. DISASSEMBLY		
2-1.	Rear Cover Removal	12
2-2.	Chassis Removal	12
2-3.	A Board PWB Removal 1	13
2-4.	A Board PWB Removal 2	13
2-5.	Service Position	13
2-6.	Picture Tube Removal	14
	Bottom Plates	15
3. SET-UP ADJUSTMENTS		
3-1.	Beam Landing	16
3-2.	Convergence	17
3-3.	Focus Adjustment	19
3-4.	Screen (G2), White Balance	19
4. CIRCUIT ADJUSTMENTS		
4-1.	Electrical Adjustments	20
4-2.	Test Mode 1	22
4-3.	Test Mode 2	22
5. DIAGRAMS		
5-1.	Block Diagrams	23
5-2.	Circuit Board Location	26
5-3.	Schematic Diagrams and Printed Wiring Boards	26
	* C Board	27
	* A Board	30
5-4.	Semiconductors	33
5-5.	IC Blocks	35
6. EXPLODED VIEWS		
6-1.	Chassis	36
6-2.	Picture Tube	37
7. ELECTRICAL PARTS LIST		38

CAUTION

SHORT CIRCUIT THE ANODE OF THE PICTURE TUBE AND THE ANODE CAP TO THE METAL CHASSIS, CRT SHIELD, OR THE CARBON PAINTED ON THE CRT, AFTER REMOVAL OF THE ANODE CAP.

WARNING !!

AN ISOLATION TRANSFORMER SHOULD BE USED DURING ANY SERVICE WORK TO AVOID POSSIBLE SHOCK HAZARD DUE TO LIVE CHASSIS, THE CHASSIS OF THIS RECEIVER IS DIRECTLY CONNECTED TO THE POWER LINE.

SAFETY-RELATED COMPONENT WARNING !!

COMPONENTS IDENTIFIED BY SHADING AND MARKED ⚠ ON THE SCHEMATIC DIAGRAMS, EXPLODED VIEWS AND IN THE PARTS LIST ARE CRITICAL FOR SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.

ATTENTION

APRES AVOIR DECONNECTE LE CAP DE'LANODE, COURT-CIRCUITER L'ANODE DU TUBE CATHODIQUE ET CELUI DE L'ANODE DU CAP AU CHASSIS METALLIQUE DE L'APPAREIL, OU AU COUCHE DE CARBONE PEINTE SUR LE TUBE CATHODIQUE OU AU BLINDAGE DU TUBE CATHODIQUE.

ATTENTION !!

AFIN D'EVITER TOUT RISQUE D'ELECTROCUTION PROVENANT D'UN CHÁSSIS SOUS TENTION, UN TRANSFORMATEUR D'ISOLEMENT DOIT ETRE UTILISÈ LORS DE TOUT DÈPANNAGE LE CHÁSSIS DE CE RÈCEPTEUR EST DIRECTMENT RACCORDÈ Á L'ALIMENTATION SECTEUR.

ATTENTION AUX COMPOSANTS RELATIFS Á LA SECURITÈ!!

LES COMPOSANTS IDENTIFIÈS PAR UNE TRAME ET PAR UNE MARQUE ⚠ SUR LES SCHÈMAS DE PRINCIPE, LES VUES EXPLOSÈES ET LES LISTES DE PIECES SONT D'UNE IMPORTANCE CRITIQUE POUR LA SÈCURITÈ DU FONCTIONNEMENT, NE LES REMPLACER QUE PAR DES COMPSANTS SONY DONT LE NUMÈRO DE PIÈCE EST INDIQUÈ DANS LE PRÈSENT MANUEL OU DANS DES SUPPLÈMENTS PUBLIÈS PAR SONY.

ITEM MODEL	Television System	Stereo System	Channel Coverage	Color System
B	B/G/H, D/K, I, L	GERMAN/NICAM Stereo	VHF : E2-E12, F2-F10 UHF : E21-E69, F21-F69, B21-B69 CABLE TV : S01-S03, S1-S20, B-Q HYPER : S21-S41	PAL, SECAM NTSC4.43, NTSC3.58 (VIDEO IN)
E	B/G/H, D/K	GERMAN/NICAM Stereo	VHF : E2-E12 UHF : E21-E69 CABLE TV : S01-S03, S1-S20 HYPER : S21-S41	PAL, SECAM NTSC4.43, NTSC3.58 (VIDEO IN)
K	B/G/H, D/K	GERMAN/NICAM Stereo	VHF : E2-E12, R01-R12 UHF : E21-E69, R21-R69 CABLE TV : S01-S03, S1-S20 HYPER : S21-S41	PAL, SECAM NTSC4.43, NTSC3.58 (VIDEO IN)

Picture Tube	Flat Display FD Trinitron Approx 63 cm (25 inches) (Approx 59 cm picture measured diagonally) Approx 73 cm (29 inches) (Approx 67 cm picture measured diagonally)	**Sound output**	
		Right and Left speaker	2x14W (Music Power) 2x7W (RMS)
		General Specifications	
Input/Output Terminals [REAR]		Power Requirements	220 - 240V
1: 21-pin Euro connector (CENELEC standard)	Inputs for Audio and Video signals. Inputs for RGB. Outputs of TV Video and Audio signals.	Power Consumption	KV-25FX30 : 87 W KV-29FX30 : 94 W
2: 21-pin Euro connector	Inputs for Audio and Video signals. Inputs for S Video. Outputs of TV Video and Audio signals. (selectable)	Dimensions	KV-25FX30 Approx 655x509x476 mm KV-29FX30 Approx 746x569x516 mm
		Weight	KV-25FX30 Approx 36kg KV-29FX30 Approx 46.5kg
RCA Connectors	Variable Output for audio signals	Supplied Accessories	RM-887 Remote Commander (1) IEC designated R6 battery (2)
Input/Output Terminals [FRONT]		Other Features	TV system Autodetection, Teletext Smartlink
Headphone jack	stereo mini jack	**Remote Control System : Infrared Control**	
Audio inputs	phono jacks	Power requirements	3V dc 2 batteries IEC designation R6 (size AA)
Video inputs	phono jacks		
S Video input	4 pin DIN		
Design and specifications are subject to change without notice.			

Model Name / Item	KV-25FX30B KV-29FX30B	KV-25FX30E KV-29FX30E	KV-25FX30K KV-29FX30K
Pal Comb	OFF	OFF	OFF
PIP	OFF	OFF	OFF
RGB Priority	ON	ON	ON
Woofer Box	OFF	OFF	OFF
Scart 1	ON	ON	ON
Scart 2	ON	ON	ON
Front in (3)	ON	ON	ON
Scart 4	OFF	OFF	OFF
Projector	OFF	OFF	OFF
Norm B/G	ON	ON	ON
Norm I	ON	OFF	OFF
Norm D/K	ON	ON	ON
Norm AUS	OFF	OFF	OFF
Norm L	ON	OFF	OFF
Norm SAT	OFF	OFF	OFF
Norm M	OFF	OFF	OFF
Teletext	ON	ON	ON
Nicam Stereo	ON	ON	ON

21 pin connector

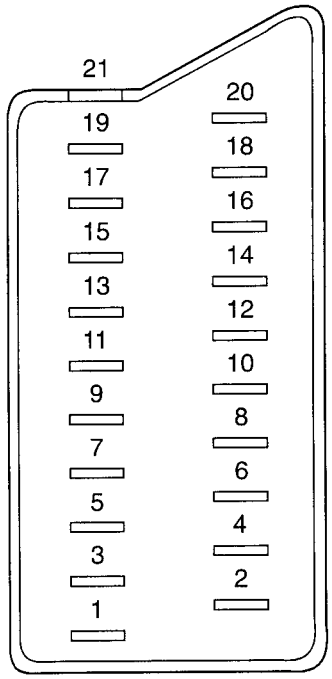

Pin No	1	2	4	Signal	Signal level
1	○	○	○	Audio output B (right)	Standard level : 0.5V rms Output impedence : Less than 1kohm*
2	○	○	○	Audio output B (right)	Standard level : 0.5V rms Output impedence : More than 10kohm*
3	○	○	○	Audio output A (left)	Standard level : 0.5V rms Output impedence : Less than 1kohm*
4	○	○	○	Ground (audio)	
5	○	○	○	Ground (blue)	
6	○	○	○	Audio input A (left)	Standard level : 0.5V rms Output impedence : More than 10kohm*
7	○	●	●	Blue input	0.7 +/- 3dB, 75 ohms positive
8	○	○	○	Function select (AV control)	High state (9.5-12V) : Part mode Low state (0-2V) : TV mode Input impedence : More than 10K ohms Input capacitance : Less than 2nF
9	○	○	○	Ground (green)	
10	○	○	○	Open	
11	○	●	●	Green	Green signal : 0.7 +/- 3dB, 75 ohms, positive
12	○	○	○	Open	
13	○	○	○	Ground (red)	
14	○	○	○	Ground (blanking)	
15	○	–	–	Red input	0.7 +/- 3dB, 75 ohms, positive
	–	○	○	(S signal Chroma input)	0.3 +/- 3dB, 75 ohms, positive
16	○	●	●	Blanking input (Ys signal)	High state (1-3V) Low state (0-0.4V) Input impedence : 75 ohms
17	○	○	○	Ground (video output)	
18	○	○	○	Ground (video input)	
19	○	○	○	Video output	1V +/- 3dB, 75ohms, positive sync 0.3V (-3+10dB)
20	○	–	–	Video input	1V +/- 3dB, 75ohms, positive sync 0.3V (-3+10dB)
	–	○	○	Video input Y (S signal)	1V +/- 3dB, 75ohms, positive sync 0.3V (-3+10dB)
21	○	○	○	Common ground (plug, shield)	

○ Connected ● Not Connected (open) * at 20Hz - 20kHz

Rear Connection Panel

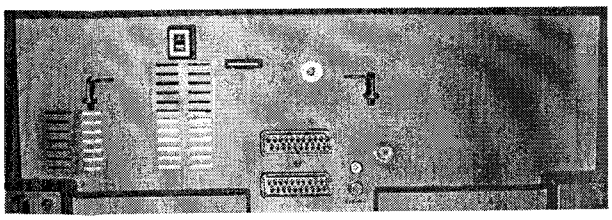

Front Connection Panel

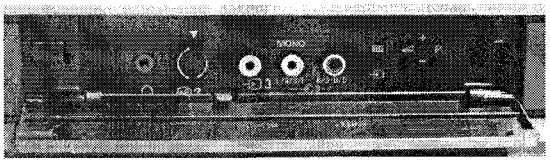

S-Video socket

S Video socket pin configuration		
Pin No	Signal	Signal Level
1	Ground	-
2	Ground	-
3	Y (S signal) input	1V +/- 3dB 75ohm, positive Sync. 0.3V -3 +10dB
4	C (S signal) input	0.3V +/- 3dB 75ohm, positive Sync.

FE-2 SELF DIAGNOSTIC SOFTWARE

The identification of errors within the FE-2 chassis is triggered in one of two ways :- 1: Busy or 2: Device failure to respond to IIC. In the event of one of these situations arising the software will first try to release the bus if busy (Failure to do so will report with a continuous flashing LED) and then communicate with each device in turn to establish if a device is faulty. If a device is found to be faulty the relevant device number will be displayed through the LED (Series of flashes which must be counted) See table 1., non fatal errors are reported using this method. Each time the software detects an error it is stored within the NVM. See Table 2.

Table 1

Error Message	LED Code
No error	00
Reserved	01
OCP (Over Current Protection)	02
Not Used	03
No Vertical Sync	04
IKR Error at power on	05
IIC bus clock and/or data lines low at power on	06
NVM no IIC bus acknowledge at power on	07
Not Used	08
Tuner no acknowledge at power on	09
Sound Processor Error	10
Jungle controller 8 volts error	11

Flash Timing Example : e.g. error number 3

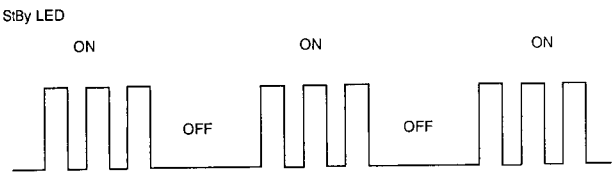

How to enter into Table 2

1. Turn on the main power switch of the TV set and enter into the 'Stanby Mode'.
2. Press the following sequence of buttons on the Remote Commander.

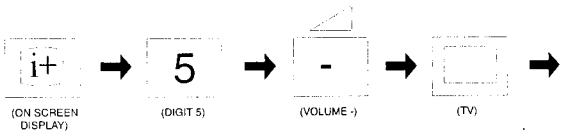

3. The following table will be displayed indicating the error count.

Table 2

ERROR MENU			
E02	OCP	(0, 255)	0
E03	OVP N/A	(0, 255)	0
E04	VSYNC	(0, 255)	0
E05	IKR	(0, 255)	0
E06	IIC	(0, 255)	0
E07	NVM	(0, 255)	0
E08	JUNGLE	(0, 255)	0
E09	TUNER	(0, 255)	0
E10	SOUNDP	(0, 255)	0
E11	8V	(0, 255)	0
WORKING TIME			
HOURS			2
MINUTES			11

Note: To clear the error count data press '80' on the Remote commander.

The operating instructions mentioned here are partial abstracts from the 'Operating Instruction Manual'. The page numbers of the 'Operating Instruction Manual' remain as in the manual.

Switching On the TV and Automatically Tuning

The first time you switch on your TV, a sequence of menu screen appear on the TV enabling you to: 1) choose the language of the menu screen, 2) choose the country in which you wish to operate the TV, 3) adjust the picture slant 4) search and store all available channels (TV Broadcast) and 5) change the order in which the channels (TV Broadcast) appear on the screen.
However, if you need to change any of these settings, you can do that by selecting the appropriate option in the (Set Up menu) or by pressing the Auto Start Up Button on the TV set.

1 Connect the TV plug to the mains socket (220-240V AC, 50Hz)
Press the ⏻ on/off button on the TV set to turn on the TV. The first time you press this button, a **Language** menu displays automatically on the TV screen.

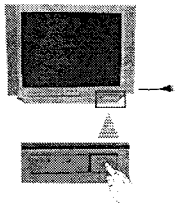

2 Press the ▼ or ▲ button on the remote control to select the language, then press the **OK** button to confirm your selection. From now on all the menus will appear in the selected language.



3 The **Country** menu appears automatically on the TV screen. Press the ▼ or ▲ button to select the country in which you will operate the TV set, then press the **OK** button to confirm your selection.



- If the country in which you want to use the TV set does not appear in the list, select "-" instead of a country.

4 Because of the earth's magnetism, the picture might slant. The **Picture Rotation** menu allows you to correct the picture slants if it is necessary.

a) If it is not necessary, press ▼ or ▲ to select **Not necessary** and press **OK**.

b) If it is necessary, press ▼ or ▲ to select **Adjust now**, then press **OK** and correct any slant of the picture between –5 and +5 by pressing ▼ or ▲ . Finally press **OK** to store.



continued...

5 The Auto Tuning menu appears on the screen. Press the **OK** button to select **Yes**.



6 The TV starts to automatically search and store all available channels (TV Broadcast) for you.

This procedure could take some minutes. Please be patient and do not press any button. Otherwise the automatic tuning will not be completed.



In the case that any channel have been found after the auto tuning process is completed, a new menu appears automatically on the screen asking you to connect the aerial. Please connect the aerial (see page 6) and press **OK**. The auto tuning process will start again.

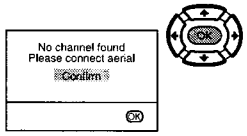

7 After all available channels are captioned and stored, the **Programme Sorting** menu appears automatically on the screen enabling you to change the order in which the channels appear on the screen.

a) If you do not wish to change the channel order, go to step 8.

b) If you wish to change the channel order:

1 Press the ▼ or ▲ button to select the programme number with the channel (TV Broadcast) you wish to rearrange, then press the ▶ button.

2 Press the ▼ or ▲ button to select the new programme number position for your selected channel (TV Broadcast), then press ◀ .

3 Repeat steps b)1 and b)2 if you wish to change the order of the other channels.

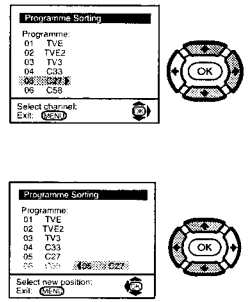

8 Press the MENU button to remove the menu from the screen.

Your TV is now ready for use

Introducing and Using the Menu System

Your TV uses an on-screen menu system to guide you through the operations. Use the following buttons on the Remote Control to operate the menu system:

1 Press the MENU button to switch the first level menu on.

2 • To highlight the desired menu or option, press ↓ or ↑.
- To enter to the selected menu or option, press →.
- To return to the last menu or option, press ←.
- To alter settings of your selected option, press ↓ / ↑ / ← or →.
- To confirm and store your selection, press **OK**.

3 Press the MENU button to remove the menu from the screen.

GB

Menu Guide

Level 1 **Level 2** **Level 3 / Function**

PICTURE ADJUSTMENT
The "Picture Adjustment" menu allows you to alter the picture adjustments.

To do that: after selecting the item you want to alter press →, then press repeatedly ↓ / ↑ / ← or → to adjust it and finally press **OK** to store the new adjustment.
This menu also allows you to customise the picture mode based on the programme you are watching:
- ↓ **Personal** (for individual settings).
- ↓ **Live** (for live broadcast programmes).
- ↓ **Movie** (for films).

- ***Brightness, Colour*** *and* ***Sharpness*** *can only be alterated if "Personal" mode is selected.*
- ***Hue*** *is only available for NTSC colour signal (e.g: USA video tapes).*
- *Select* ***Reset*** *and press* ***OK*** *to reset the picture to the factory preset levels.*

continued...

Level 1 **Level 2** **Level 3 / Function**

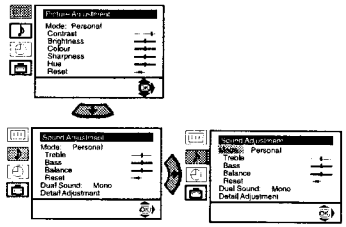

SOUND ADJUSTMENT
The "Sound Adjustment" menu allows you to alter the sound adjustments.

To do that: after selecting the item you want to alter, press →, then press repeatedly ↓ / ↑ / ← or → to adjust it and finally press **OK** to store the new adjustment.

This menu also contains two submenus as following:

Mode →
- ↓ **Personal** (for individual settings)
- ↓ **Rock**
- ↓ **Pop**
- ↓ **Jazz**

Detail Adjustment →

↓ **Sound Effect:**	↓ **Off:**	Normal.
	↓ **Spatial:**	Acoustic sound effect.
↓ **Auto volume:**	↓ **Off:**	Volume channel changes according to the broadcast signal.
	↓ **On:**	Volume level of the channels will stay the same, independent of the broadcast signal (e.g. in the case of advertisements).
↓ **TV Speakers:**	↓ **Off:**	Sound from external amplifier connected to the audio outputs on the rear of the TV set.
	↓ **On:**	Sound from the TV set.

- ***Treble*** *and* ***Bass*** *can only be altered if "Personal" mode is selected.*
- *Select* ***Reset*** *and press* ***OK*** *to reset the sound to the factory preset levels.*
- *In case of a bilingual broadcast select* ***Dual Sound*** *and set* ***A*** *for sound channel 1,* ***B*** *for sound channel 2 or* ***Mono*** *for mono channel if available. For a stereo broadcast you can choose* ***Stereo*** *or* ***Mono****.*

continued...

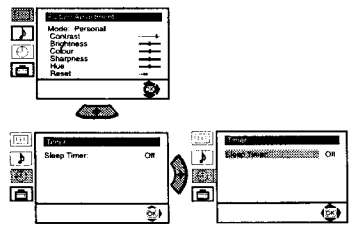

SLEEP TIMER

The "Sleep Timer" option in the "Timer" menu allows you to select a time period for the TV to switch itself automatically into the standby mode.

To do that: after selecting the option press ➧, then press ▼ or ▲ to set the time period delay (max. of 4 hours) and finally press **OK** to store.

- *While watching the TV, you can press the ⊞ button on the remote control to display the time remaining.*
- *One minute before the TV switches itself into standby mode, the time remaining is displayed on the TV screen automatically.*

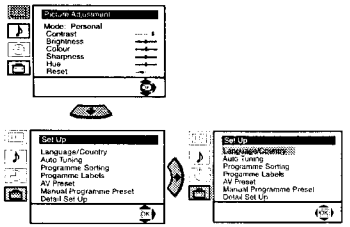

LANGUAGE / COUNTRY

The "Language/Country" option in the "Set Up" menu allows you to select the language that the menus are displayed in. It also allows you to select the country in which you wish to operate the TV set.

To do that: after selecting the option, press ➧ and then proceed in the same way as in the steps 2 and 3 of the section "Switching On the TV and Automatically Tuning".

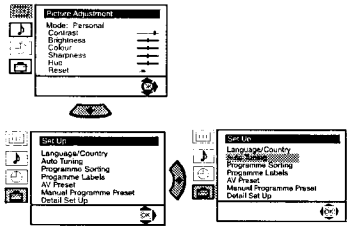

AUTO TUNING

The "Auto Tuning" option in the "Set Up" menu allows you to automatically search for and store all available TV channels.

To do that: after selecting the option, press ➧ and then proceed in the same way as in TV steps 5 and 6 of the section "Switching On the TV and Automatically Tuning".

continued...

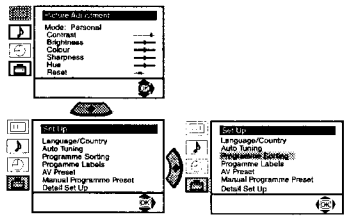

PROGRAMME SORTING

The "Programme Sorting" option in the "Set Up" menu allows you to change the order in which the channels (TV Broadcast) appear on the screen.

To do that: after selecting the option, press ➧ and then proceed in the same way as in step 7 b) of the section "Switching On the TV and Automatically Tuning".

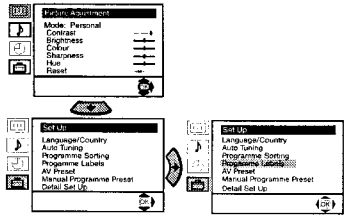

PROGRAMME LABELS

The "Programme Labels" option in the "Set Up" menu allows you to name a channel using up to five characters (letters or numbers).

To do that:

1 After selecting the option, press ➧, then press ▼ or ▲ to select the programme number with the channel you wish to name.
2 Press ➧. With the first element of the **Label** column highlighted, press ▼ or ▲ to select a letter or number (select "-" for a blank), then press ➧ to confirm this character. Select the other four characters in the same way. Finally press **OK** to store.

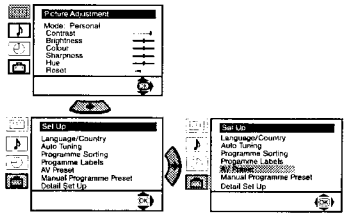

AV PRESET

The "AV Preset" option in the "Set Up" menu allows you to designate a name to the external equipment you have connected to the sockets of this TV.

To do that:

1 After selecting the option, press ➧, then press ▼ or ▲ to select the input source you wish to name (**AV1** and **AV2** are for the rear Scarts and **AV3** for front connectors). Then press ➧.
2 In the label column automatically appears a label:

a) If you want to use one of the 6 predefined label (**CABLE, GAME, CAM, DVD, VIDEO** or **SAT**), press ▼ or ▲ to select the desired label and finally press **OK** to store.
b) If you want to set a different label, select **Edit** and press ➧. Then with the first element highlighted, press ▼ or ▲ to select a letter, number or "-" for a blank, then press ➧ to confirm this character. Select the other four characters in the same way and finally press **OK** to store.

continued...

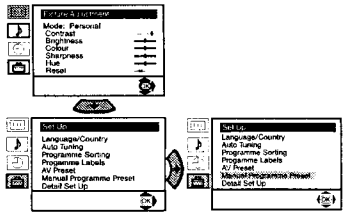

MANUAL PROGRAMME PRESET

The "Manual Programme Preset" option in the "Set Up" menu allows you to:

a) Preset channels or a video input source one by one to the programme order of your choice. To do that:

1 After selecting the "Manual Programme Preset" option, press ➧ then with **Programme** option highlighted press ➧. Press ▼ or ▲ to select on which programme number you want to preset the channel (for VCR, select programme number "0"). Then press ➧.

2 The following option is only available depending on the country you have selected in the "Language/Country" menu.

After selecting the **System** option, press ➧. Then press ▼ or ▲ to select the TV Broadcast system (B/G for western European countries or D/K for eastern European countries). Then press ➧.

3 After selecting the **Channel** option, press ➧. Then press ▼ or ▲ to select the channel tuning ("C" for terrestrial channels or "S" for cable channels). Next press ➧. After that, press the number buttons to enter directly the channel number of the TV Broadcast or the channel of the VCR signal. If you do not know the channel number, press ▼ or ▲ to search for it. When you tune the desired channel, press **OK** twice to store.

Repeat all the above steps to tune and store more channels.

continued...

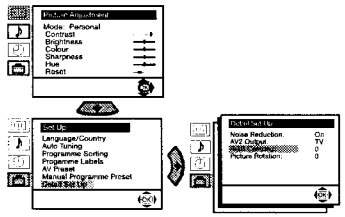

RGB CENTRING

When connecting an RGB source, such as a "PlayStation", you may need to readjust the horizontal position of the picture. In that case, you can readjust it through the "RGB Centring" option in the "Detail Set Up".

To do that: while watching an RGB source select the "RGB Centring" option and press ➧. Then press ▼ or ▲ to adjust the centre of the picture between –10 and +10. Finally press **OK** to confirm and store.

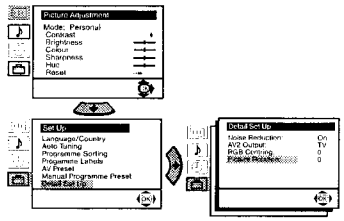

PICTURE ROTATION

Because of the earth's magnetism, the picture might slant. In this case, you can correct the pictures slant by using the option "Picture Rotation" in the "Detail Set Up" menu.

To do that: after selecting the option, press ➧. Then press ▼ or ▲ to correct any slant of the picture between -5 and +5 and finally press **OK** to store.

Teletext

Teletext is an information service transmitted by most TV stations. The index page of the teletext service (usually page 100) gives you information on how to use the service. To operate teletext, use the remote control buttons as indicated below.

Make sure to use a channel (TV Broadcast) with a strong signal, otherwise teletext errors may occur.

To Switch On Teletext :
After select the channel (TV Broadcast) which carries the teletext you wish to view, press ☰.

To Select a Teletext page:
Input 3 digits for the page number, using the numbered buttons.
- *If you have made a mistake, retype the correct page number.*
- *If the counter on the screen continues searching, it is because this page is not available. In that case, input another page number*

To access the next or preceding page:
Press **PROGR +** (▲) or **PROGR -** (▼).

To superimpose teletext on to the TV:
Whilst you are viewing teletext, press ☰. Press it again to cancel teletext mode.

To freeze a teletext page:
Some teletext pages have sub-pages which follow on automatically. To stop them, press ⏎/⊟. Press it again to cancel the freeze.

To reveal concealed information (e.g: answer to a quiz):
Press ⊞/?. Press it again to conceal the information.

To Switch Off Teletext:
Press ▢.

Fastext

Fastext service lets you access pages with one button push.
While you are in Teletext mode and Fastext is broadcast, a colour coded menu appears at the bottom of the teletext page. Press the colour button (red, green, yellow or blue) to access the corresponding page.

GB

Connecting Optional Equipment

Using the following instructions, you can connect a wide range of optional equipment to your TV set. (Connecting cables are not supplied).

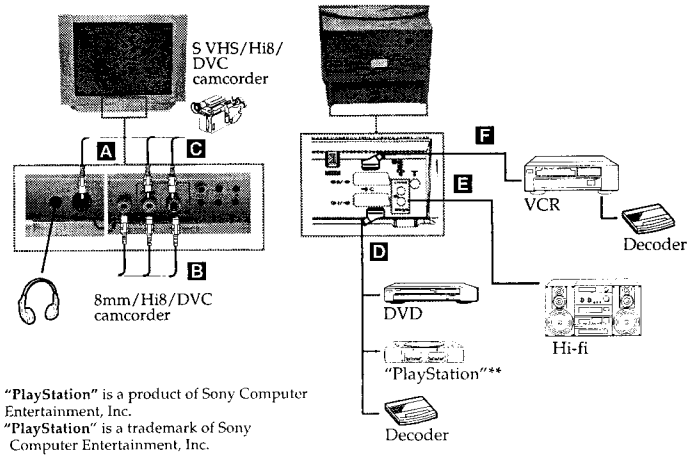

** **"PlayStation"** is a product of Sony Computer Entertainment, Inc.
** **"PlayStation"** is a trademark of Sony Computer Entertainment, Inc.

Connecting a VCR:

To connect a VCR, please refer to the section "Connecting the aerial and VCR" of this instruction manual. We recommend you connect your VCR using a scart lead. If you do not have a scart lead, tune in the VCR test signal to TV programme number "0" by using "Manual Programme Preset" option. (for details how to manual programme, see page 13, step a).
Also refer to your VCR instruction manual to find out how to find the output channel of your VCR.

Connecting a VCR that supports Smartlink:

Smartlink is a direct link between the TV set and the VCR. For more information on Smartlink, please refer to the instruction manual of your VCR.
If you use a VCR that supports Smartlink, please connect the VCR by using a Scart lead to the Scart ⇨2/⇦S **F**.

If you have connected a decoder to a VCR which supports Smartlink feature:

Select the "Manual Programme Preset" option in the "Set Up" menu and after entering in the "Decoder*" option, select "On" (by using ↓ or ↑). Repeat this option for each scrambling signal.

*This option is only available depending on the country you have selected in the "Country" menu.

continued...

Specifications

TV system:
B/G/H, D/K

Colour system:
PAL, SECAM
NTSC 3.58, 4.43 (only Video In)

Channel Coverage:
VHF: E2-E12
UHF: E21-E69
CATV: S1-S20
HYPER: S21-S41
D/K: R1-R12, R21-R69

Picture Tube:
Flat Display FD Trinitron
KF-25FX30K: 25" (approx. 63 cm. measured diagonally)
KF-29FX30K: 29" (approx. 73 cm. measured diagonally)

Rear Terminals

1/	21-pin scart connector (CENELEC standard) including audio/video input, RGB input, TV audio/video output.
2/ (SMARTLINK)	21-pin Scart connector (CENELEC standard) including audio / video input, S video input, selectable audio / video output and Smartlink interface.
	audio outputs (Left/ Right) - phono jacks

Front Terminals
3 S Video input - 4 pin DIN
3 video input – phono jack
3 audio input – phono jacks
headphones jack

Sound Output:
2 x 14 W (music power)
2 x 7 W (RMS)

Power Consumption:
KF-25FX30K: 87 W
KF-29FX30K: 94 W

Standby Power Consumption:
0.5 W

Dimensions (w x h x d) :
KF-25FX30K: Approx. 655 x 509 x 476 mm.
KF-29FX30K: Approx. 746 x 589 x 516 mm.

Weight:
KF-25FX30K: Approx. 36 Kg.
KF-29FX30K: Approx. 46.5 Kg.

Accessories supplied:
1 Remote Control (RM-887)
2 Batteries (IEC designated)

Other features:
- Teletext, Fastext, TOPtext
- Sleep Timer
- Smartlink (direct link between your TV set and a compatible VCR. For more information on Smartlink, please refer to the Instruction Manual of your VCR).
- TV system Autodetection.

Design and specifications are subject to change without notice.

Ecological Paper- Totally Chlorine Free

Troubleshooting

Here are some simple solutions to the problems which may affect the picture and sound.

Problem	Solution
No picture (screen is dark) and no sound.	• Check the aerial connection. • Plug the TV in and press the ⏻ button on the front of TV. • If the standby indicator ⏻ is on, press I/⏻ button on the remote control.
Poor or no picture (screen is dark), but good sound.	• Using the menu system, select the "Picture Adjustment" menu and select "Reset" to return to the factory settings.
No picture or no menu information from equipment connected to the Scart connector.	• Check that the optional equipment is on and press the button repeatedly on the remote control until the correct input symbol is displayed on the screen.
Good picture, no sound.	• Press the +/- button on the remote control. • Check that "TV Speakers" is "On" on the "Sound Adjustment" menu.
No colour on colour programmes.	• Using the menu system, select the "Picture Adjustment" menu and select "Reset" to return to factory settings.
Distorted picture when changing programmes or selecting teletext.	• Turn off any equipment connected to the Scart connector on the rear of the TV.
Wrong characters appear when viewing teletext.	• Using the menu system, enter to the "Language/ Country" menu and select the country in which you operate the TV set.
Picture slanted	• Using the menu system, select the "Picture Rotation" option in the "Detail Set Up" menu to correct the picture slant.
Noisy picture when viewing a TV channel.	• Using the menu system, select the "Manual Programme Preset" menu and adjust Fine Tuning (AFT) to obtain better picture reception. • Using the menu system, select the "Noise Reduction" option in the "Detail Set Up" menu and select "On" to reduce the noise in the picture.
No unscrambling whilst viewing a scrambling channel with a decoder connected through the Scart connector 2/.	• Using the menu system, select the "Set Up" menu. Then enter to "Detail Set Up" option and set "AV2 Output" to "TV".
Remote control does not function.	• Replace the batteries.
The standby indicator ⏻ on the TV flashes.	• Contact to your nearest Sony service centre.

In case of problems, have your TV serviced by qualified personnel. Never open the casing yourself.

GB

SECTION 2 DISASSEMBLY

2-1. Rear Cover Removal

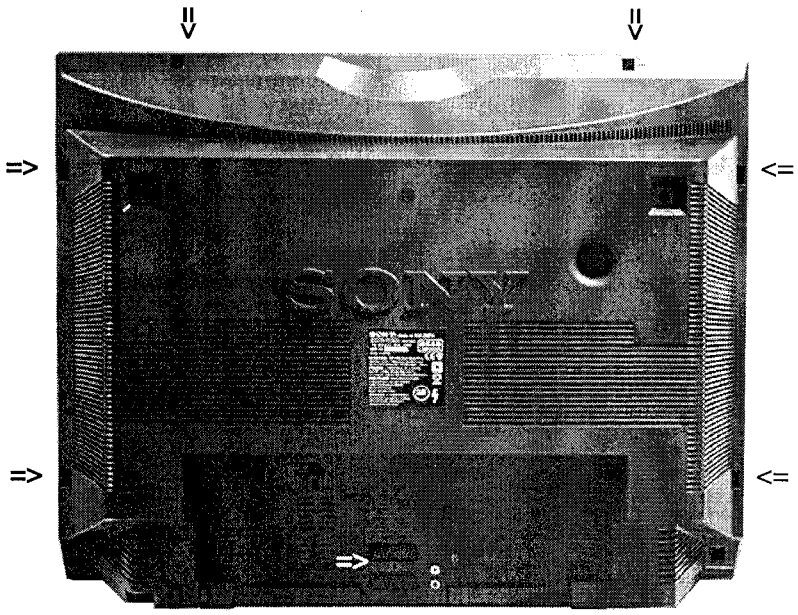

Release the mains power cable from its securing posts. Remove the rear cover fixing screws indicated. Pull the rear cover away from the front beznet.

2-2. Chassis Removal and Refitting

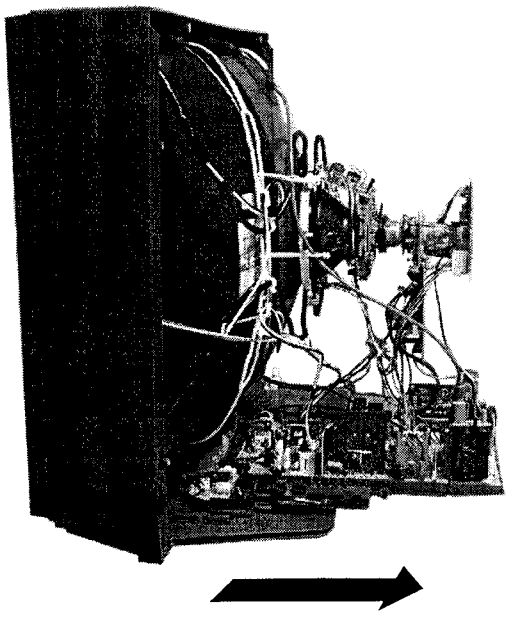

To remove lift the main bracket rear slightly and slide the chassis away from the beznet. Ensure that the interconnecting leads are released from their purse locks to prevent damage being caused.

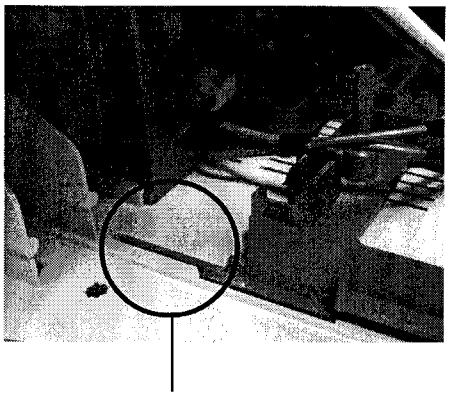

When refitting the chassis ensure that the main bracket is located in the beznet guide slots before sliding the chassis forwards. Refit the interconnecting leads in their respective purse locks.

2-3. A Board PWB Removal [Step 1]

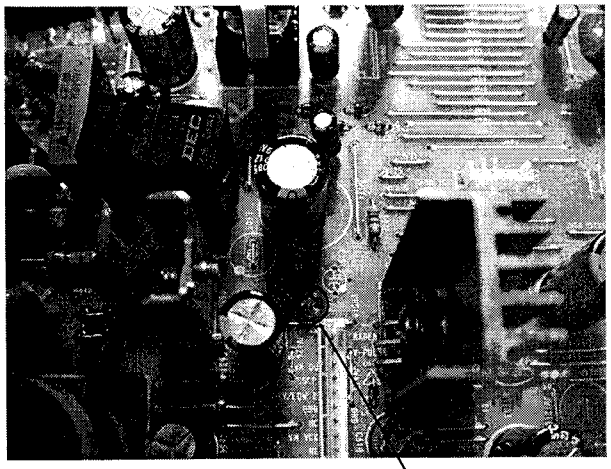

Remove the screw securing the PWB to the main bracket.

2-4. A Board PWB Removal [Step 2]

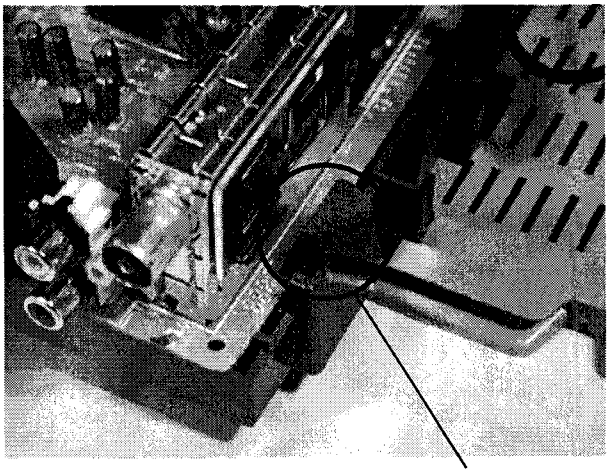

Release the 3 securing clips located at the side of the chassis and slide the PWB clear of the bracket.

2-5. Service Position

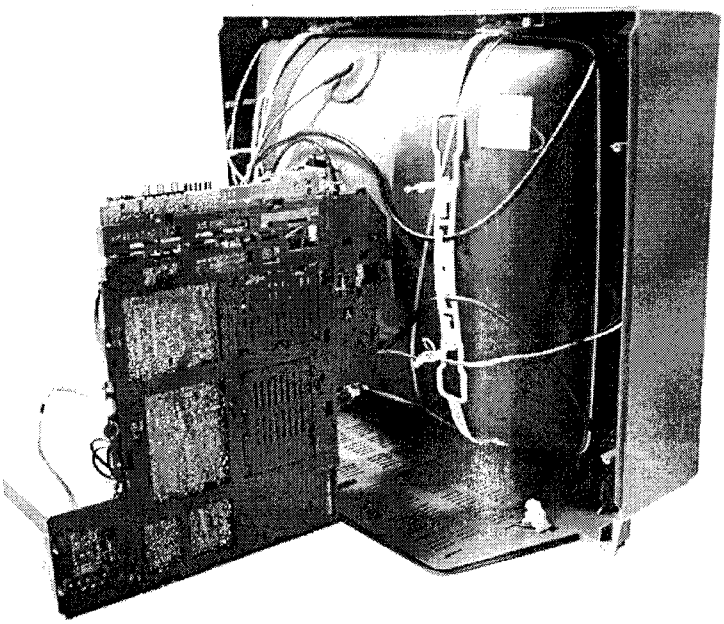

Place the chassis in the position indicated to carry out servicing. To gain access to the high voltage areas of the A Board the bootom plates need to be removed (see page 15).

2-6. Picture Tube Removal

WARNING:
BEFORE REMOVING
THE ANODE CAP

High voltage remains in the CRT even after the power is disconnected. To avoid electric shock, discharge CRT ***before*** attempting to remove the anode cap. Short between anode and CRT coated earth ground strap.

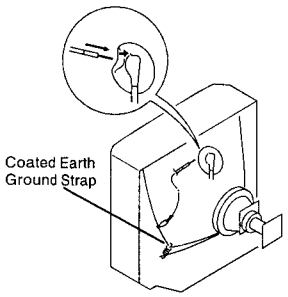

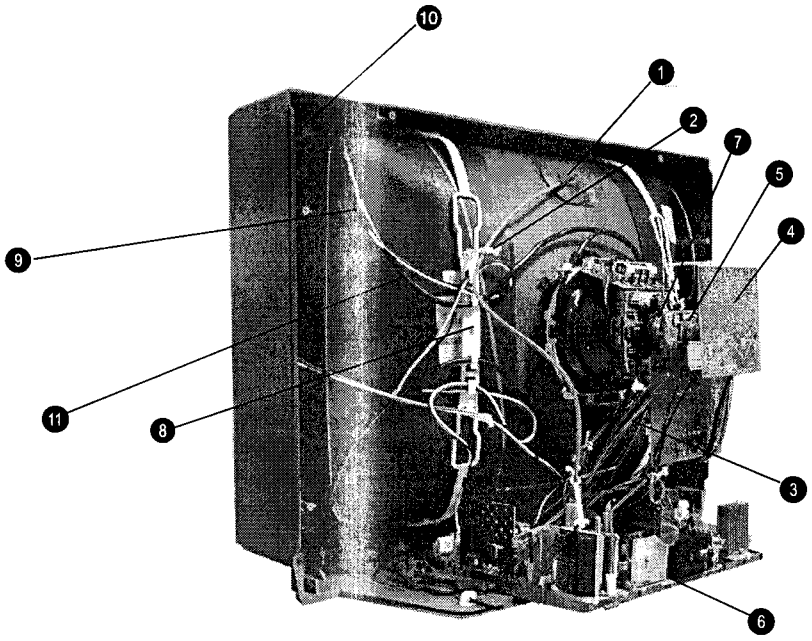

1. Discharge the anode of the CRT and remove the anode cap.
2. Release the EHT lead from its CRT support bracket.
3. Unplug all interconnecting leads from the Deflection yoke, degaussing coils, Rotation coil and CRT grounding strap.
4. Remove the C Board from the CRT.
5. Loosen the VM Block fixing screw and remove.
6. Remove the chassis assembly.
7. Loosen the Deflection yoke fixing screw and remove.
8. Remove the Degaussing Coil holders.
9. Place the set with the CRT face down on a cushion.
10. Unscrew the four CRT fixing screws [located on each CRT corner] and remove the CRT.
11. Remove the Degaussing Coils.
    Remove the CRT grounding strap and spring tentioners.
    [Take care not to handle the CRT by the neck.]

Removal of the Anode-Cap

*** REMOVING PROCEDURES.**

① Turn up one side of the rubber cap in the direction indicated by the arrow ⓐ

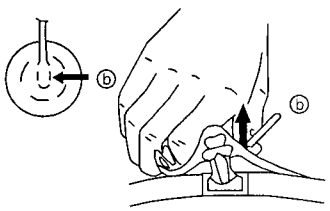

② Using a thumb pull up the rubber cap firmly in the direction indicated by the arrow ⓑ

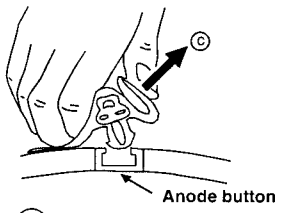

③ When one side of the rubber cap is separated from the anode button, the anode-cap can be removed by turning up the rubber cap and pulling it up in the direction of the arrow ⓒ

How to handle the Anode-Cap

1. To prevent damaging the surface of the anode-cap do not use sharp materials.
2. Do not apply too great a pressure on the rubber, as this may cause damage to the anode connector.
3. A metal fitting called a shatter hook terminal is fitted inside the rubber cap.
4. Do not turn the rubber foot over excessively, this may cause damage if the shatter hook sticks out.

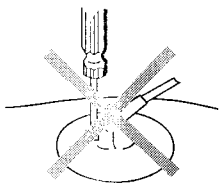

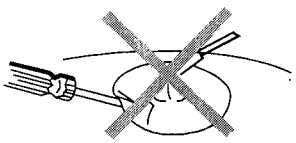

REMOVAL AND REPLACEMENT OF THE MAIN-BRACKET BOTTOM PLATES.

(1) REMOVING THE PLATES

In the event of servicing being required to the solder side of the D Board printed wiring board, the bottom plates fitted to the main chassis bracket require to be removed.
This is performed by cutting the gates with a sharp wire cutter at the locations indicated by the arrows.

Note : There are 3 plates fitted to the main bracket and secured by3 gates.
Only remove the necessary plate to gain access to the printed wiring board.

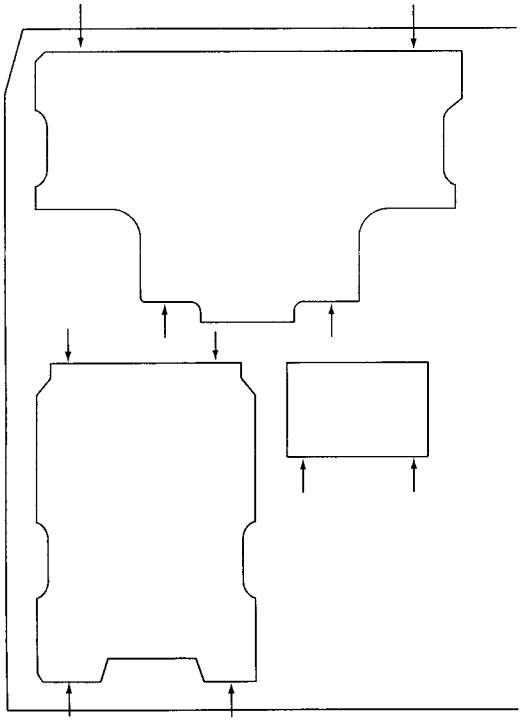

⚠ For safety reasons, on no account should the plates be removed and not refitted after servicing.

(2) REFITTING THE PLATES

Because the plates differ in size it is important that the correct plates are refitted in their original location.

Please note that the plates need to be rotated 180 degrees from their cut position to allow the tabs to be fitted into their catch positions.

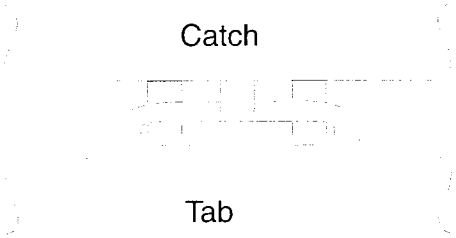

SECTION 3 SET-UP ADJUSTMENTS

- When complete readjustment is necessary or a new picture tube is installed, carry out the following adjustments.
- Unless there are specific instructions to the contrary, carry out these adjustments with the rated power supply.
- Unless there are specific instructions to the contrary, set the controls and switches to the following settings :

Contrast ..... 80% [or remote control normal]

Brightness 50%

Carry out the adjustments in the following order :

3-1. Beam Landing.
3-2. Convergence.
3-3. Focus.
3-4. White Balance.

Note : Test equipment required.
1. Color bar/pattern generator.
2. Degausser.
3. Oscilloscope.
4. Digital multimeter.

Preparation:

1. In order to reduce the influence of geomagnetism on the set's picture tube, face it in an easterly or westerly direction.
2. Switch on the set's power and degauss with the degausser.

3-1. Beam Landing

1. Input an all white signal from the pattern generator. Set the Contrast and Brightness to normal.
2. Set the pattern generator raster signal to Red.
3. Move the deflection yoke forward and adjust with the purity control so that the Red is at the centre and the Blue and Green take up equally sized areas on each side of the screen. [See Fig.3-1 - 3-3].
4. Move the deflection yoke backwards and adjust so that the entire screen becomes Red. [See Fig.3-1]
5. Switch the raster signal to Blue, then to Green and verify the condition.
6. When the position of the deflection yoke has been determined, fasten the deflection yoke with the screws.
7. If the beam does not land correctly in all the corners, use a magnet to correct it. [See Fig.3-4]

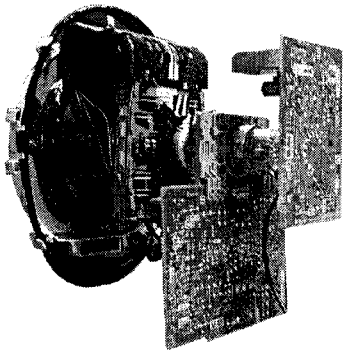

Fig. 3-1.

Caution :

High voltages are present on the Deflection yoke terminals - take care when handling the Deflection yoke whilst carrying out adjustments.

Fig. 3-2.

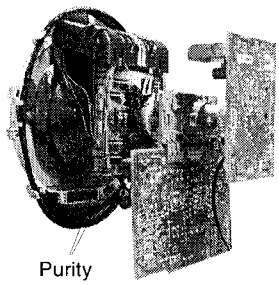

Fig. 3-3.

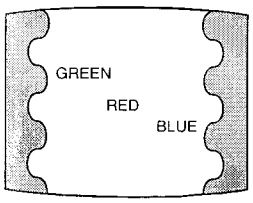

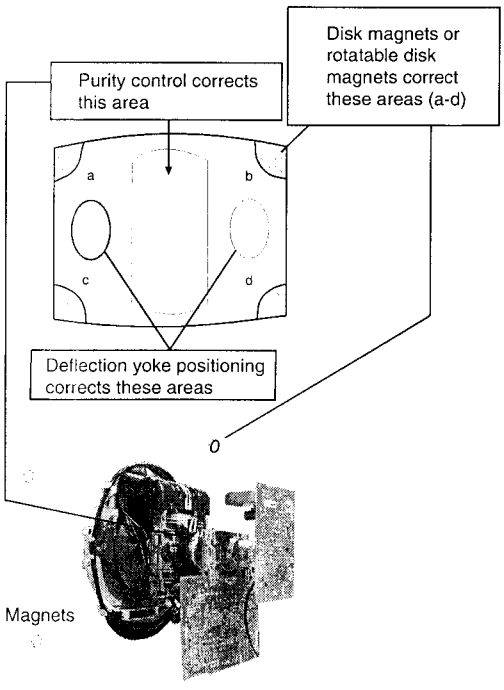

Fig.3-4

3-2. Convergence

Preparation:

- Before starting this adjustment, adjust the focus, horizontal size and vertical size.
- Minimize the Brightness setting.
- Input a dot pattern from the pattern generator.

Horizontal and Vertical Static Convergence

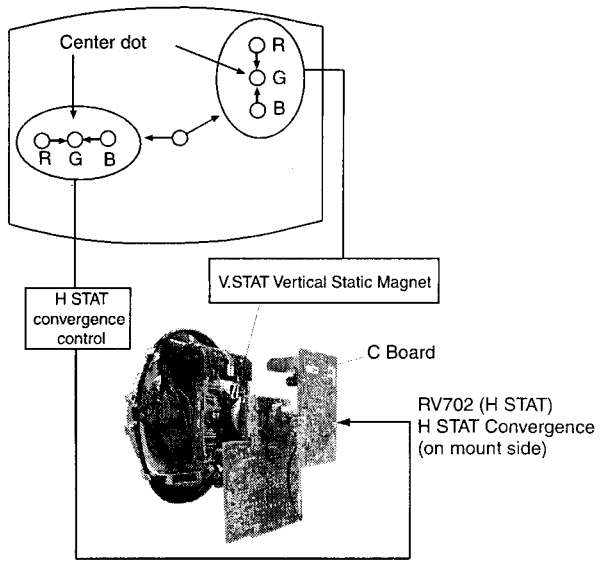

Fig.3-5

1. [Moving horizontally], adjust the H.STAT control so that the Red, Green and Blue points are on top of each other at the centre of the screen.
2. [Moving vertically], adjust the V.STAT magnet so that the Red, Green and Blue points are on top of each other at the centre of the screen.
3. If the H.STAT variable resistor is unable to bring the Red, Green and Blue points together at the centre of the screen, adjust the horizontal convergence with the H.STAT variable resistor and the V.STAT magnet in the manner indicated below.
   [In this case, the H.STAT variable resistor and the V.STAT magnet influence each other].

   - Tilt the V.STAT magnet and adjust the static convergence by opening or closing the V.STAT magnet.

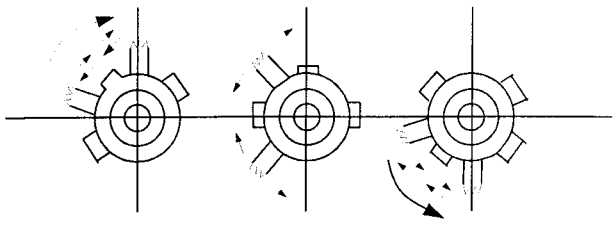

4. If the V.STAT magnet is moved in the direction of the (a) and (b) arrows, the Red, Green and Blue points move as indicated below.

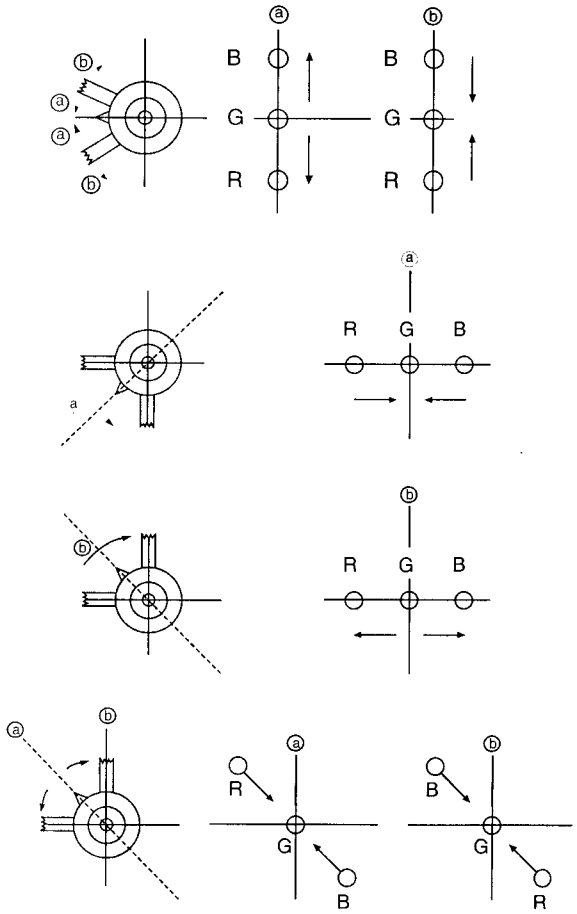

Operation of the BMC (Hexapole) magnet.

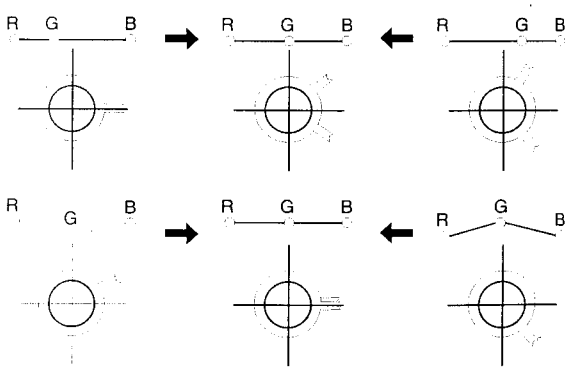

The movement of the magnets interact with each other and so the respective dot position should be monitored while carrying out this adjustment.
Use the H.STAT VR to adjust the Red, Green and Blue dots so that they coincide at the centre of the screen
(by moving the dots in the horizontal direction).

Geometry Adjustment.

Preparation:

Before starting this adjustment, adjust the horizontal and vertical static convergence.

1. Remove the deflection yoke spacer.
2. Tilt the deflection yoke as indicated in the figure below and optimise the geometry.
   Tilting the DY Up and Down will balance the upper and lower pin adjustment.
   Tilting the DY Left and Right will balance the H-Trap adjustment.
3. Re-install the deflection yoke spacer.

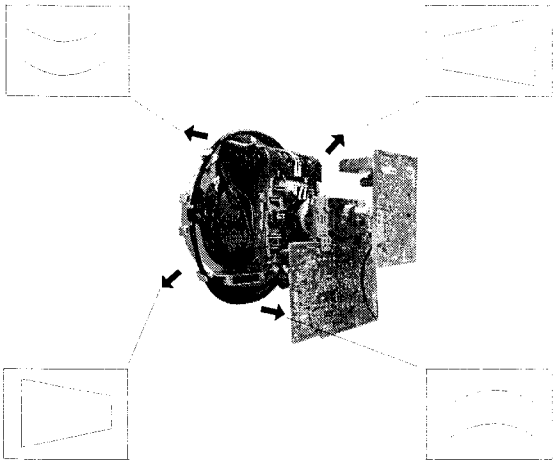

➡ Tilt Direction

HTIL Adjustment

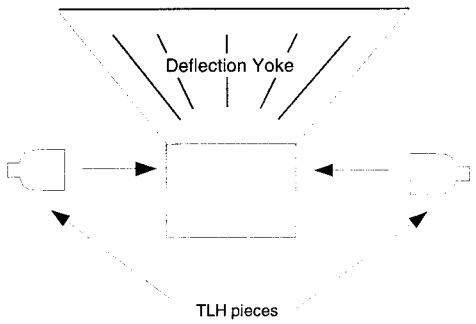

HTIL correction can be performed by adding a TLH correction assembly to the Deflection yoke.

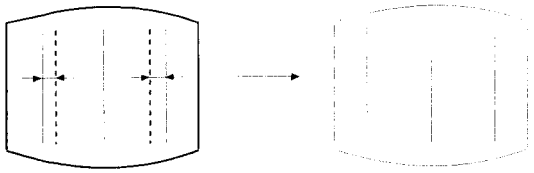

YCH Adjustment



TLV Adjustment



Screen Corner Convergence

If you are unable to adjust the corner convergence properly, this can be corrected with the use of permalloy magnets.

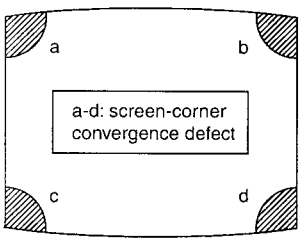

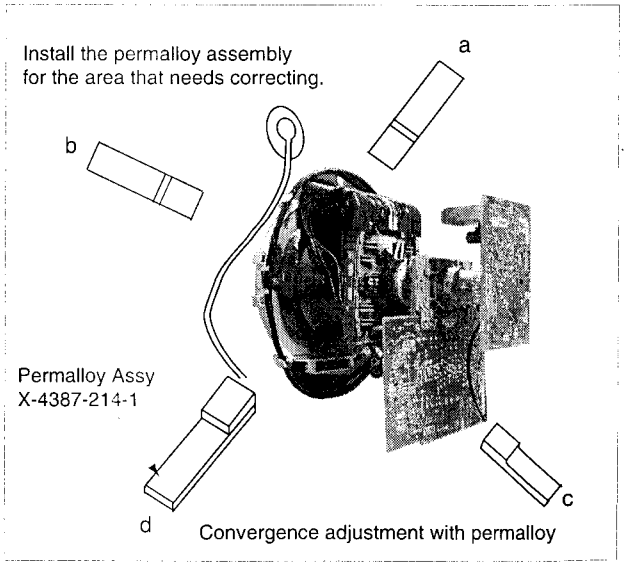

Convergence adjustment with permalloy

Layout of each control

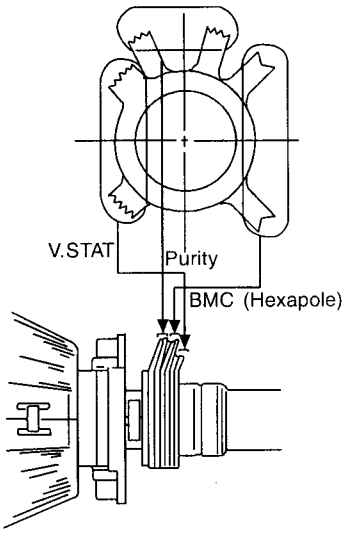

3-3. Focus Adjustment

1. Receive a television broadcast signal.
2. Normalize the picture setting.
3. Adjust the focus control located on the flyback transformer to obtain the best focus at the centre of the screen.
   Bring only the centre area of the screen into focus, the magenta-ring appears on the screen. In this case, adjust the focus to optimize the screen uniformly.

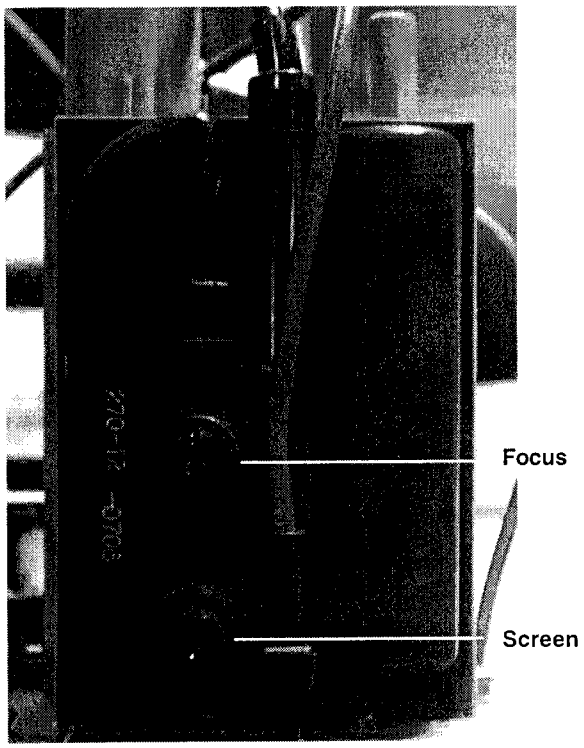

3-4. Screen (G2), White Balance

[Adjustment in the service mode using the remote commander]

G2 adjustment

1. Input a dot signal from the pattern generator.
2. Enter the 'Service Mode' by pressing 'TEST', 'TEST' and '38' (TT-38) on the remote commander, to set up the G2 service adjustment mode.
3. Whilst watching the picture, adjust the G2 control [SCREEN] located on the Flyback Transformer to the point where the OSD menu indication shows "OK".

White balance adjustment for TV mode

1. Input an all-white signal from the pattern generator.
2. Enter into the 'Service Mode' by pressing 'TEST', 'TEST' and 'MENU' on the Service Commander.
3. Select 'Service' from the on screen menu display and press the right arrow button on the remote commander.
4. The 'Service' menu will appear on the screen.
   [See Page 19]
5. Set the 'Contrast' to MAX.
6. Set the 'R-Drive' to 25.
7. Adjust the 'G-Drive' and the 'B-Drive' so that the white balance becomes optimum.
8. Press the 'OK' button to write the data for each item.
9. Set the 'Contrast' to MIN.
10. Adjust the 'G-Cutoff', and the 'R-Cutoff' with the left and right buttons on the remote commander so that the white balance becomes optimum.
11. Press the 'OK' button to write the data for each item.

SECTION 4 CIRCUIT ADJUSTMENTS

4-1. Electrical Adjustments

Service adjustments to this model can be performed using the suppliedemote Commander RM-887.

How to enter into the Service Mode

1. Turn on the main power switch and enter into the stand-by mode.
2. Press the following sequence of buttons on the Remote Commander.

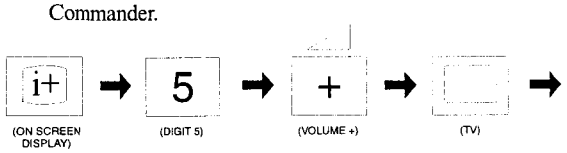

'TT—' will appear in the upper right corner of the screen. Other status information will also be displayed.

3. Press 'MENU' on the remote commander to obtain the following menu on the screen.

```
Geometry
Service
Design
Status
Sound
IF adjust
Error Menu

FE-2 Stereo v1.30
Factory data   FFh   FFh
MSP Device : MSP3411G
```

4. Move to the corresponding adjustment item using the up or down arrow buttons on the Remote Commander.
5. Press the right arrow button to enter into the required menu item.
6. Press the 'Menu' button on the Remote Commander to quit the Service Mode when all adjustments have been completed.

Note :

- Before performing any adjustments ensure that the correct model has been selected in the 'Model Setting' menu.
- After carrying out the service adjustments, to prevent the customer accessing the 'Service Menu' switch the TV set OFF and then ON.

ERROR MENU

E02	OCP	(0, 255)	0
E03	OVP N/A	(0, 255)	0
E04	VSYNC	(0, 255)	0
E05	IKR	(0, 255)	0
E06	IIC	(0, 255)	0
E07	NVM	(0, 255)	0
E08	JUNGLE	(0, 255)	0
E09	TUNER	(0, 255)	0
E10	SOUNDP	(0, 255)	0
E11	8V	(0, 255)	0

WORKING TIME

HOURS	2
MINUTES	11

SERVICE

Offset-R	(0, 63)	Adj
Offset-G	(0, 63)	Adj
R-Drive	(0, 63)	25
G-Drive	(0, 63)	Adj
B-Drive	(0, 63)	Adj
Peak-Freq	(0, 3)	0
Luma-Delay	(0, 15)	8
SC0	(0, 3)	2
White-Peak	(0, 15)	15
Subcont	(0, 15)	4
Subright	(0, 63)	31
Subcol	(0, 63)	Adj
Subsharp	(0, 63)	31
Cutoff Br.	(0, 63)	60
Br OSD	(0, 15)	10
Br TXT	(0, 15)	9

GEOMETRY

V-Linearity	(0, 63)	Adj
V-Scroll	(0, 63)	32
Left-HBlk	(0, 15)	8
Right-HBlk	(0, 15)	6
V-Angle	(0, 63)	Adj
V-Bow	(0, 63)	Adj
H-Centre	(0, 63)	Adj
H-Size	(0, 63)	Adj
Pin-Amp	(0, 63)	Adj
U-Corner-Pin	(0, 63)	Adj
L-Corner-Pin	(0, 63)	Adj
Pin Phase	(0, 63)	Adj
V-Slope	(0, 63)	35
V-Size	(0, 63)	Adj
S-Correction	(0, 63)	Adj
V-Centre	(0, 63)	Adj
V-Zoom	(0, 63)	23
Magenta	(0, 63)	40

IF ADJUST

AGC Adjust	(-16, +15)	+0
Automute		1
Audio Gain		0
L Gating		0

Sub Brightness Adjustment

1. Input a Monoscope pattern.
2. Press 'TEST' 'TEST' 13 on the Remote Commander.
3. Adjust the 'Sub-Brightness' data so that there is barely a difference between the 0 IRE and 10 IRE signal levels.

Sub Contrast Adjustment

1. Input a video signal that contains a small 100% white area on a black background.
2. Connect an digital voltmeter to Pin 10 of J701 [C Board].
3. Adjust the Sub-Contrast ['TT11'] to obtain a voltage of 105 +/- 5V (KV-29FX30) or 96 +/-5V (KV-25FX30).

Sub Colour Adjustment

1. Receive a PAL colour bar signal.
2. Connect an oscilloscope to Pin 5 of CN003 [A Board].
3. Enter into the 'Service' service menu.
4. Adjust the 'Sub Colour' data so that the Cyan, Magenta and Blue colour bars are of equal levels as indicated below.

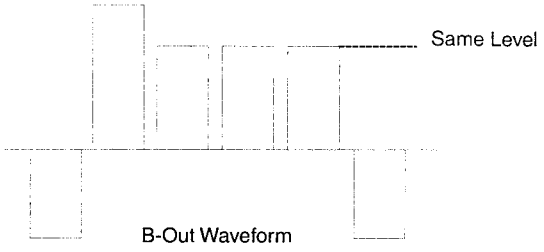

Tuner AGC Adjustment

Note:
There should be no need to adjust the AGC as this is pre-adjusted during manufacture of the FRONTEND. If the AGC does need adjustment then follow steps 1. to 4. below.

1. Receive a signal of 62dBuV / 75 ohm terminated via the tuner antenna socket.
2. Connect a voltmeter to pin1 of TU101 [print side of A Board] or to the AGC pin of CN001 [mount side of A Board].
3. Confirm that the AGC voltage is 3.5volts +/- 0.3volts.
4. If adjustment is required, then re-adjust the AGC variable resistor (located at the top rear of the FRONTEND) to obtain a voltage of 3.5V +/- 0.3V.

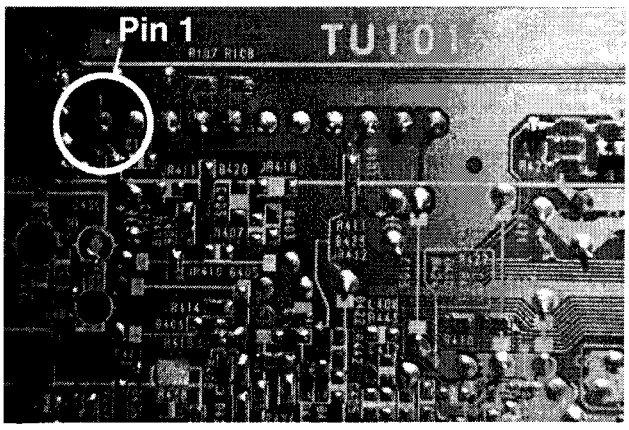

[Print side of A board]

Deflection System Adjustment

1. Enter into the 'Geometry' service menu.
2. Select and adjust each item in order to obtain the optimum image.

GEOMETRY		
V-Linearity	(0, 63)	Adj
V-Scroll	(0, 63)	32
Left-HBlk	(0, 15)	8
Right-HBlk	(0, 15)	6
V-Angle	(0, 63)	Adj
V-Bow	(0, 63)	Adj
H-Centre	(0, 63)	Adj
H-Size	(0, 63)	Adj
Pin-Amp	(0, 63)	Adj
U-Corner-Pin	(0, 63)	Adj
L-Corner-Pin	(0, 63)	Adj
Pin Phase	(0, 63)	Adj
V-Slope	(0, 63)	35
V-Size	(0, 63)	Adj
S-Correction	(0, 63)	Adj
V-Centre	(0, 63)	Adj
V-Zoom	(0, 63)	23
Magenta	(0, 63)	40

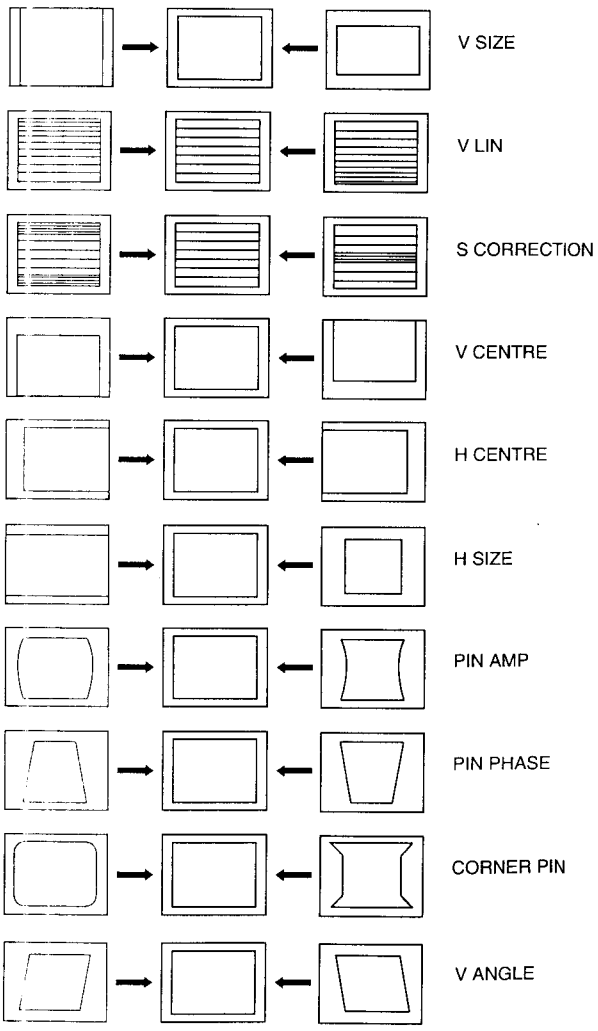

4-2.TEST MODE 1:

Test Mode 1 is available by pressing the 'TEST' button once, OSD 'T' appears. The functions described below are available by selecting the indicated keys. The 'T' is released automatically after each command is executed.

KEY	T-MODE FUNCTION
volume +	volume maximum
volume -	Picture minimum
picture +	Picture maximum
picture -	Picture minimum
colour up	colour maximum
colour down	colour minimum
brightness - bright	brightness maximum
brightness - dark	brightness minimum
hue - purplish	hue - purplish
hue - greenish	hue - greenish
sharpness - sharp	sharpness maximum
sharpness - soft	sharpness minimum
balance left	balance full left
balance right	balance full right
treble up	treble maximum
treble down	treble minimum
bass up	bass maximum
bass down	bass minimum

4-3.TEST MODE 2:

Test Mode 2 is available by pressing the 'TEST' button twice, OSD 'TT' appears. The functions described below are available by selecting the two numbers. To release the 'Test mode 2', press 00, 10, 20 ... twice or switch the TV set into Stand-by mode. In 'TT Menu' mode, it is possible to remove the Menu from the screen by pressing the Speaker Off button once. Pressing the Speaker OFF button a second time will cause the Menu to reappear. The function is kept even when the menu is not displayed on screen !!.

00	'TT' mode off
01	Picture maximum
02	Picture minimum
03	Set speaker/headphone Volume to 35%
04	Set speaker/headphone Volume to 50%
05	Set speaker/headphone Volume to 65%
06	Set speaker/headphone Volume to 80%
07	Ageing mode
08	Shipping Condition
11	Sub picture adjustment
12	Sub colour adjustment
13	Sub Brightness adjustment
14	Text H Position adjustment
15	Rotation Coil Test
16	Picture level 50%
19	Factory Mode Enable/Disable
21	Destination ADEKR
22	Destination BL
23	Destination ADEKR
24	Destination U
25	Destination ADEKR
26	Destination BL
27	Destination ADEKR
28	Destination ADEKR
31	Auto Shutoff Enable/Disable
33	Rotation ON/OFF
35	CRT 4:3 <> 16:9 ; Display TV status
36	Velocity Modulation (VM) OFF/ON test
38	G2 adjustment
41	Re-initialise NVM
43	Select Dual A sound
44	Select Dual B sound
45	Select Mono sound
46	Select Stereo sound
48	Set NVM as non virgin
49	Set NVM as virgin
51	Virtual Dolby on/off
52	Subwoofer / MPB (Bass enhancement) Enable
54	Dot structure C/M (chroma trap)ination ADEKR
55	Tuner selection (SONY/ALPS)
56	BBE enable/disable
57	BBE menu line enable/disable
61	Auto AGC Adjustment
62	AM from baseband enable/disable
63	Enable/Disable YC3 connector
64	Enable/Disable RGB priority
65	RGB auto-detect enable/disable
66	On timer enable/disable
67	Manual AGC Adjustment
68	Enable/Disable X26 countermeasure (N problem)
69	Enable/Disable ACI feature
71	Force PAL video
72	Un-force PAL (restore normal video condition)
73	Enable Zweiton D/K2 system (6.5/6.74)
74	Enable Zweiton D/K3 system (6.5/5.74)
78	Balance full left
79	Balance full right
87	Local keys test
89	Enable/Disable watchdog
91	Set 14:9 zoom mode
92	Set SMART zoom mode
93	Set 16:9 zoom mode
94	Set ZOOM mode
95	Set 4:3 zoom mode
99	Display Error and Working Time menu

5-1. BLOCK DIAGRAMS (1)

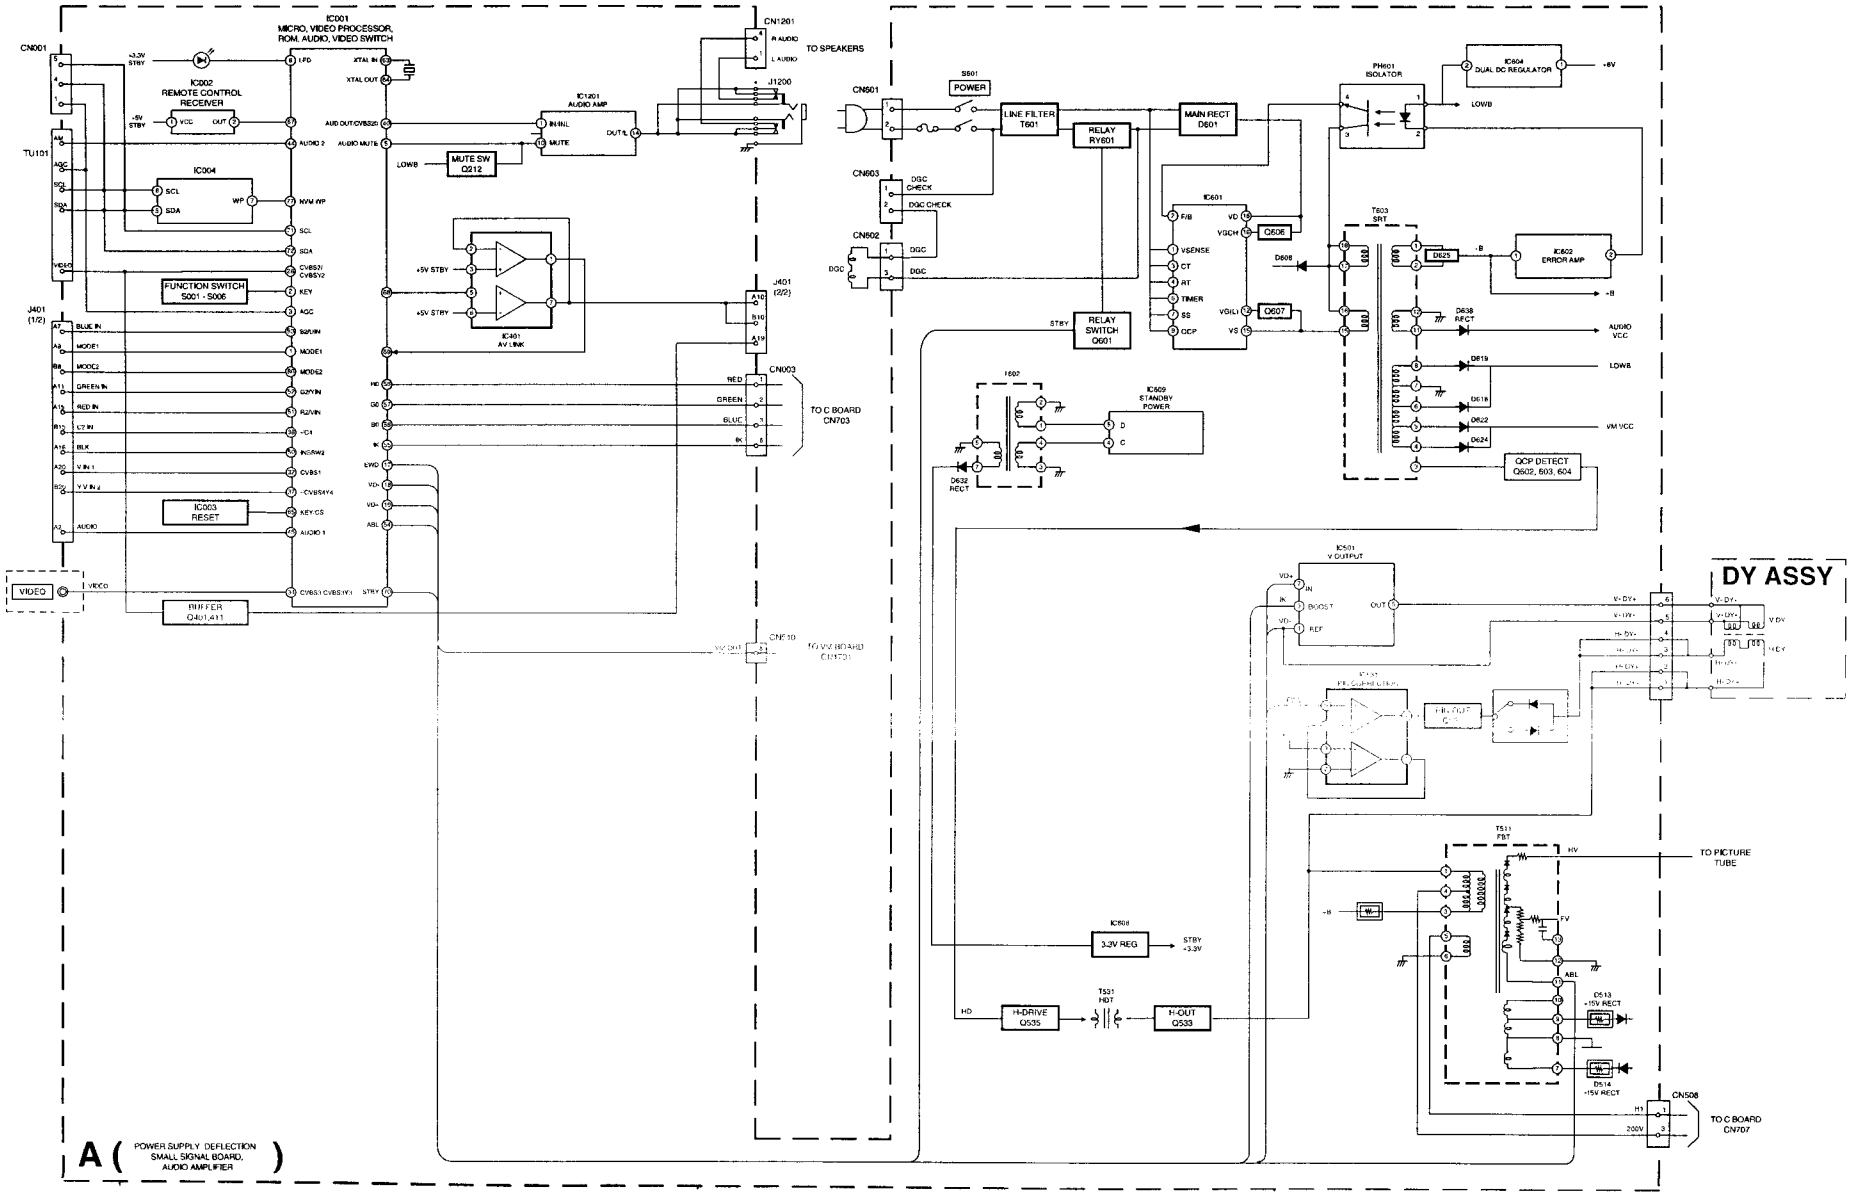

5-1. BLOCK DIAGRAMS (2)

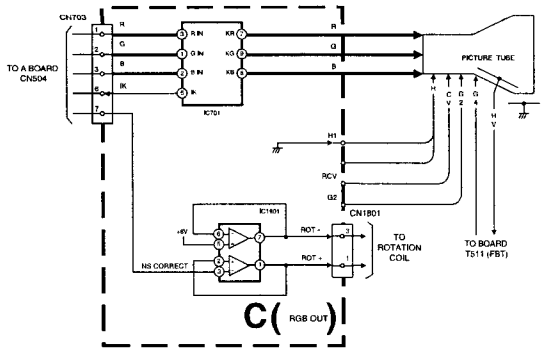

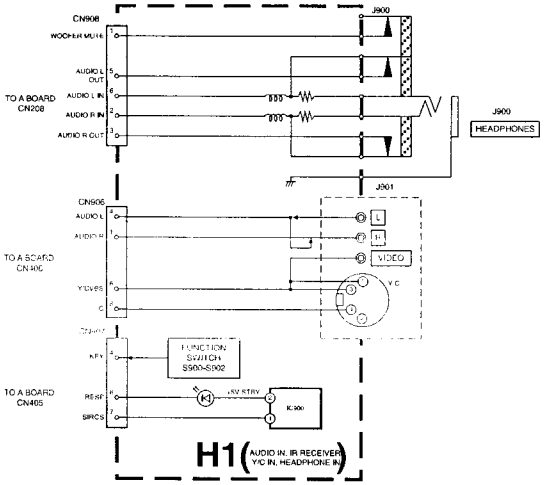

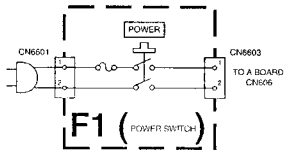

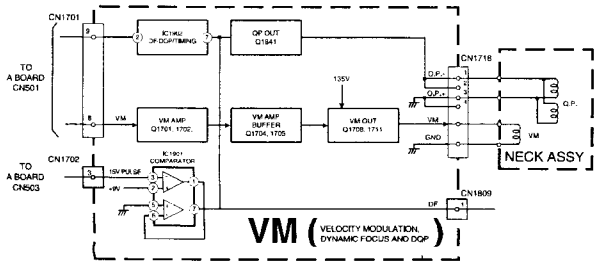

5-2. CIRCUIT BOARD LOCATION

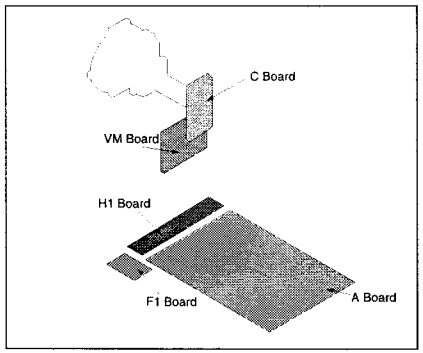

5-3. SCHEMATIC DIAGRAMS AND PRINTED WIRING BOARDS

Note :

- All capacitors are in µF unless otherwise noted.
- pF : µµF 50WV or less are not indicated except for electrolytic types.
- Indication of resistance, which does not have one for rating electrical power, is as follows.

Pitch : 5mm Electrical power rating : 1/4W

- Chip resistors are 1/10W
- All resistors are in ohms.
  k = 1000 ohms, M = 1000,000 ohms
- : nonflammable resistor.
- : fusible resistor.
- : internal component.
- All variable and adjustable resistors have characteristic curve B, unless otherwise noted.
- All voltages are in Volts.
- Readings are taken with a 10Mohm digital mutimeter.
- Readings are taken with a color bar input signal.
- Voltage variations may be noted due to normal production tolerences.
- : B - bus.
- : RF signal path.
- : earth - ground.
- : earth - chassis.

Reference Information

RESISTOR	RN	: METAL FILM
	RC	: SOLID
	FPRD	: NON FLAMMABLE CARBON
	FUSE	: NON FLAMMABLE FUSIBLE
	RS	: NON FLAMMABLE METAL OXIDE
	RB	: NON FLAMMABLE CEMENT
	RW	: NON FLAMMABLE WIREWOUND
		: ADJUSTMENT RESISTOR
COIL	LF-8L	: MICRO INDUCTOR
CAPACITOR	TA	: TANTALUM
	PS	: STYROL
	PP	: POLYPROPYLENE
	PT	: MYLAR
	MPS	: METALIZED POLYESTER
	MPP	: METALIZED POLYPROPYLENE
	ALB	: BIPOLAR
	ALT	: HIGH TEMPERATURE
	ALR	: HIGH RIPPLE

Note : The components identified by shading and marked ⚠ are critical for safety. Replace only with the part numbers specified in the parts list.

Note : Les composants identifiés par une trame et par une marque ⚠ sont d'une importance critique pour la sécurité. Ne les remplacer que par des pièces de numéro spécifié.

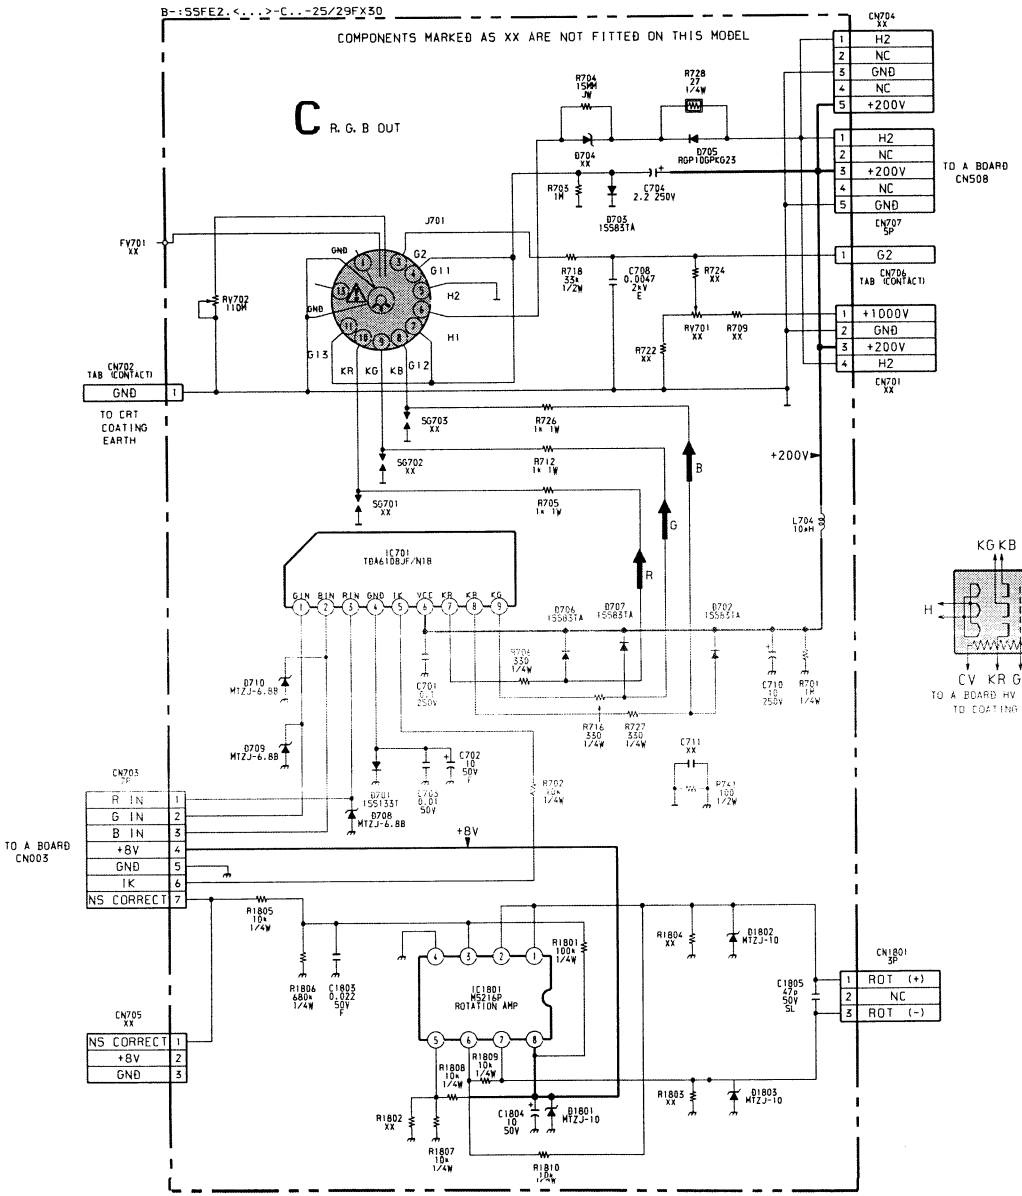

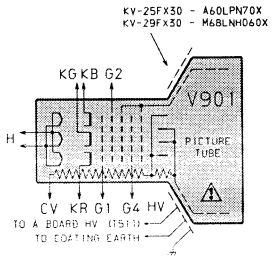

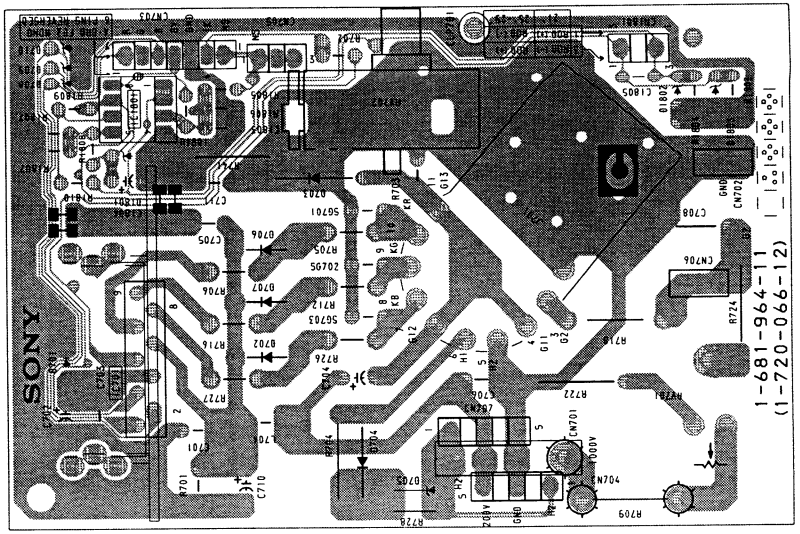

C Board Waveforms

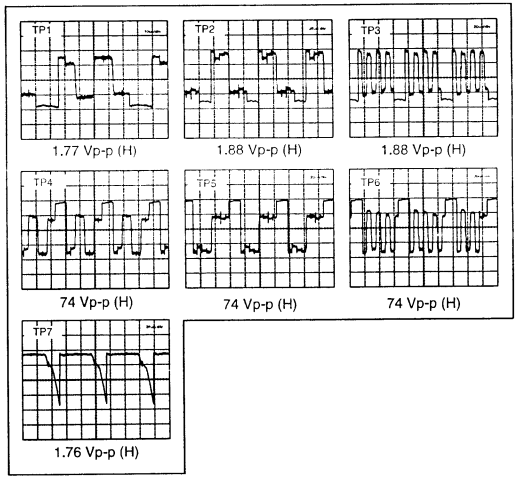

IC Voltage Table

Ref No	Pin No	Voltage (V)	Ref No	Pin No	Voltage (V)
IC1701	1	3.1	IC1801	1	1.3
	2	2.1		2	1.3
	3	3.0		3	1.4
	5	5.5		5	4.1
	7	131		6	4.1
	8	123		7	7.0
	9	124.6		8	8.0

C [R,G,B OUT]

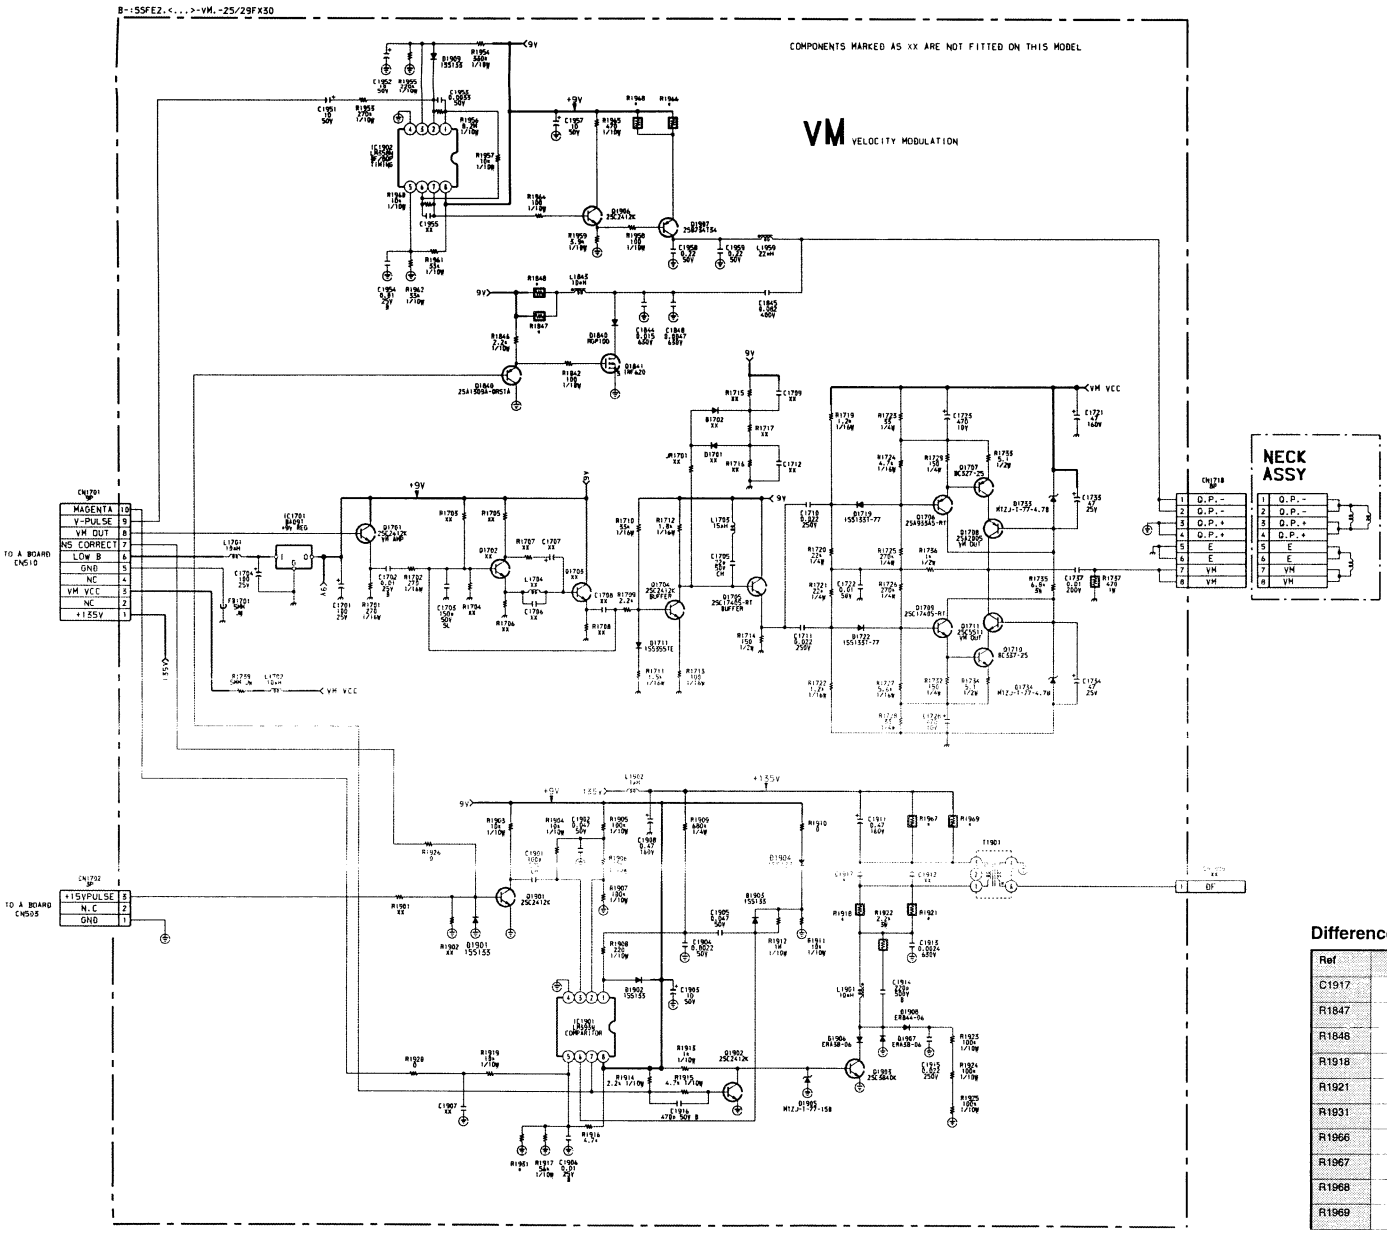

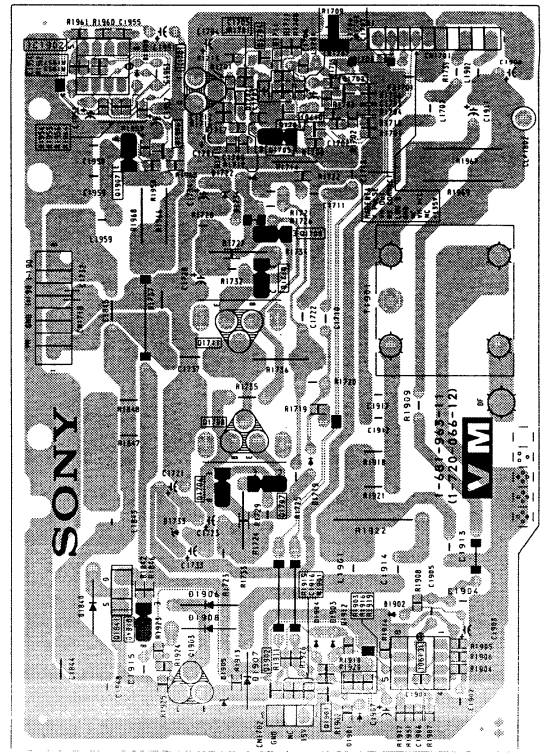

Difference Table

Ref	25FX30B	25FX30E	25FX30K	29FX30B	29FX30E	29FX30K
C1917	-	-	-	470pF	470pF	470pF
R1847	82	82	82	180	180	180
R1848	68	68	68	100	100	100
R1918	5.6K	5.6K	5.6K	6.8K	6.8K	6.8K
R1921	5.6K	5.6K	5.6K	6.8K	6.8K	6.8K
R1931	39K	39K	39K	47K	47K	47K
R1966	150	150	150	100	100	100
R1967	1K	1K	1K	6.8K	6.8K	6.8K
R1968	150	150	150	100	100	100
R1969	1K	1K	1K	5.6K	5.6K	5.6K

VM [VELOCITY MODULATION]

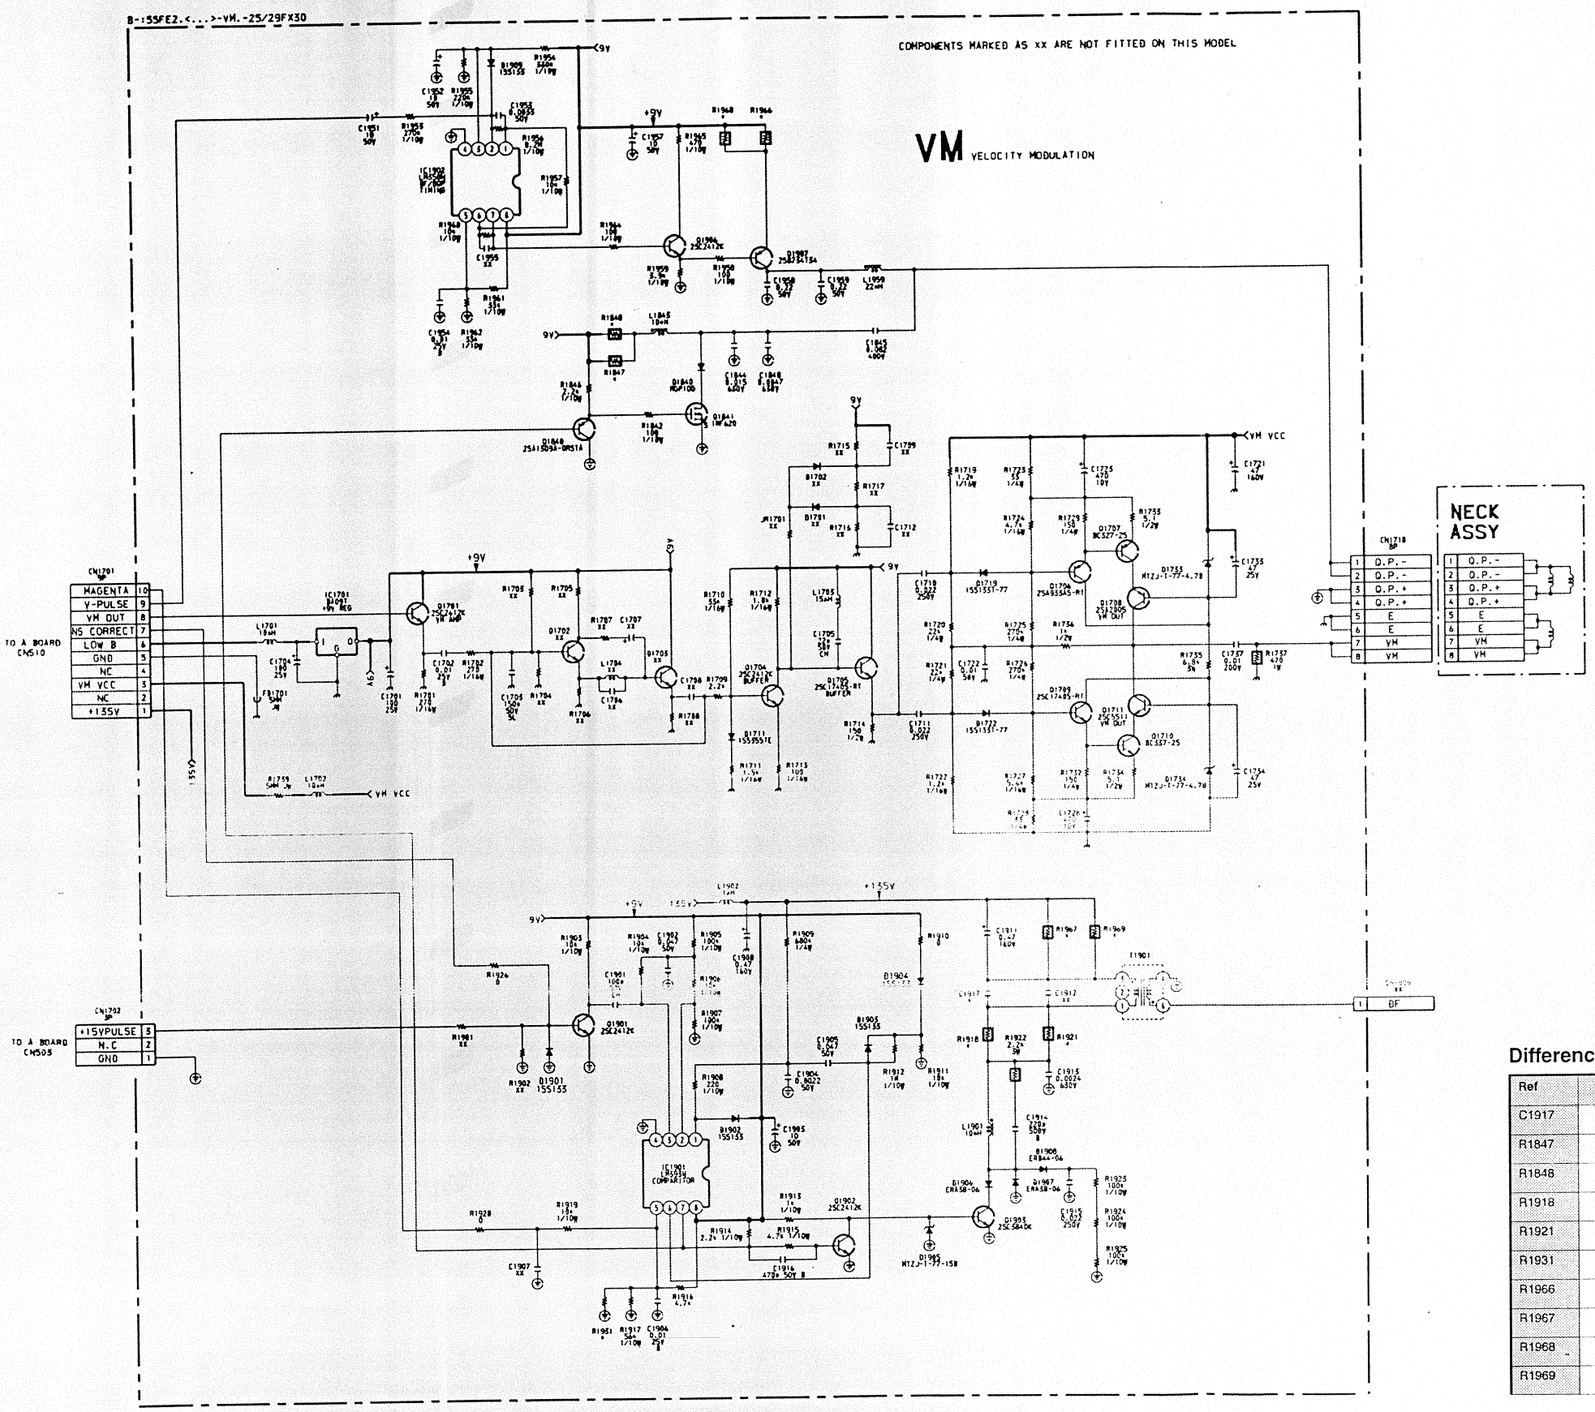

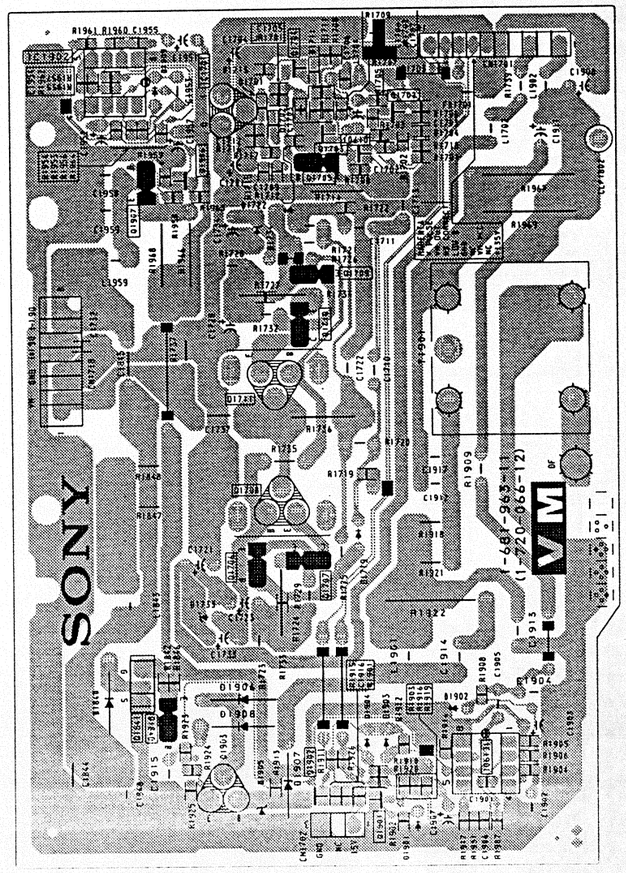

Difference Table

Ref	25FX30B	25FX30E	25FX30K	29FX30B	29FX30E	29FX30K
C1917	-	-	-	470pF	470pF	470pF
R1847	82	82	82	180	180	180
R1848	68	68	68	100	100	100
R1918	5.6K	5.6K	5.6K	6.8K	6.8K	6.8K
R1921	5.6K	5.6K	5.6K	6.8K	6.8K	6.8K
R1931	39K	39K	39K	47K	47K	47K
R1966	150	150	150	100	100	100
R1967	1K	1K	1K	6.8K	6.8K	6.8K
R1968	150	150	150	100	100	100
R1969	1K	1K	1K	5.6K	5.6K	5.6K

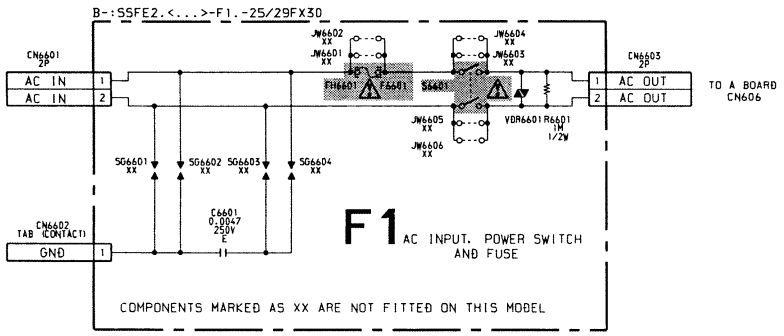

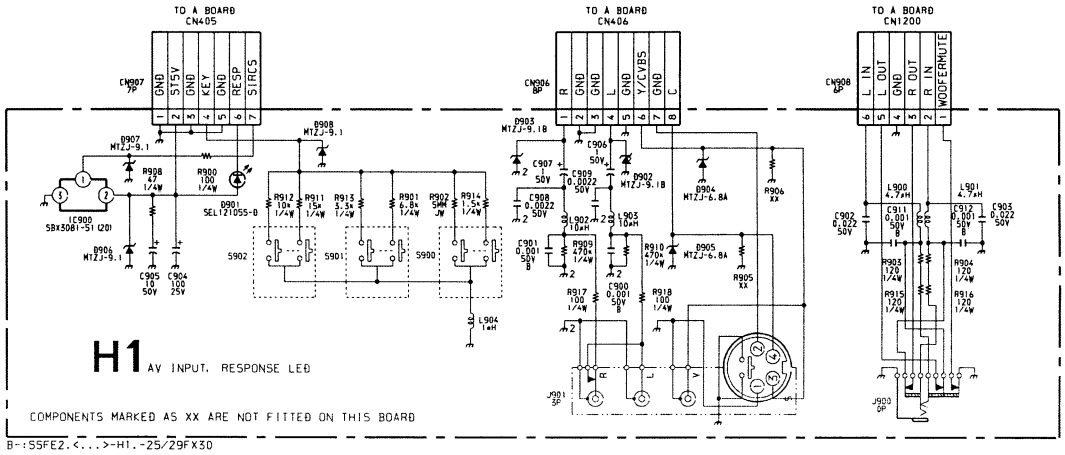

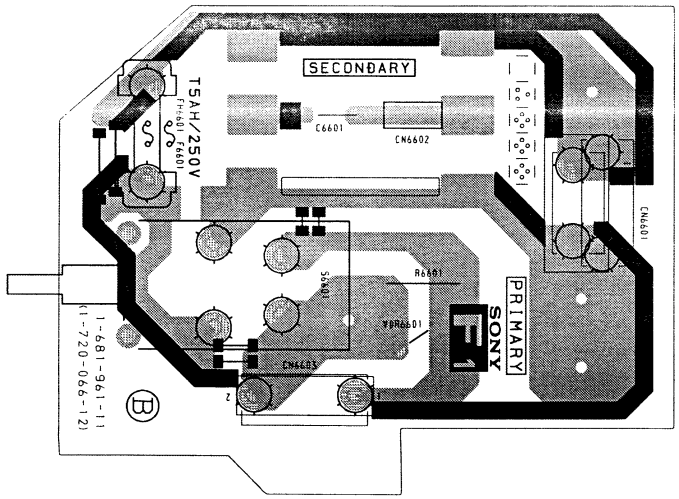

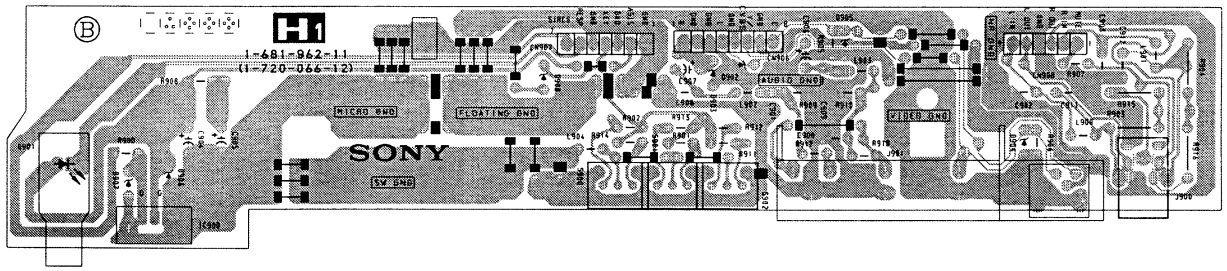

F1 [AC FILTER, FUSE, SIRCS]

H2 [AV3 INPUT]

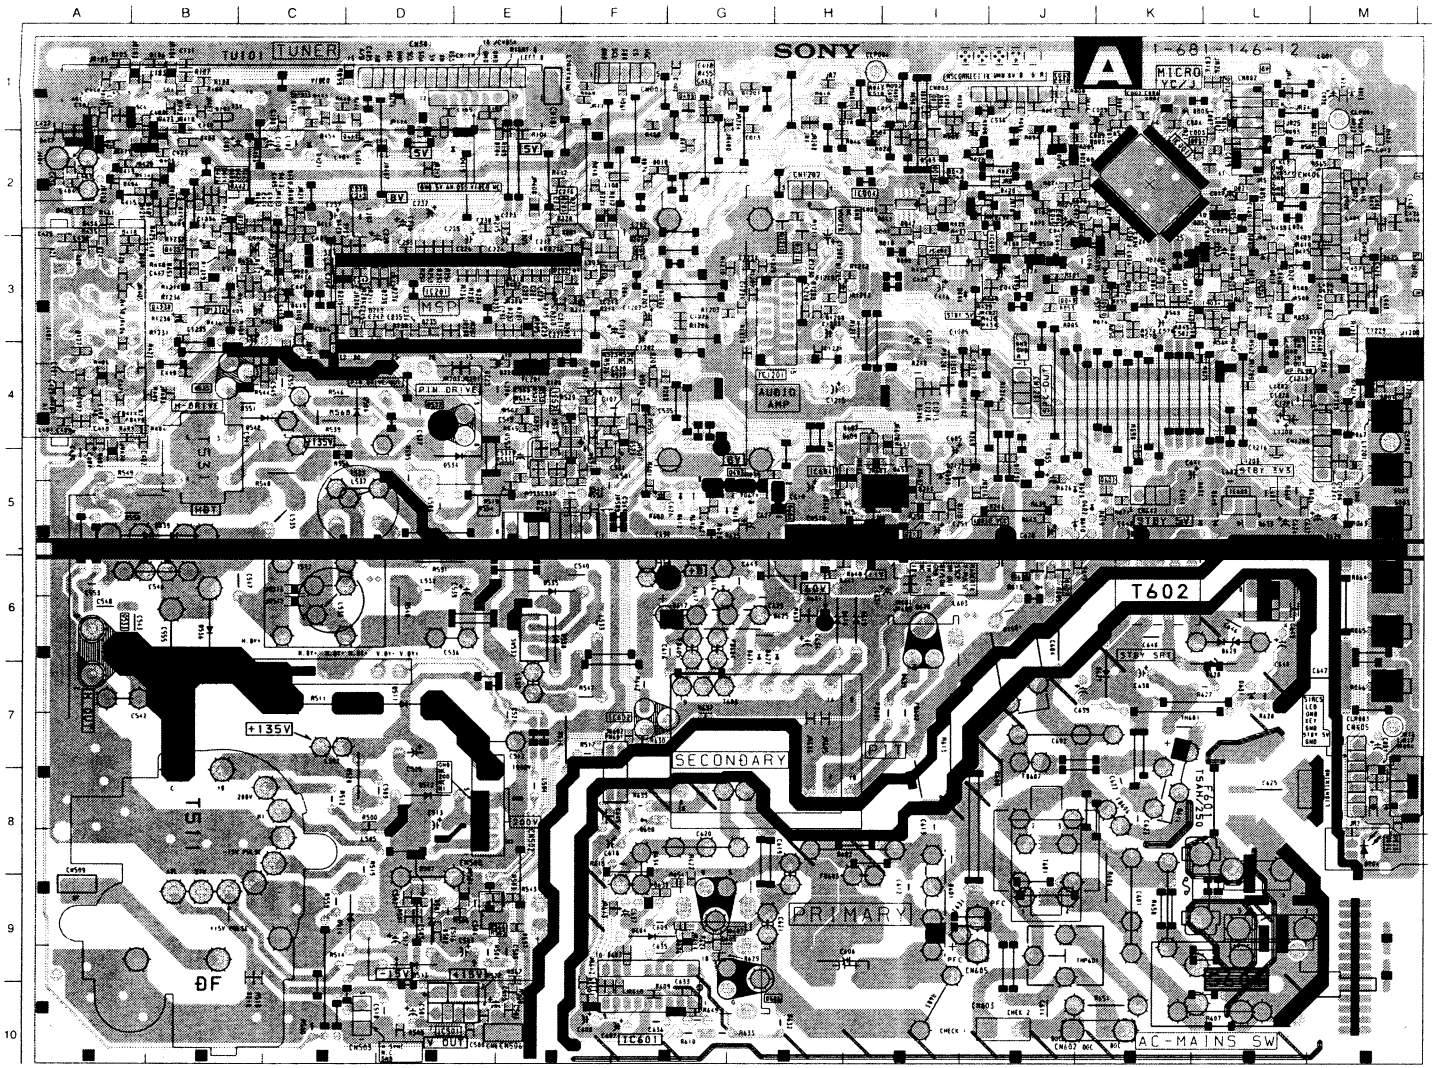

IC Voltage Table

Ref No	Pin No	Volts (V)	Ref No	Pin No	Volts (V)	Ref No	Pin No	Volts (V)
	1	0		50	0.2	IC501	6	13.9
	2	3.2		51	2.5		7	0.3
	3	2.9		52	2.5		1	1.4
	5	0		53	2.5		2	2.3
	6	2.0		54	2.1	IC531	3	1.8
	8	2.3		55	5.2		5	2.4
	9	8.0		56	3.0		6	1.6
	10	5.0		57	3.1		7	6.4
	12	0		58	3.1		1	-80.4
	13	0		59	3.2		2	-80.5
	14	4.0		62	0		3	-80.2
	16	1.4		63	0		4	-80.2
	17	1.5		64	0		5	-81.5
	18	0		65	0		6	-81.6
	19	0	IC001	67	4.8		7	-77.8
	20	3.8		68	0.4	IC601	9	-81.8
IC001	21	3.8		69	0		10	-76
	22	5.0		70	0		11	-81.9
	26	0		71	0		12	-79.4
	28	3.5		72	0		14	16.5
	29	3.6		73	7.1		15	11
	30	1.9		74	5.0		16	14.4
	31	0.3		75	8.1		18	86.4
	32	3.6		76	-3.5		1	11
	34	1.9		77	0		3	4.9
	35	1.4		78	3.2		5	0
	36	3.9		79	3.2		6	0
	38	1.8		80	0	IC1201	7	11.3
	40	3.3		1	1.4		9	0.3
	42	3.3	IC501	2	2.3		10	0
	43	1.4		3	1.8		12	0
	45	0		5	2.4		14	11.35

Semiconductor Voltage Table

Ref	(e)	(b)	(c)
Q013	0	0.7	0
Q016	0	0	3.3
Q212	0	0.7	0
Q401	4.8	4.2	1.8
Q411	1.1	1.7	4.2
Q601	5.6	4.8	5.3
Q602	14.2	5.1	8
Q603	8	8	0
Q604	0	0	2.5
Q608	0	0	5.6
Q609	5.6	5.6	0
Ref	**(s)**	**(g)**	**(d)**
Q606	10.9	14.5	86.7
Q607	-82.4	-79.9	10.9
Q535	0	2.5	95.2

Difference Table

Ref	25FX30B	25FX30E	25FX30K	29FX30B	29FX30E	29FX30K
C530	-	-	-	0.01UF	0.01UF	0.01UF
C532	0.0047UF	0.0047UF	0.0047UF	0.022UF	0.022UF	0.022UF
C536	0.75UF	0.75UF	0.75UF	0.82UF	0.82UF	0.82UF
C537	0.0047UF	0.0047UF	0.0047UF	0.0022UF	0.0022UF	0.0022UF
C546	0.056UF	0.056UF	0.056UF	0.051UF	0.051UF	0.051UF
C547	0.75UF	0.75UF	0.75UF	0.82UF	0.82UF	0.82UF
C1232	-	-	-	0.1UF	0.1UF	0.1UF
D505	ISS355TE-17	ISS355TE-17	ISS355TE-17	MMDL914T1	MMDL914T1	MMDL914T1
R517	24K	24K	24K	12K	12K	12K
R521	470K	470K	470K	180K	180K	180K
R525	2.2K	2.2K	2.2K	470	470	470
R532	10K	10K	10K	2.7K	2.7K	2.7K
R534	330K	330K	330K	390K	390K	390K
R535	330K	330K	330K	68K	68K	68K
R541	-	-	-	330K	330K	330K
R546	470	470	470	560	560	560
R548	4.7	4.7	4.7	3.3	3.3	3.3
R562	100K	100K	100K	120K	120K	120K
R563	-	-	-	100K	100K	100K
R595	1.2	1.2	1.2	0.47	0.47	0.47
R600	270	270	270	330	330	330
T533	1-435-347-11	1-435-347-11	1-435-347-11	1-433-906-11	1-433-906-11	1-433-906-11
TU101	BTF-EF411	BTF-EC411	BTF-EC411	BTF-EF411	BTF-EC411	BTF-EC411

NOTE:
Portions of the circuit marked as shown are high voltage areas. Use care to prevent electric shock during inspection or repair.

A [PRINTED WIRING BOARD]

Semiconductor Location Table

DIODE		D013	M - 1	D103	E - 1	D236	D - 3	D411	C - 3	D424	M - 2	D505	M - 2	D538	E - 6	D612	G - 5	D625	H - 6	TRANSISTOR		Q532	D - 4	Q609	J - 6	IC004	H - 2
D001	I - 2	D016	J - 2	D104	E - 2	D239	D - 3	D412	D - 3	D427	A - 4	D506	D - 4	D539	B - 5	D613	J - 6	D627	K - 7	Q013	I - 3	Q533	A - 6	Q1210	H - 3	IC401	I - 3
D002	I - 3	D018	I - 3	D105	A - 1	D402	E - 3	D413	C - 3	D428	C - 3	D507	M - 2	D541	F - 5	D614	K - 8	D628	L - 7	Q014	L - 1	Q535	B - 4	Q1211	H - 3	IC501	E - 10
D003	K - 2	D020	M - 8	D106	B - 1	D403	B - 2	D414	B - 2	D429	D - 3	D512	D - 8	D573	F - 5	D615	H - 5	D629	L - 7	Q049	J - 3	Q601	K - 5	Q1230	B - 3	IC531	F - 4
D004	M - 4	D021	L - 2	D107	B - 2	D404	I - 3	D418	B - 3	D435	A - 2	D513	D - 9	D601	I - 9	D618	H - 6	D631	L - 7	Q202	E - 3	Q602	G - 5	Q1231	B - 3	IC601	F - 10
D006	M - 8	D022	J - 2	D207	F - 3	D405	B - 2	D419	E - 2	D436	A - 2	D514	C - 9	D602	J - 5	D619	H - 6	D632	K - 5	Q203	F - 2	Q603	G - 5	Q1232	B - 3	IC602	F - 7
D007	K - 1	D035	K - 3	D210	I - 5	D406	B - 2	D420	B - 2	D501	D - 9	D534	E - 5	D604	F - 9	D620	M - 5	D633	L - 5	Q212	I - 5	Q604	H - 5	Q1233	C - 2	IC604	H - 5
D008	L - 3	D036	K - 3	D211	I - 5	D407	B - 2	D421	C - 2	D502	D - 9	D535	E - 6	D608	F - 8	D621	J - 5	D638	I - 6	Q401	C - 1	Q606	G - 10	IC'S		IC608	L - 5
D010	G- 2	D051	L - 3	D212	I - 5	D408	B - 2	D422	C - 2	D503	I - 2	D536	B - 6	D610	J - 5	D622	H - 7	D640	L - 5	Q409	G - 1	Q607	G - 9	IC001	K - 2	IC609	L - 6
D011	F - 2	D101	B - 1	D228	E - 4	D410	C - 2	D423	C - 2	D504	I - 2	D537	C - 4	D611	G - 5	D623	J - 5			Q411	D - 2	Q608	J - 6	IC002	M - 8	IC1201	H - 4

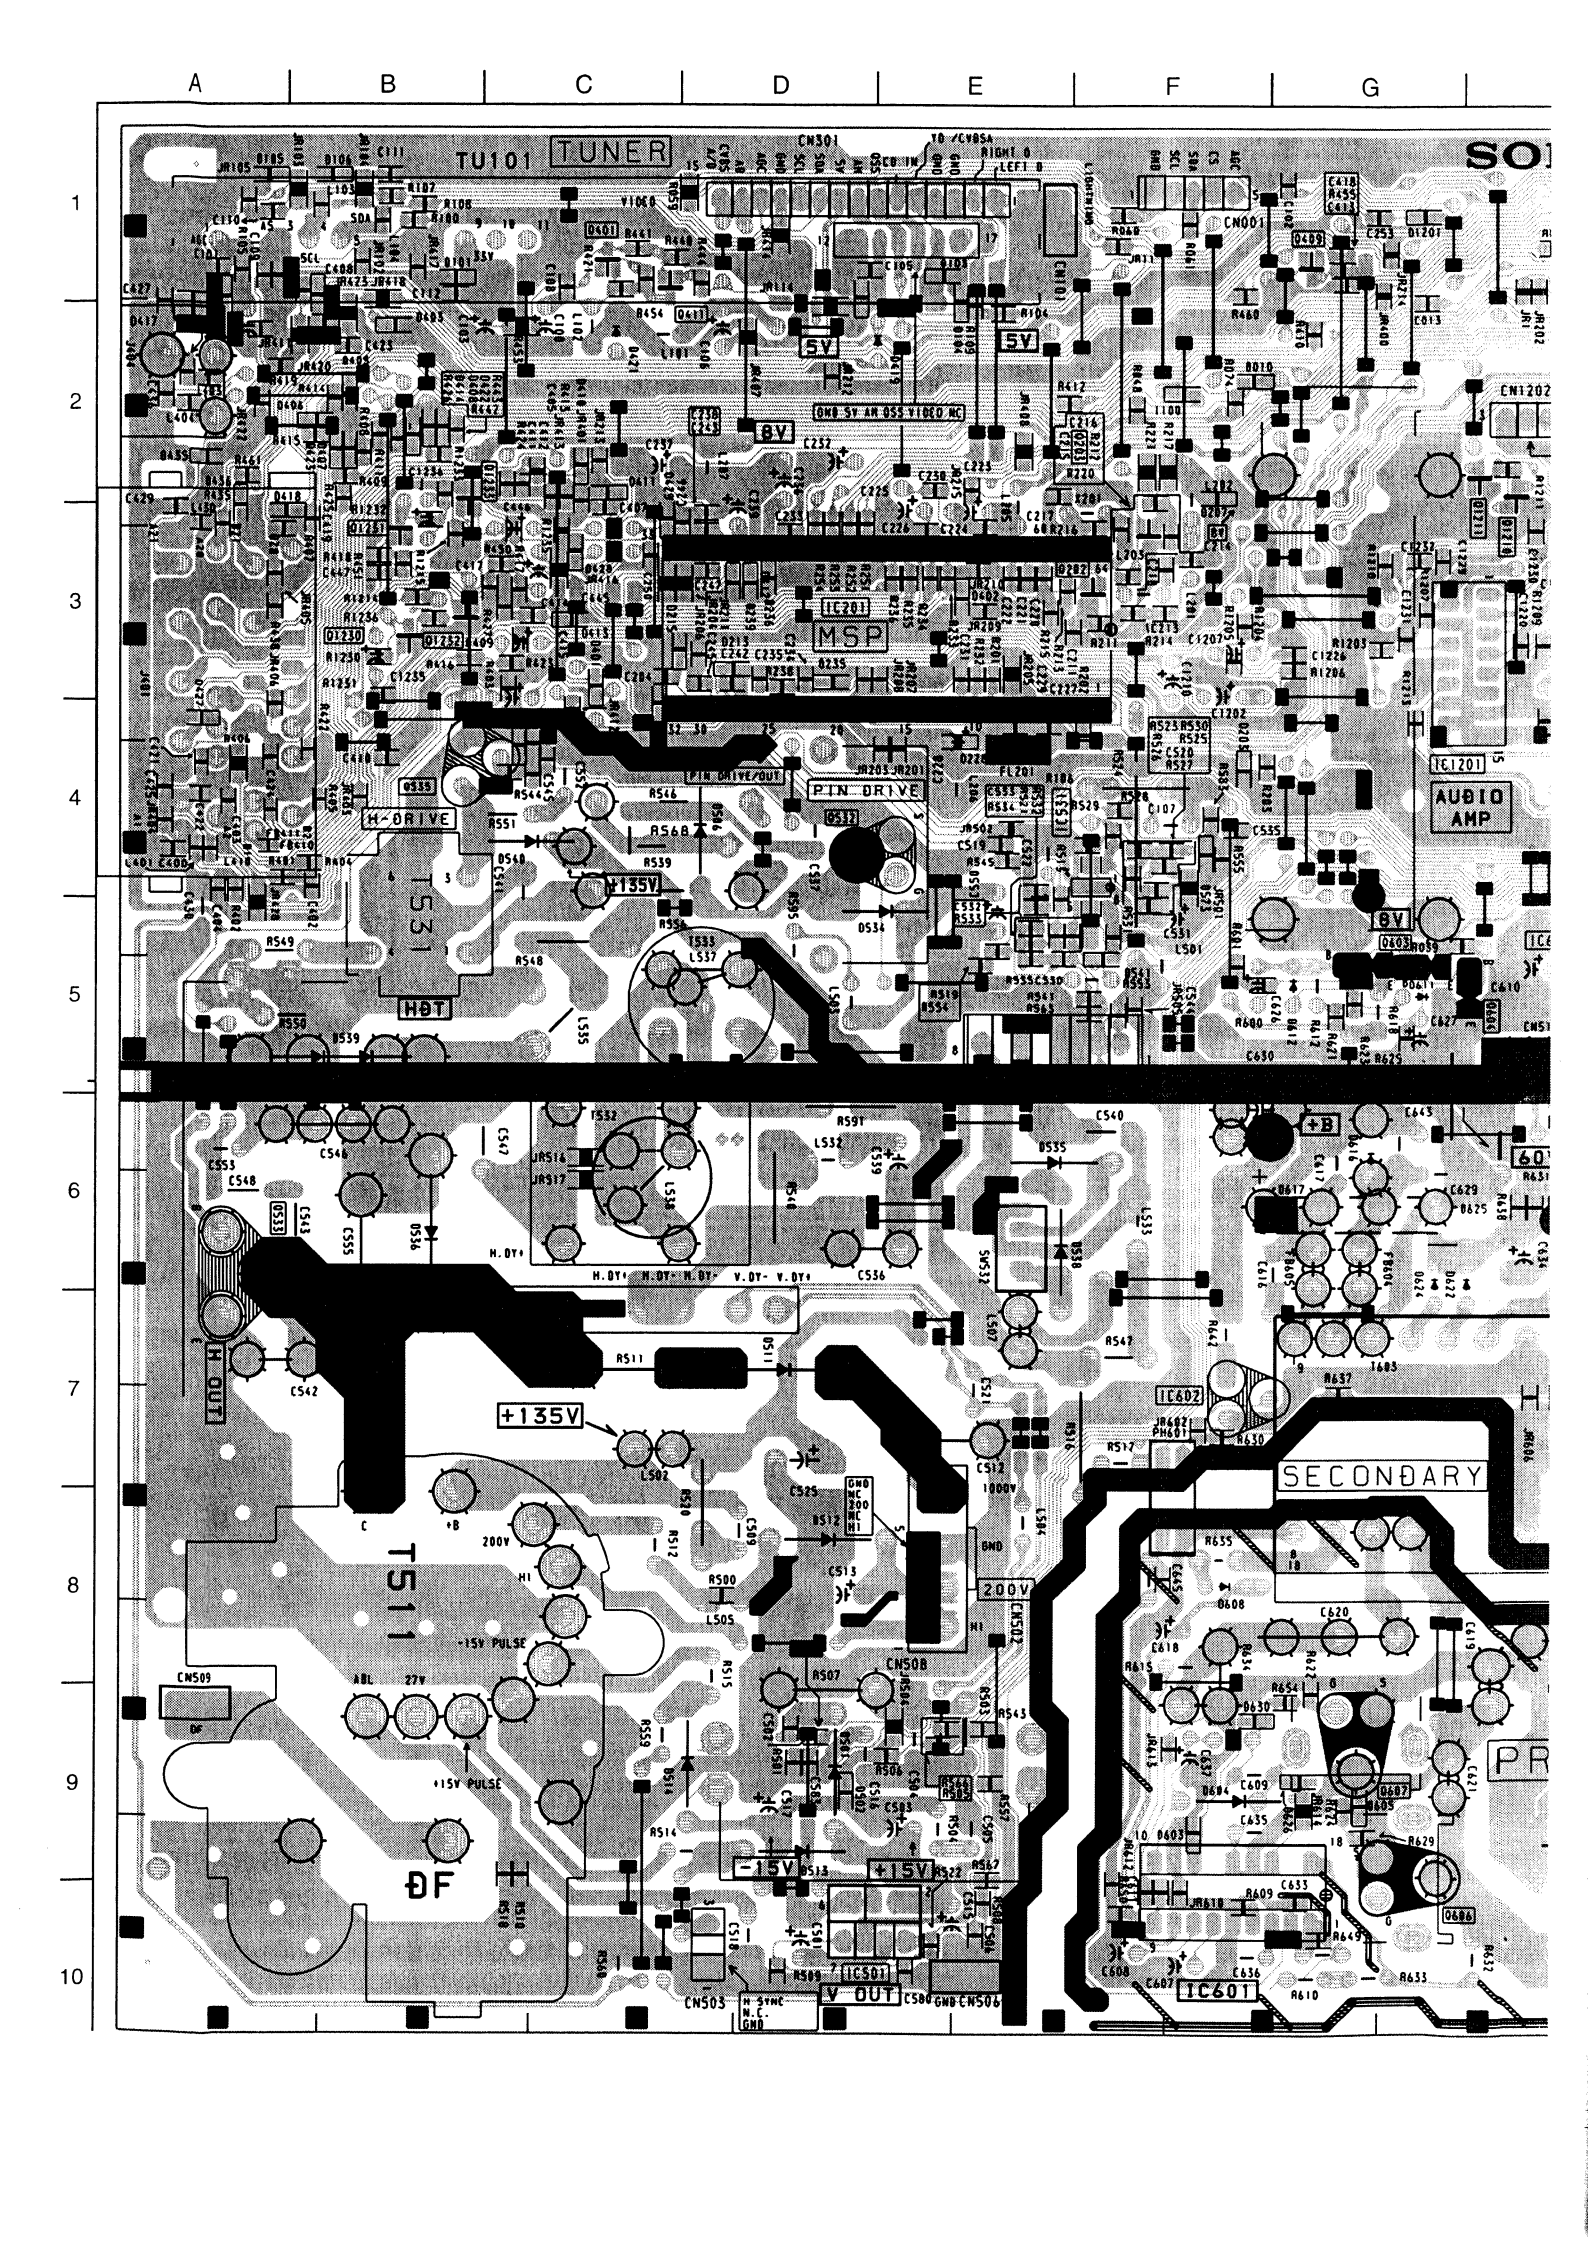
TU101
TUNER
MSP
IC201
AUDIO AMP
IC602
IC601
IC501
T511
T521
T531
SECONDARY
PRIMARY
H-DRIVE
PIN DRIVE
PIN DRIVE/OUT
H OUT
V OUT
+135V
+15V
-15V
+15V PULSE
-15V PULSE
200V
5V
8V
+B
CN301
CN001
CN1202
CN1201
CN509
CN503
CN502
CN508
CN506
A
B
C
D
E
F
G
1
2
3
4
5
6
7
8
9
10

H I J K L M

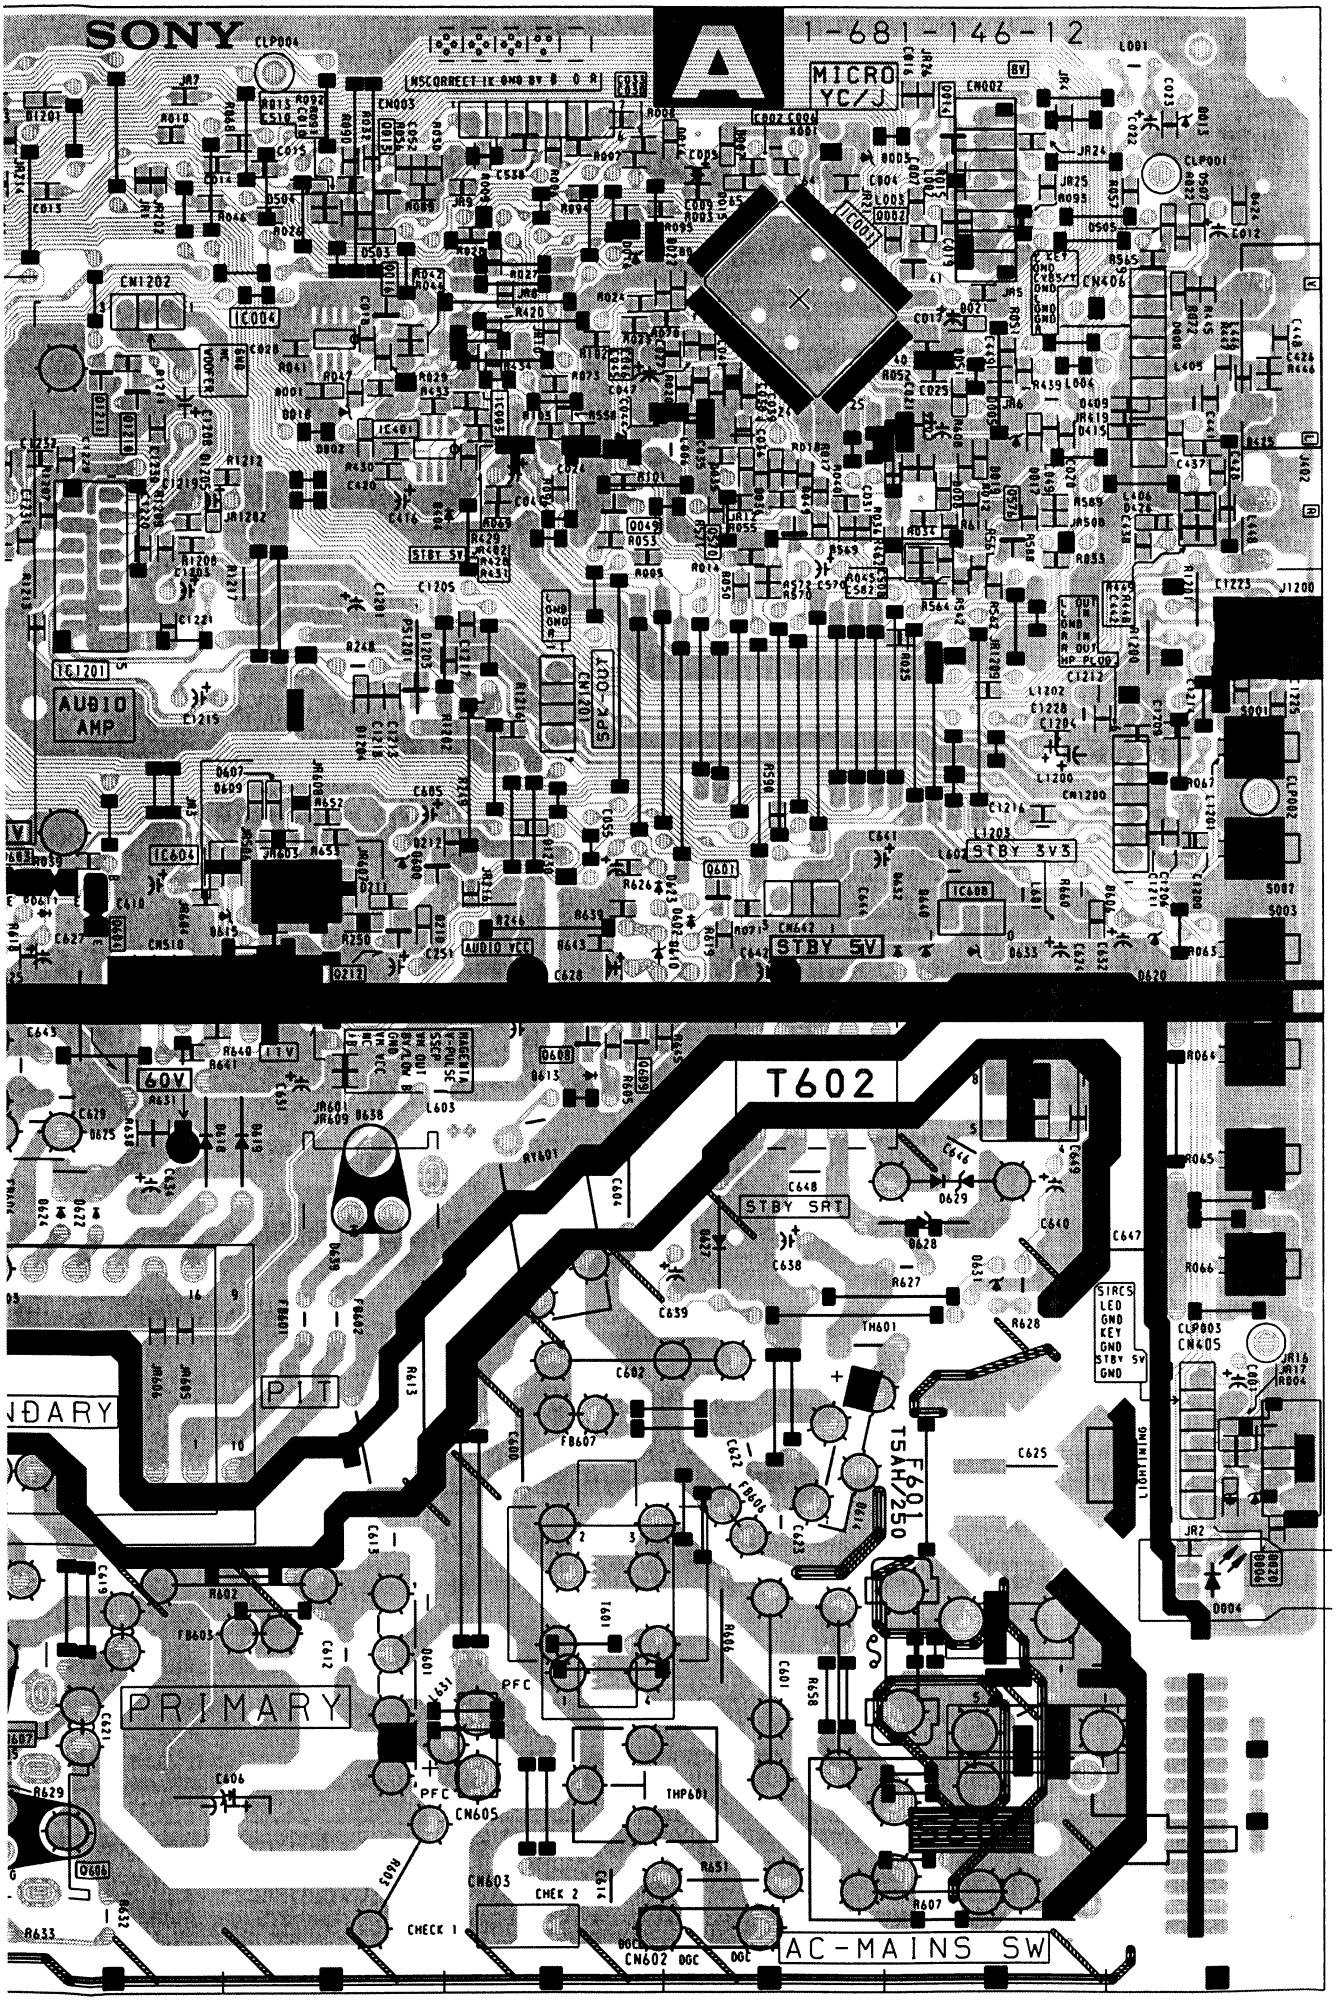
SONY
1-681-146-12
MICRO
YC/J
AUDIO
AMP
STBY 5V
STBY 3V3
STBY SAT
T602
PRIMARY
AC-MAINS SW
PFC
CN605
CN603
CN602
CN405
CN406
CN1202
CN1201
IC1201
IC604
IC608
IC401
IC1001
Q607
Q212
THP601
TM601
F601
T5AH/250
60V
11V
PIT
STRCS
LED
GND
KEY
GND
STBY 5V
GND

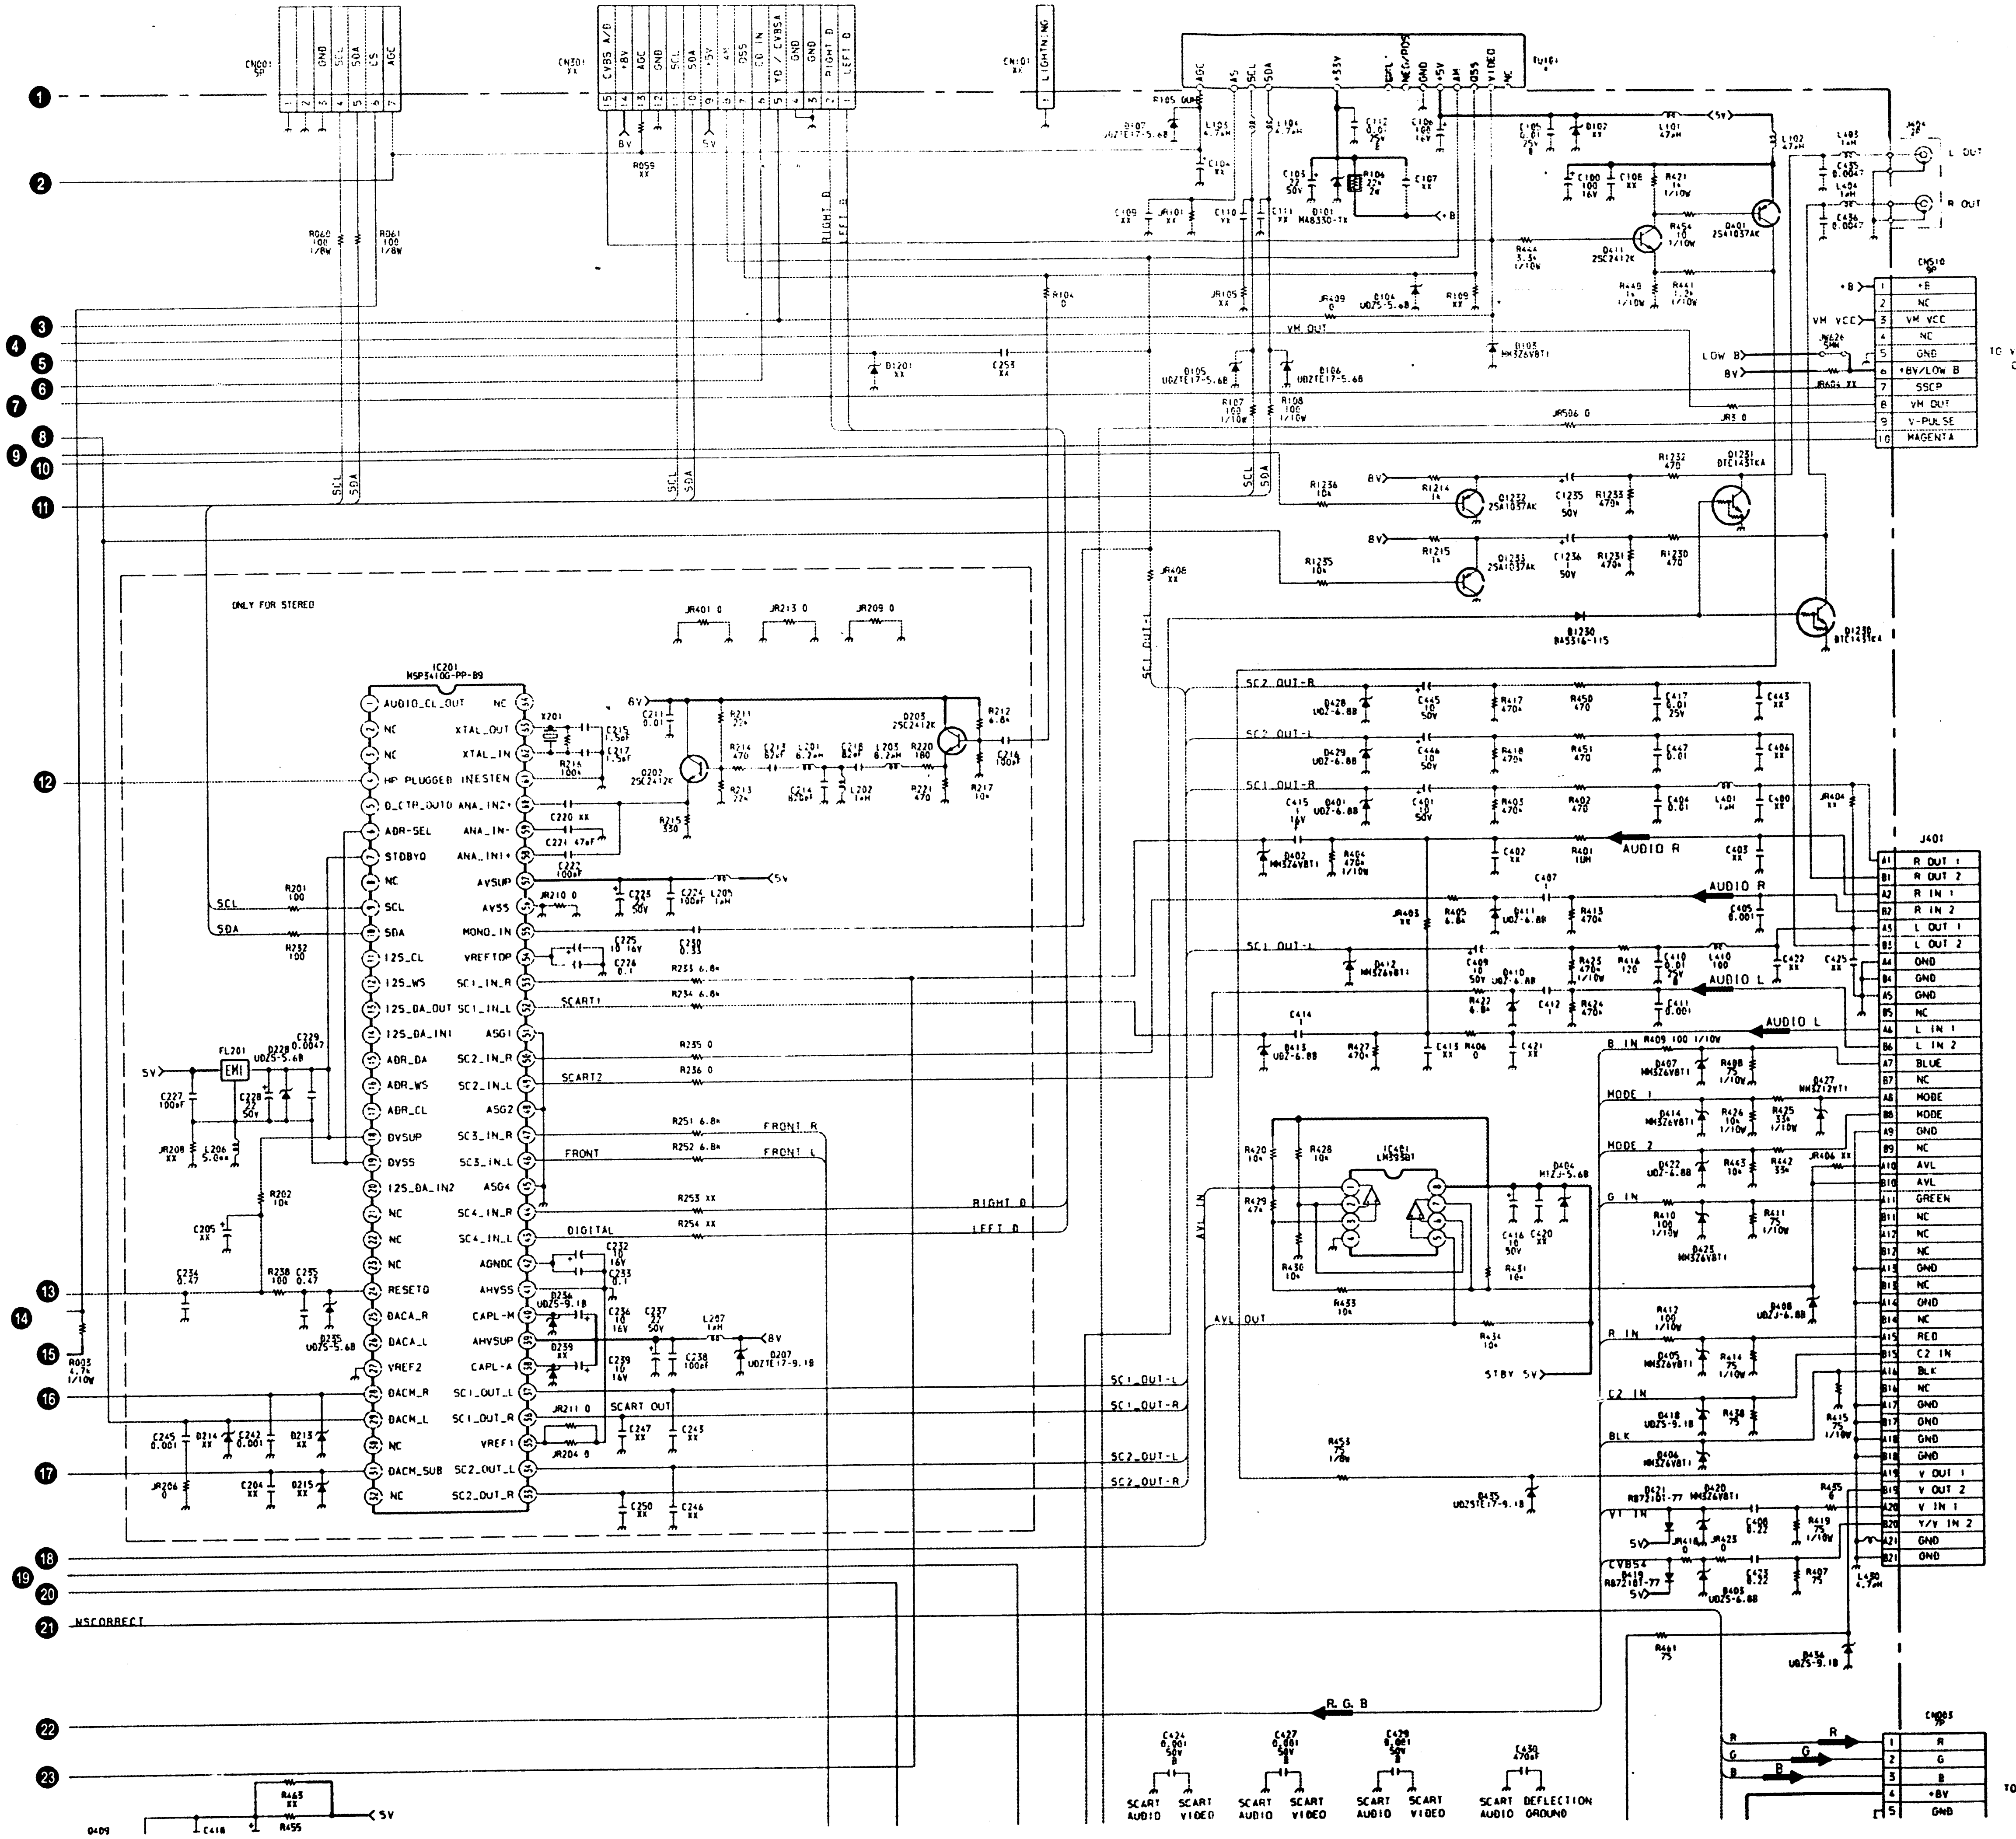
CN001 5P
GND
SCL
SDA
CS
AGC
CN301 XX
CVBS A/D
+8V
AGC
GND
SCL
SDA
+5V
DSS
CD IN
YO / CVBSA
GND
RIGHT D
LEFT D
CN101 XX
LIGHTNING
TU101
AGC
AS
SCL
SDA
+33V
NEG/POS
GND
+5V
AM
DSS
VIDEO
NC
VM OUT
ONLY FOR STEREO
IC201
MSP3410G-PP-B9
AUDIO_CL_OUT
XTAL_OUT
XTAL_IN
HP PLUGGED
INESTEN
D_CTR_OUT0
ANA_IN2+
ADR-SEL
ANA_IN-
STDBYQ
ANA_IN1+
AVSUP
SCL
AVSS
SDA
MONO_IN
I2S_CL
VREFTOP
I2S_WS
SC1_IN_R
I2S_DA_OUT
SC1_IN_L
I2S_DA_IN1
ASG1
ADR_DA
SC2_IN_R
ADR_WS
SC2_IN_L
ADR_CL
ASG2
DVSUP
SC3_IN_R
DVSS
SC3_IN_L
I2S_DA_IN2
ASG4
SC4_IN_R
SC4_IN_L
AGNDC
RESETQ
AHVSS
DACA_R
CAPL-M
DACA_L
AHVSUP
VREF2
CAPL-A
DACM_R
SC1_OUT_L
DACM_L
SC1_OUT_R
VREF1
DACM_SUB
SC2_OUT_L
SC2_OUT_R
SCART1
SCART2
FRONT
FRONT R
FRONT L
DIGITAL
RIGHT D
LEFT D
SCART OUT
NSCORRECT
SC1_OUT-L
SC1_OUT-R
SC2_OUT-L
SC2_OUT-R
SC2 OUT-R
SC2 OUT-L
SC1 OUT-R
SC1 OUT-L
AUDIO R
AUDIO L
AVL IN
AVL OUT
IC401
LM358DT
STBY 5V
R. G. B
CN510 9P
+B
NC
VM VCC
GND
+8V/LOW B
SSCP
VM OUT
V-PULSE
MAGENTA
TO VM BOARD CN1701
L OUT
R OUT
J401
R OUT 1
R OUT 2
R IN 1
R IN 2
L OUT 1
L OUT 2
L IN 1
L IN 2
BLUE
MODE
AVL
GREEN
RED
C2 IN
BLK
V OUT 1
V OUT 2
V IN 1
Y/V IN 2
B IN
MODE 1
MODE 2
G IN
R IN
V1 IN
CVBS4
CN003 7P
R
G
B
+8V
GND
TO C BOARD CN703
SCART AUDIO
SCART VIDEO
DEFLECTION GROUND

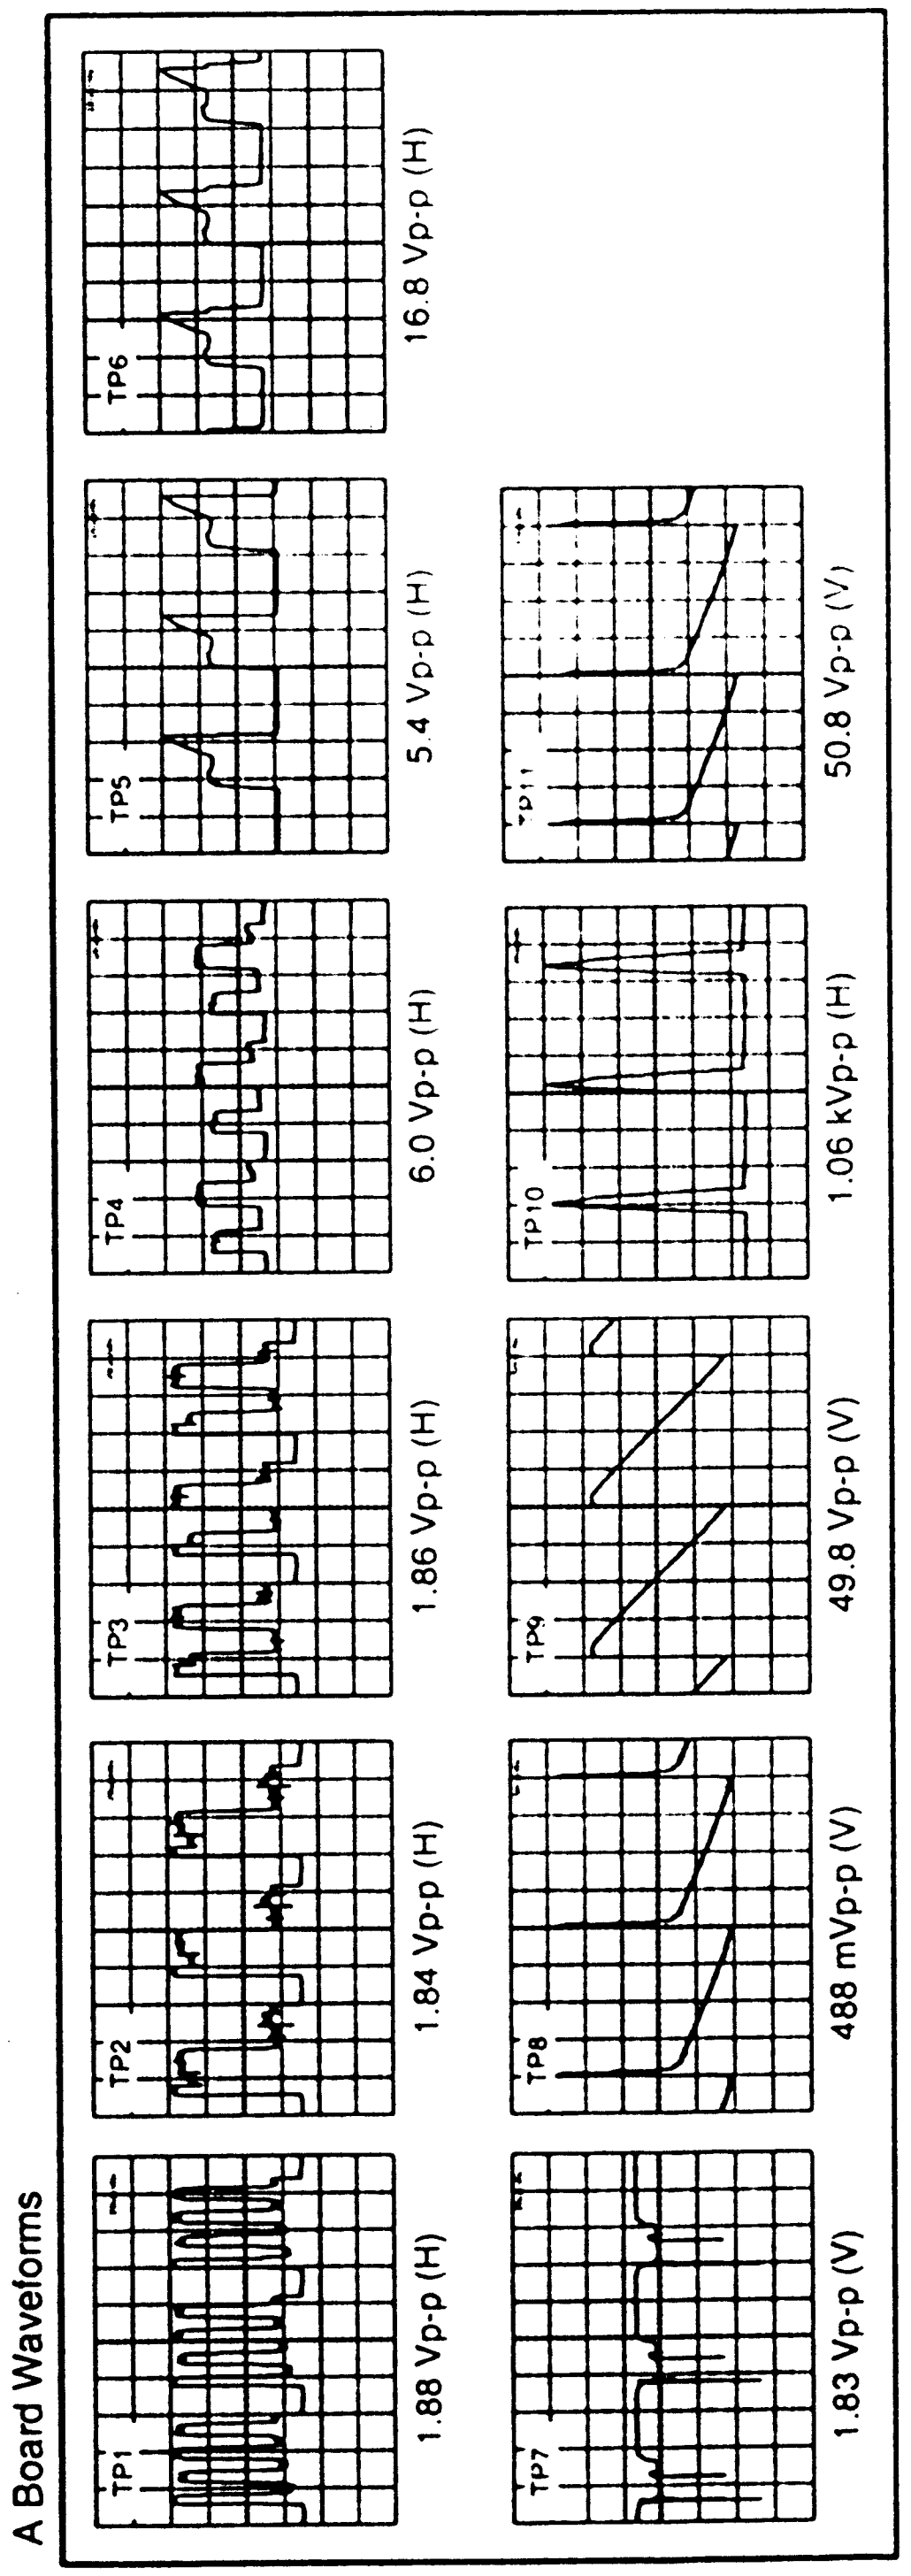
A Board Waveforms
TP1
1.88 Vp-p (H)
TP2
1.84 Vp-p (H)
TP3
1.86 Vp-p (H)
TP4
6.0 Vp-p (H)
TP5
5.4 Vp-p (H)
TP6
16.8 Vp-p (H)
TP7
1.83 Vp-p (V)
TP8
488 mVp-p (V)
TP9
49.8 Vp-p (V)
TP10
1.06 kVp-p (H)
TP11
50.8 Vp-p (V)

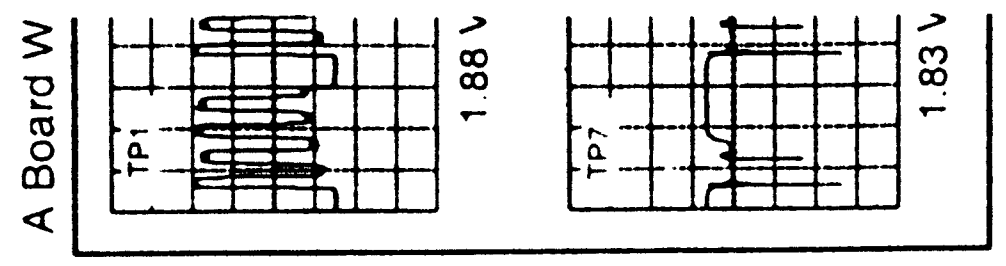

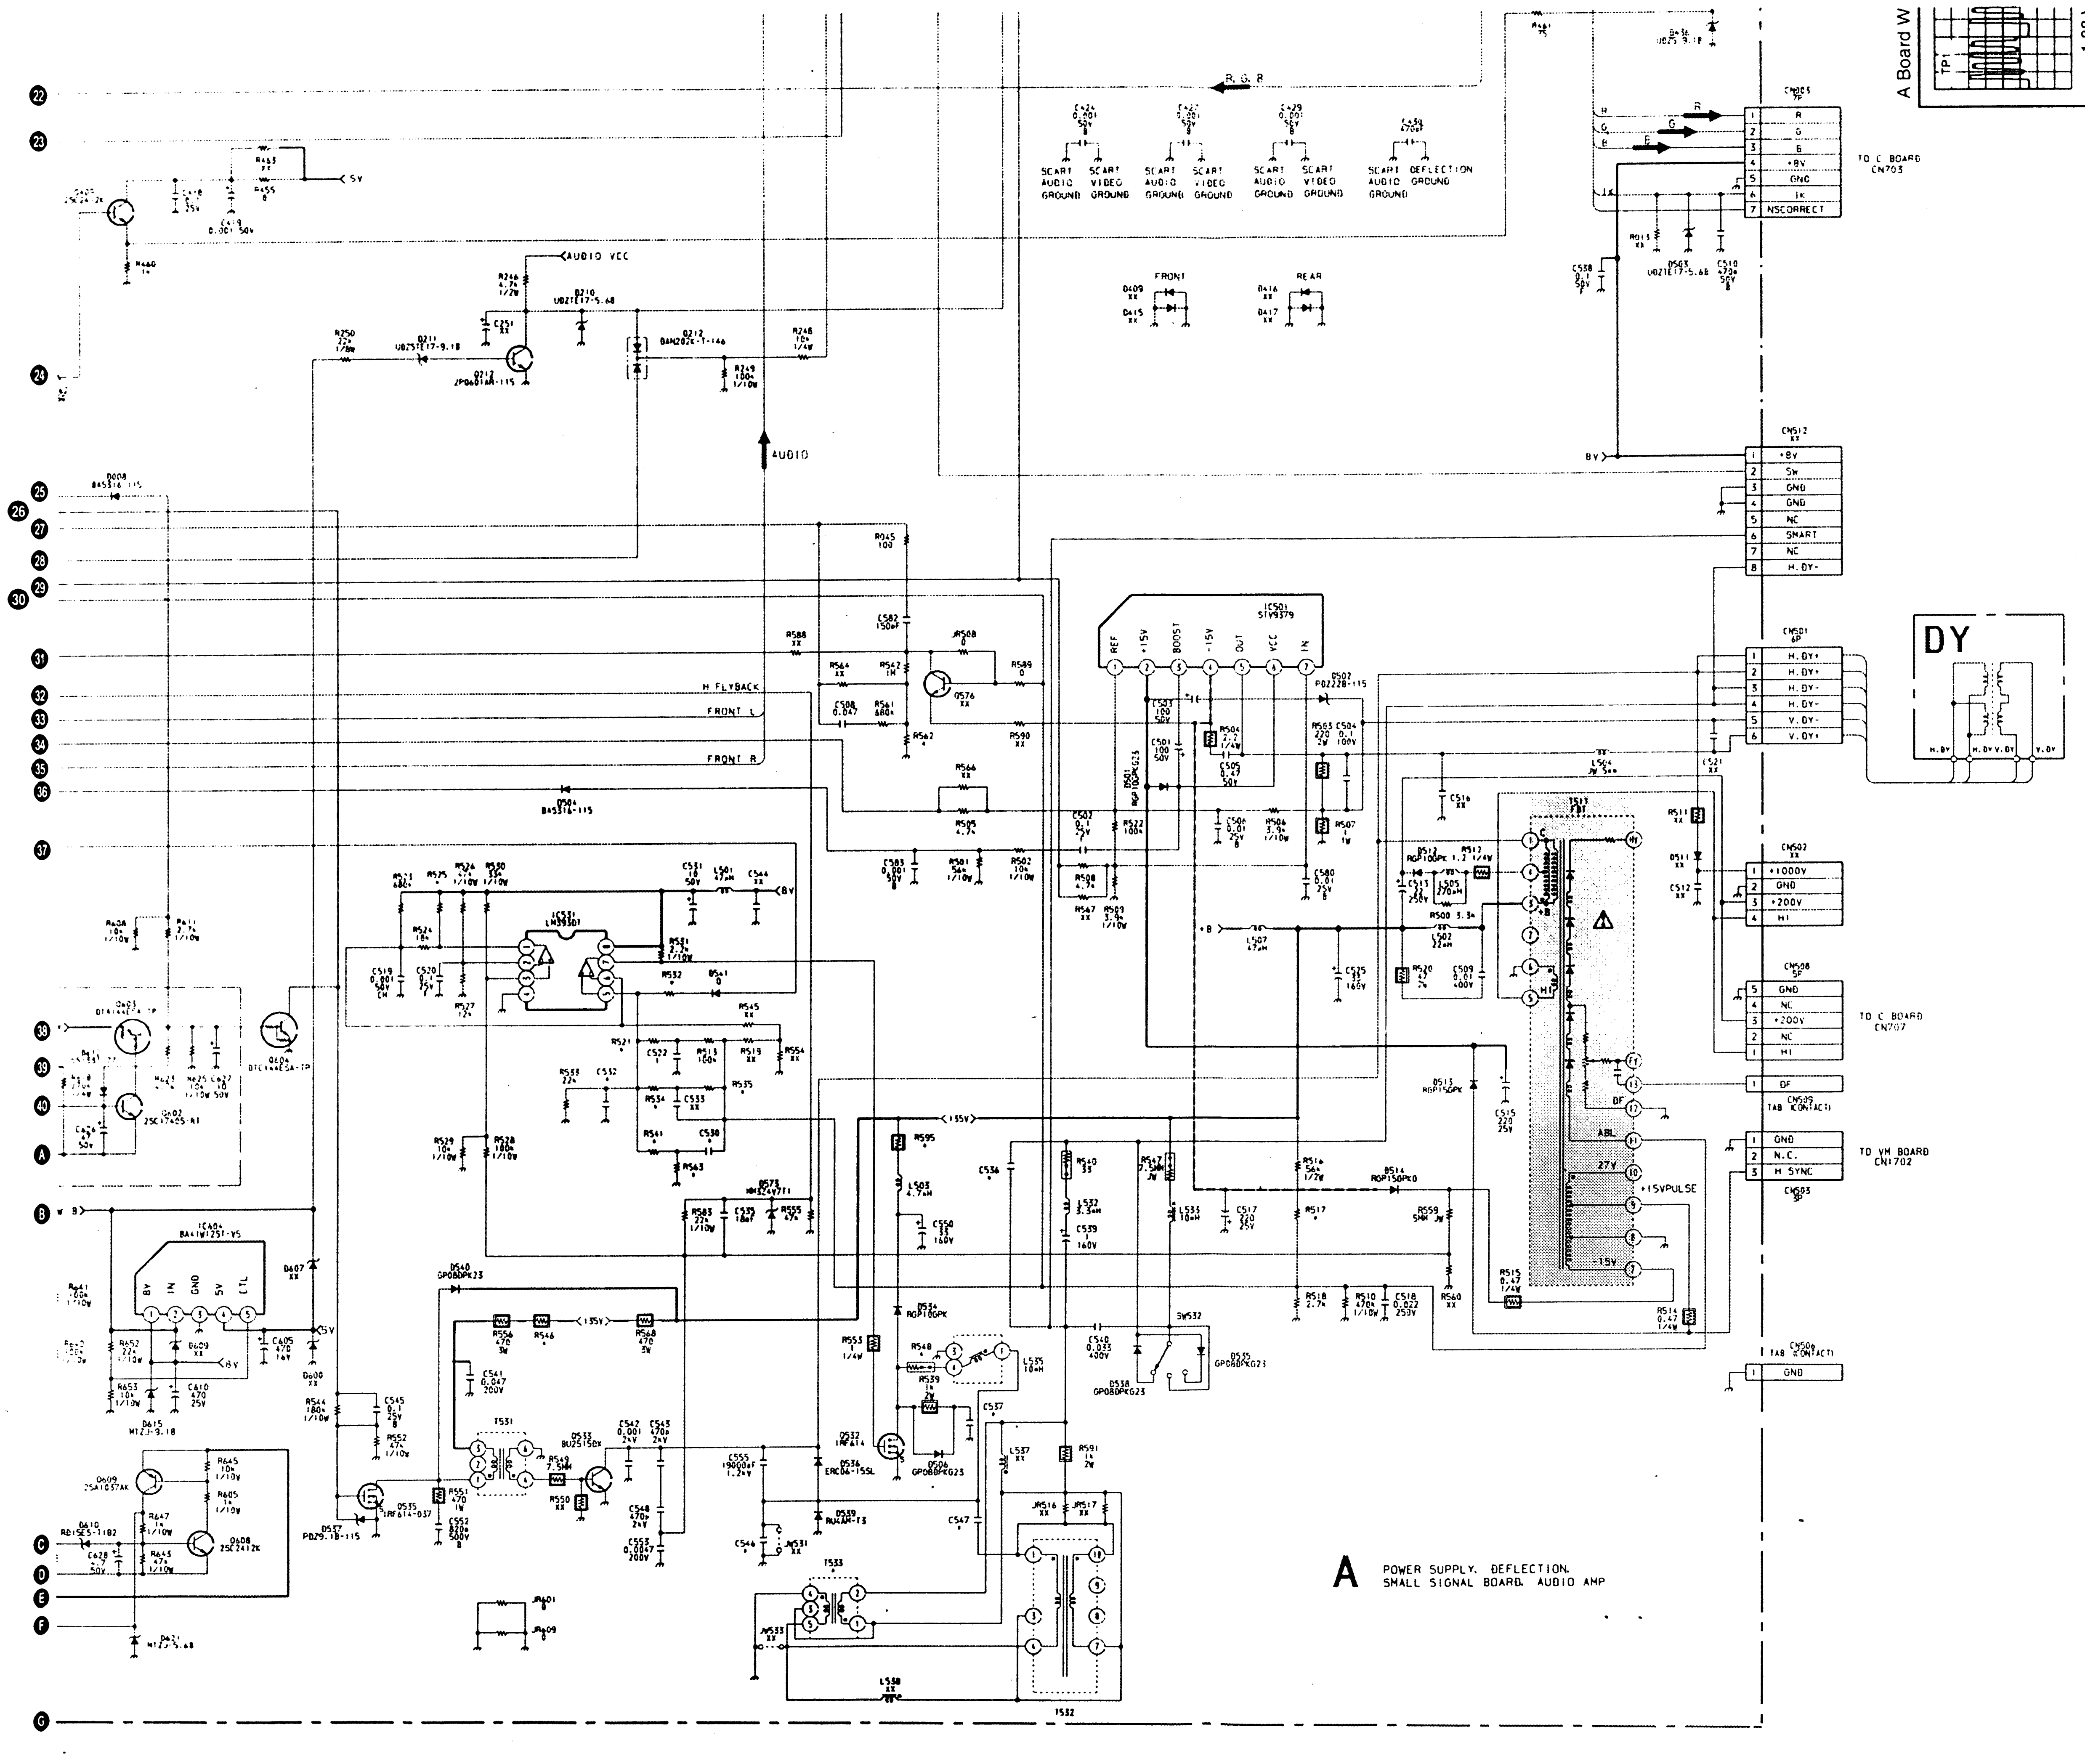
R, G, B
SCART AUDIO GROUND
SCART VIDEO GROUND
SCART AUDIO GROUND
DEFLECTION GROUND
FRONT
REAR
AUDIO VCC
AUDIO
H FLYBACK
FRONT L
FRONT R
IC501 STV9379
REF
+15V
BOOST
-15V
OUT
VCC
IN
IC531 LM393DI
IC604 BA41W12ST-V5
8V
IN
GND
5V
CTL
T511 FBT
ABL
27V
+15VPULSE
-15V
DF
+B
135V
T531
T532
T533
SW532
CN005 7P
R
G
B
+8V
GND
IK
NSCORRECT
TO C BOARD CN703
CN512 XX
+8V
SW
GND
GND
NC
SMART
NC
H. DY-
CN501 6P
H. DY+
H. DY+
H. DY-
H. DY-
V. DY-
V. DY+
DY
H. DY
H. DY
V. DY
V. DY
CN502 XX
+1000V
GND
+200V
HI
CN508 5P
GND
NC
+200V
NC
HI
TO C BOARD CN707
DF
CN509 TAB (CONTACT)
GND
N.C.
H SYNC
TO VM BOARD CN1702
CN503 3P
CN506 TAB (CONTACT)
GND
A
POWER SUPPLY, DEFLECTION,
SMALL SIGNAL BOARD, AUDIO AMP

A [POWER SUPPLY, DEFLECTION, AUDIO AMPLIFIER (Page 2/2)]

A [POWER SUPPLY, DEFLECTION, AUDIO AMPLIFIER (Page 1/2)]

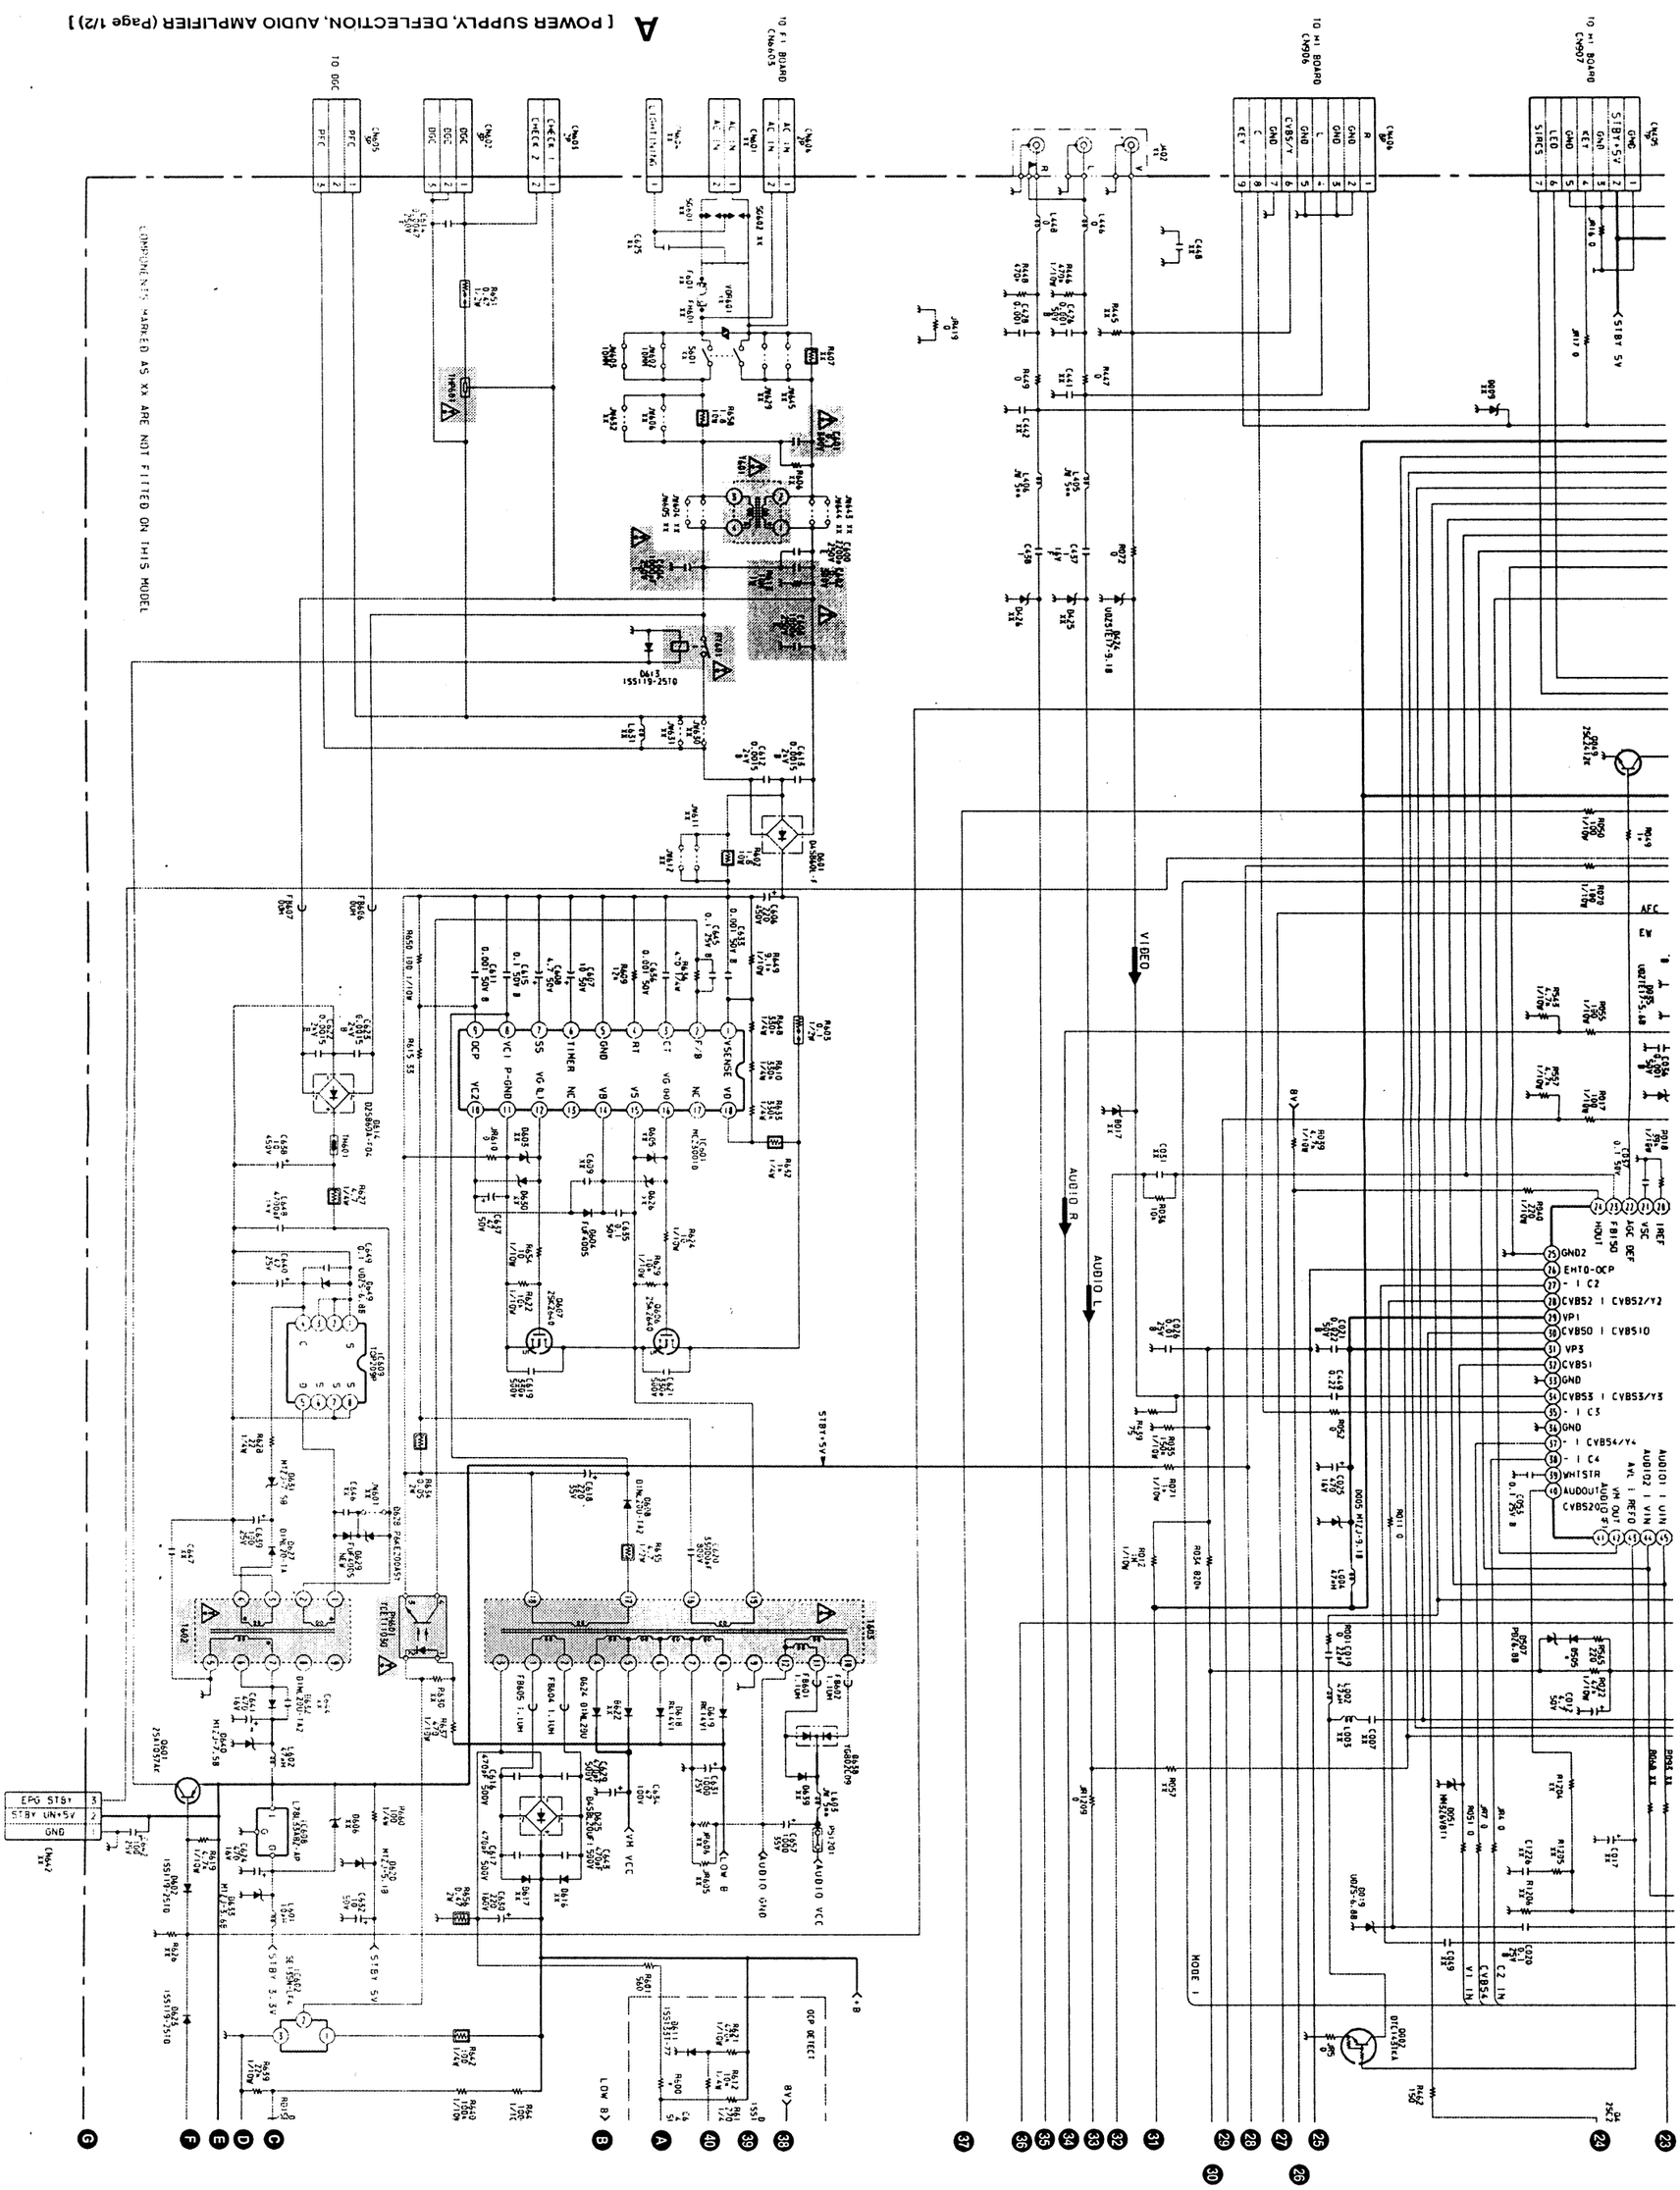

[9-927-405-01]

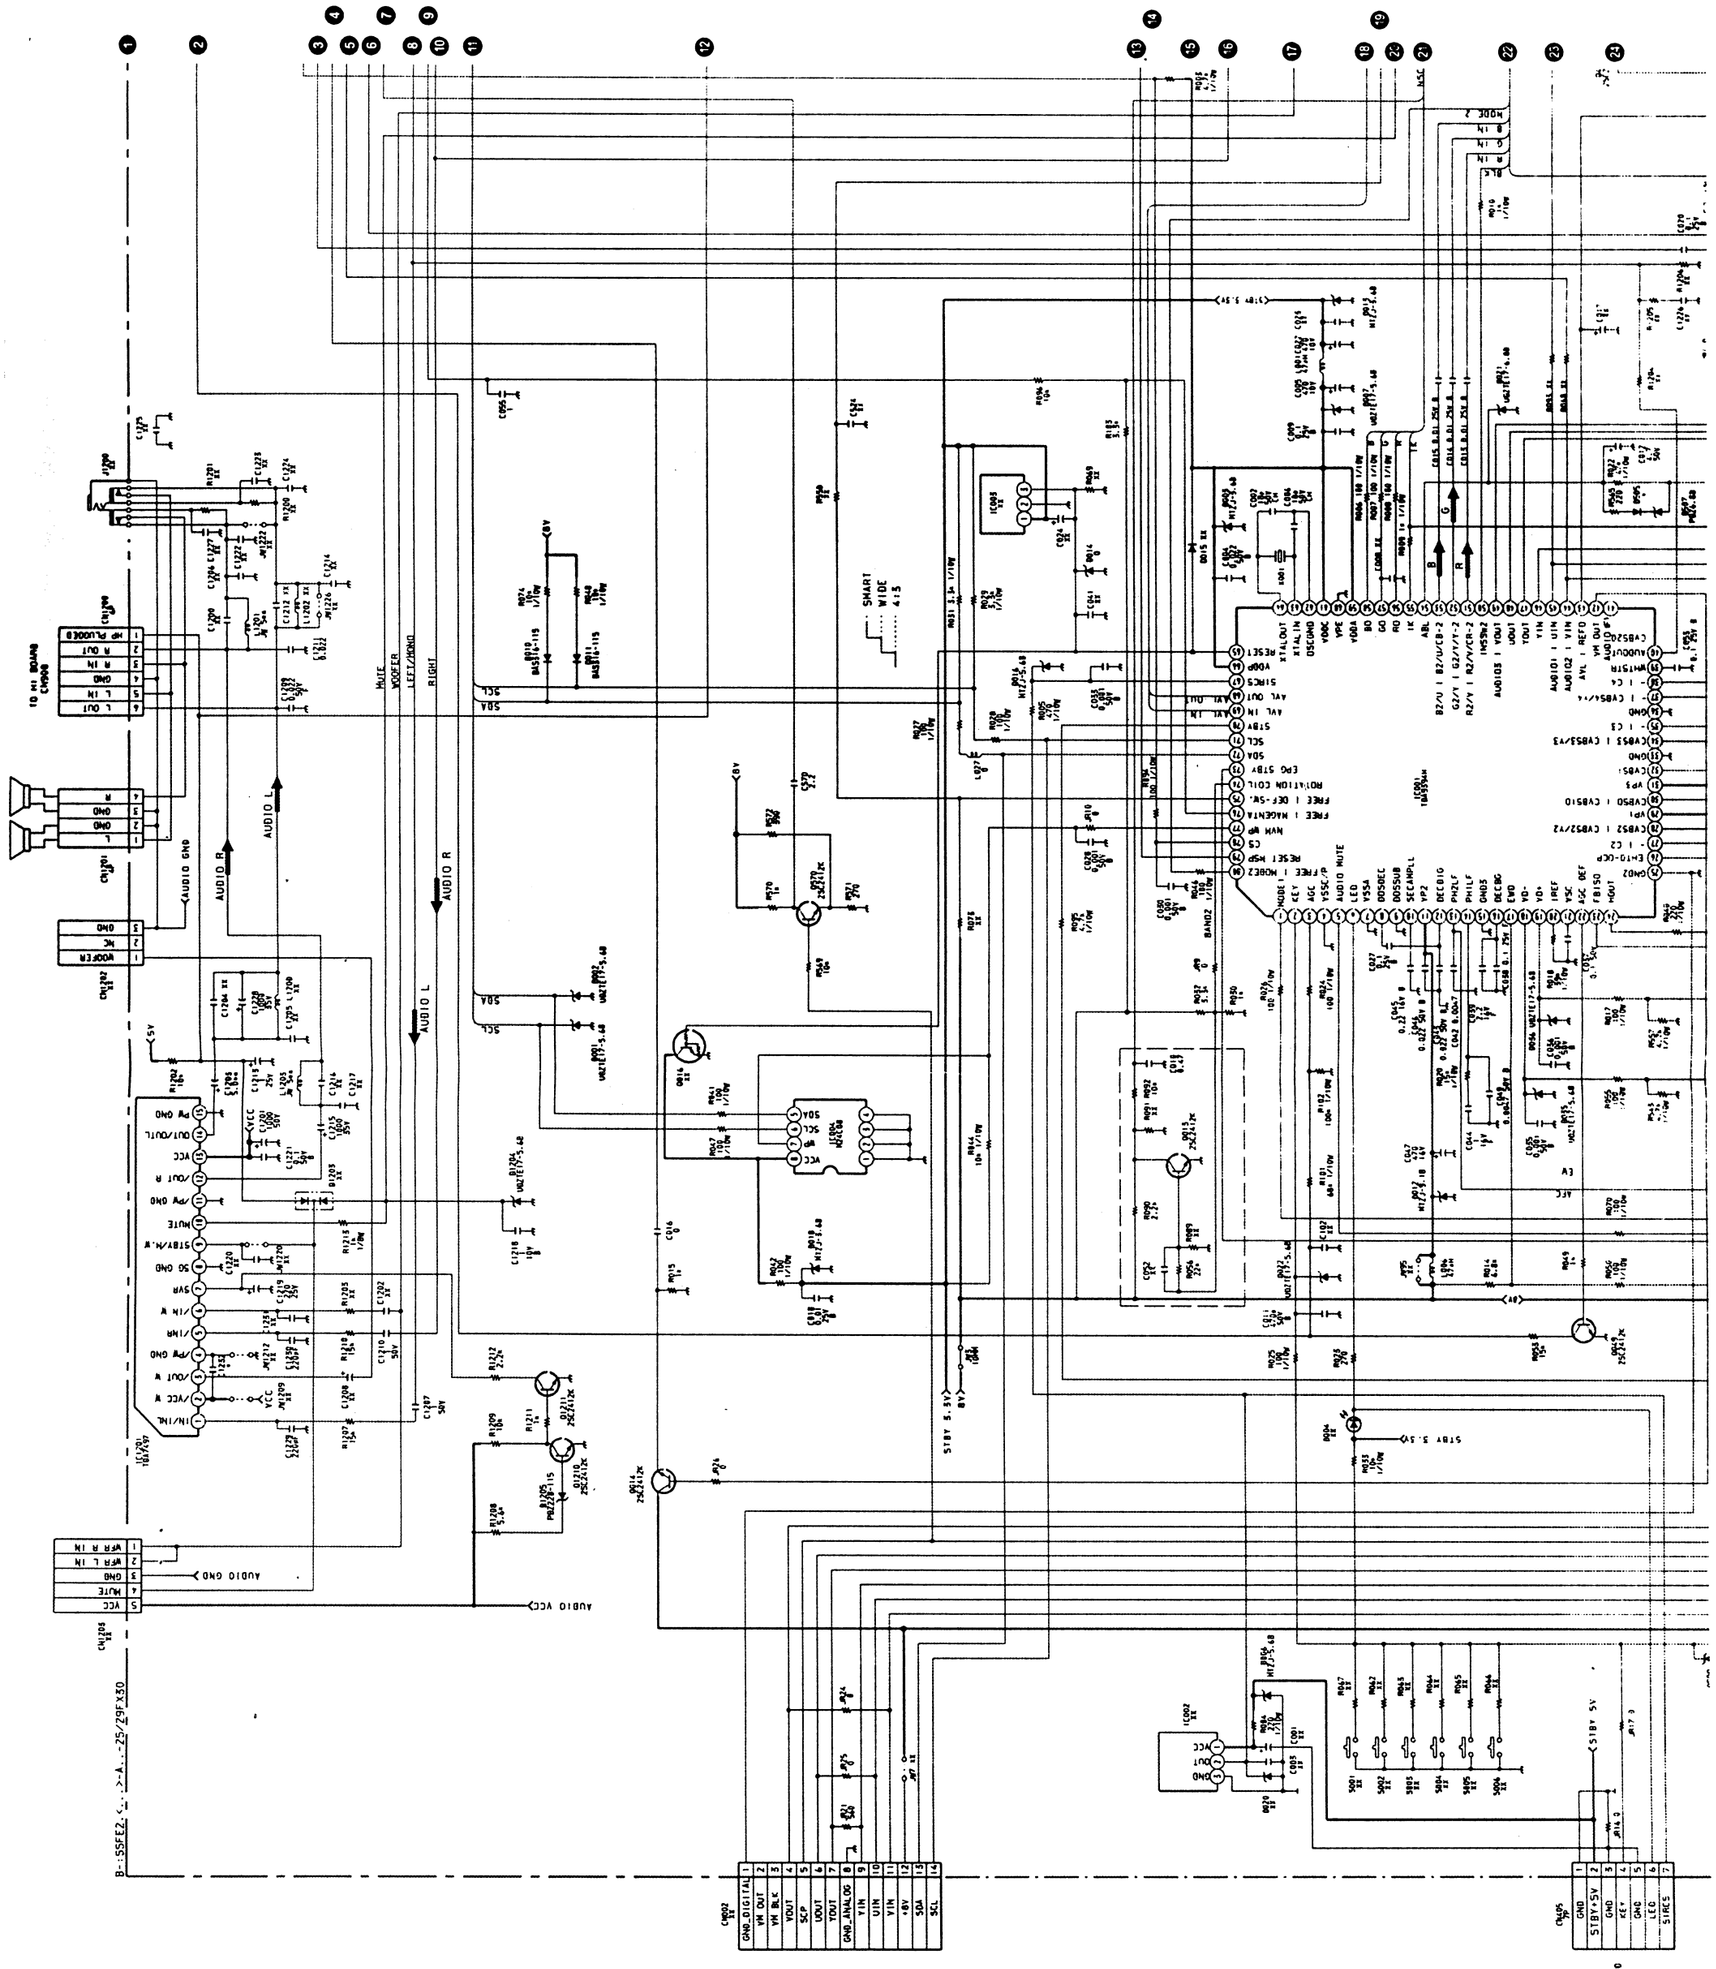
TO HI BOARD CN908
MUTE
WOOFER
LEFT/MONO
RIGHT
AUDIO L
AUDIO R
AUDIO GND
AUDIO VCC
SDA
SCL
SMART WIDE 4:3
STBY 5.5V
STBY 5V
B-ISSFE2-<...>-A...-25/29FX50
TO HI BOARD CN908

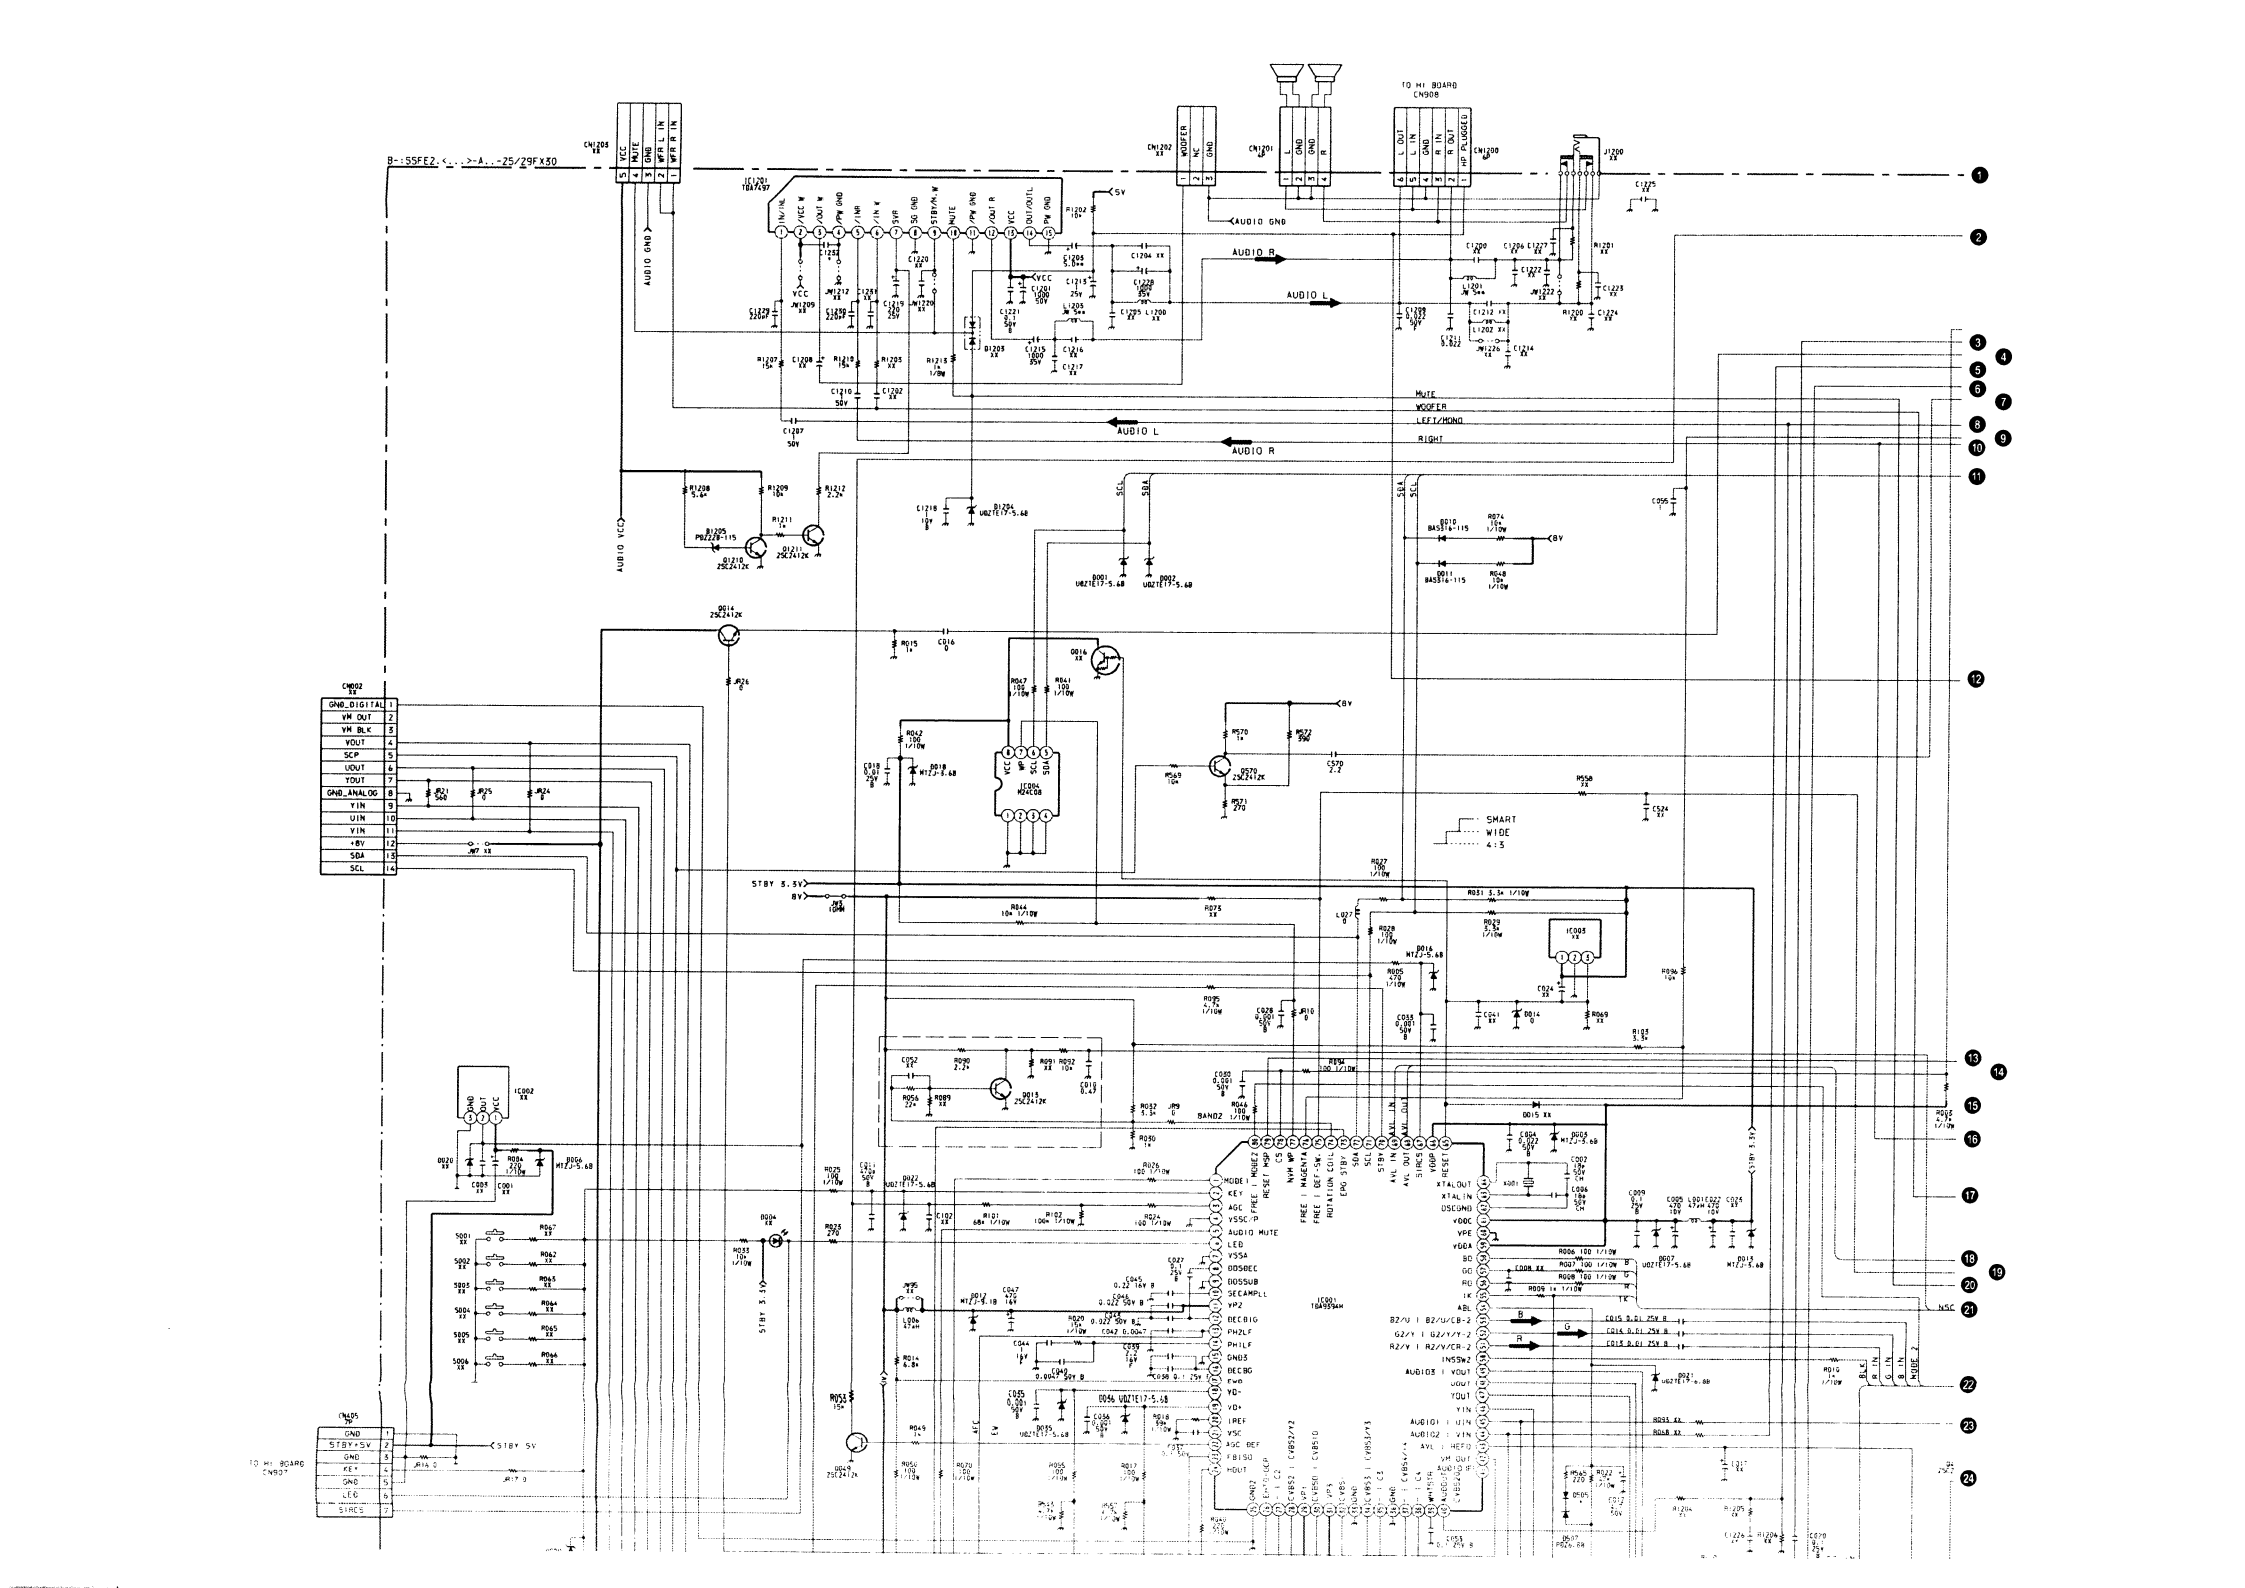
B-:55FE2.<...>-A..-25/29FX30
TO HI BOARD CN908
AUDIO GND
AUDIO VCC
AUDIO L
AUDIO R
MUTE
WOOFER
LEFT/MONO
RIGHT
STBY 5.5V
STBY 3.3V
SMART
WIDE
4:3
TO HI BOARD CN907
BAND2
1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24

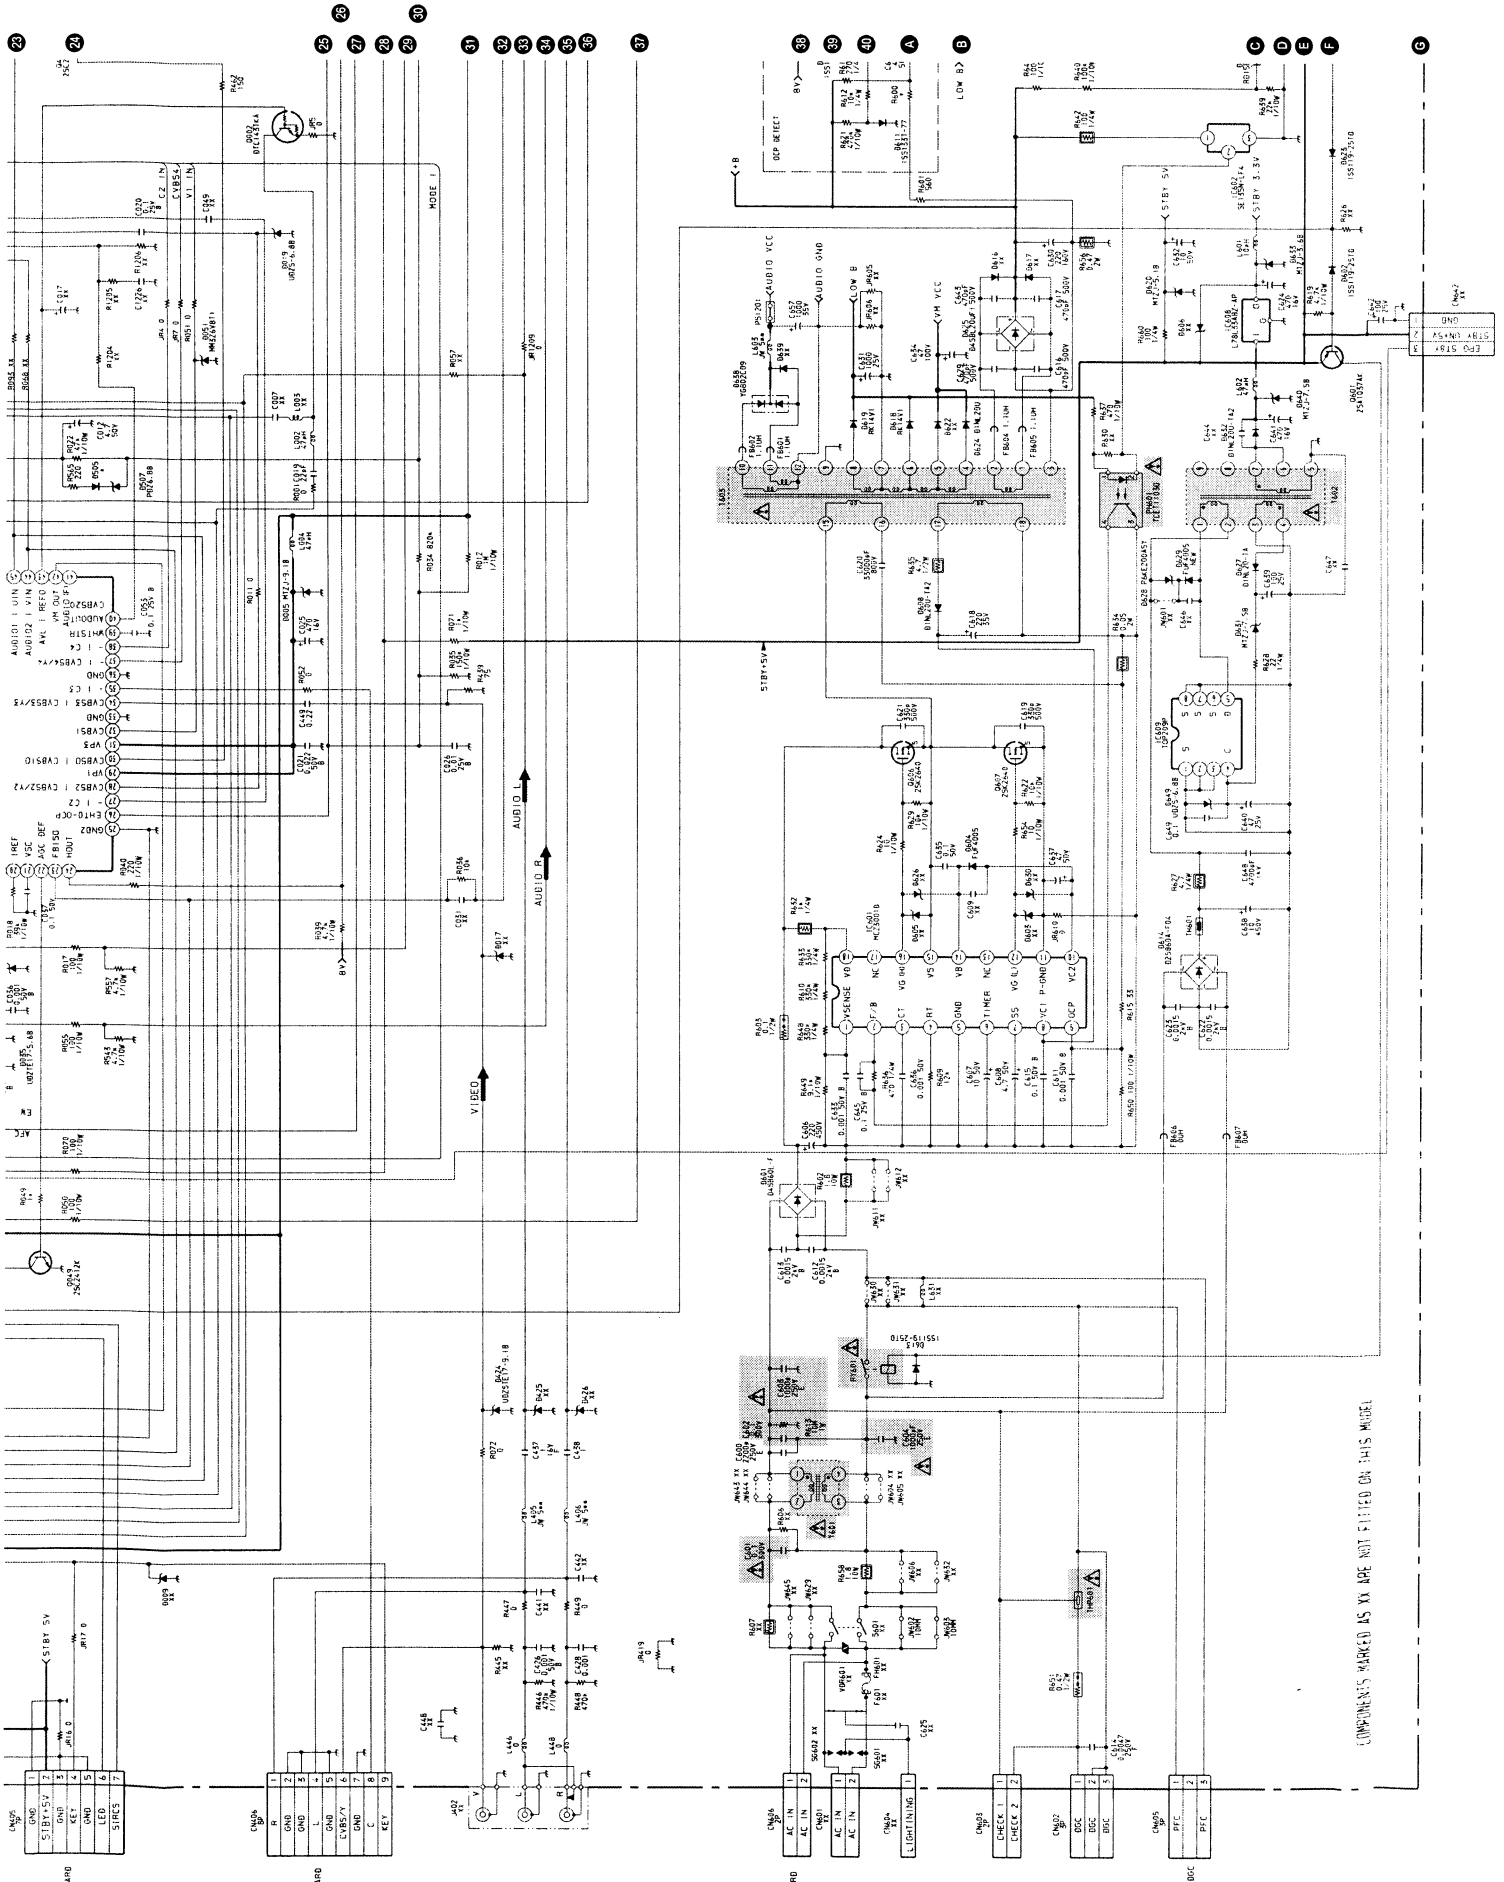

A [POWER SUPPLY, DEFLECTION, AUDIO AMPLIFIER (Page 1/2)]

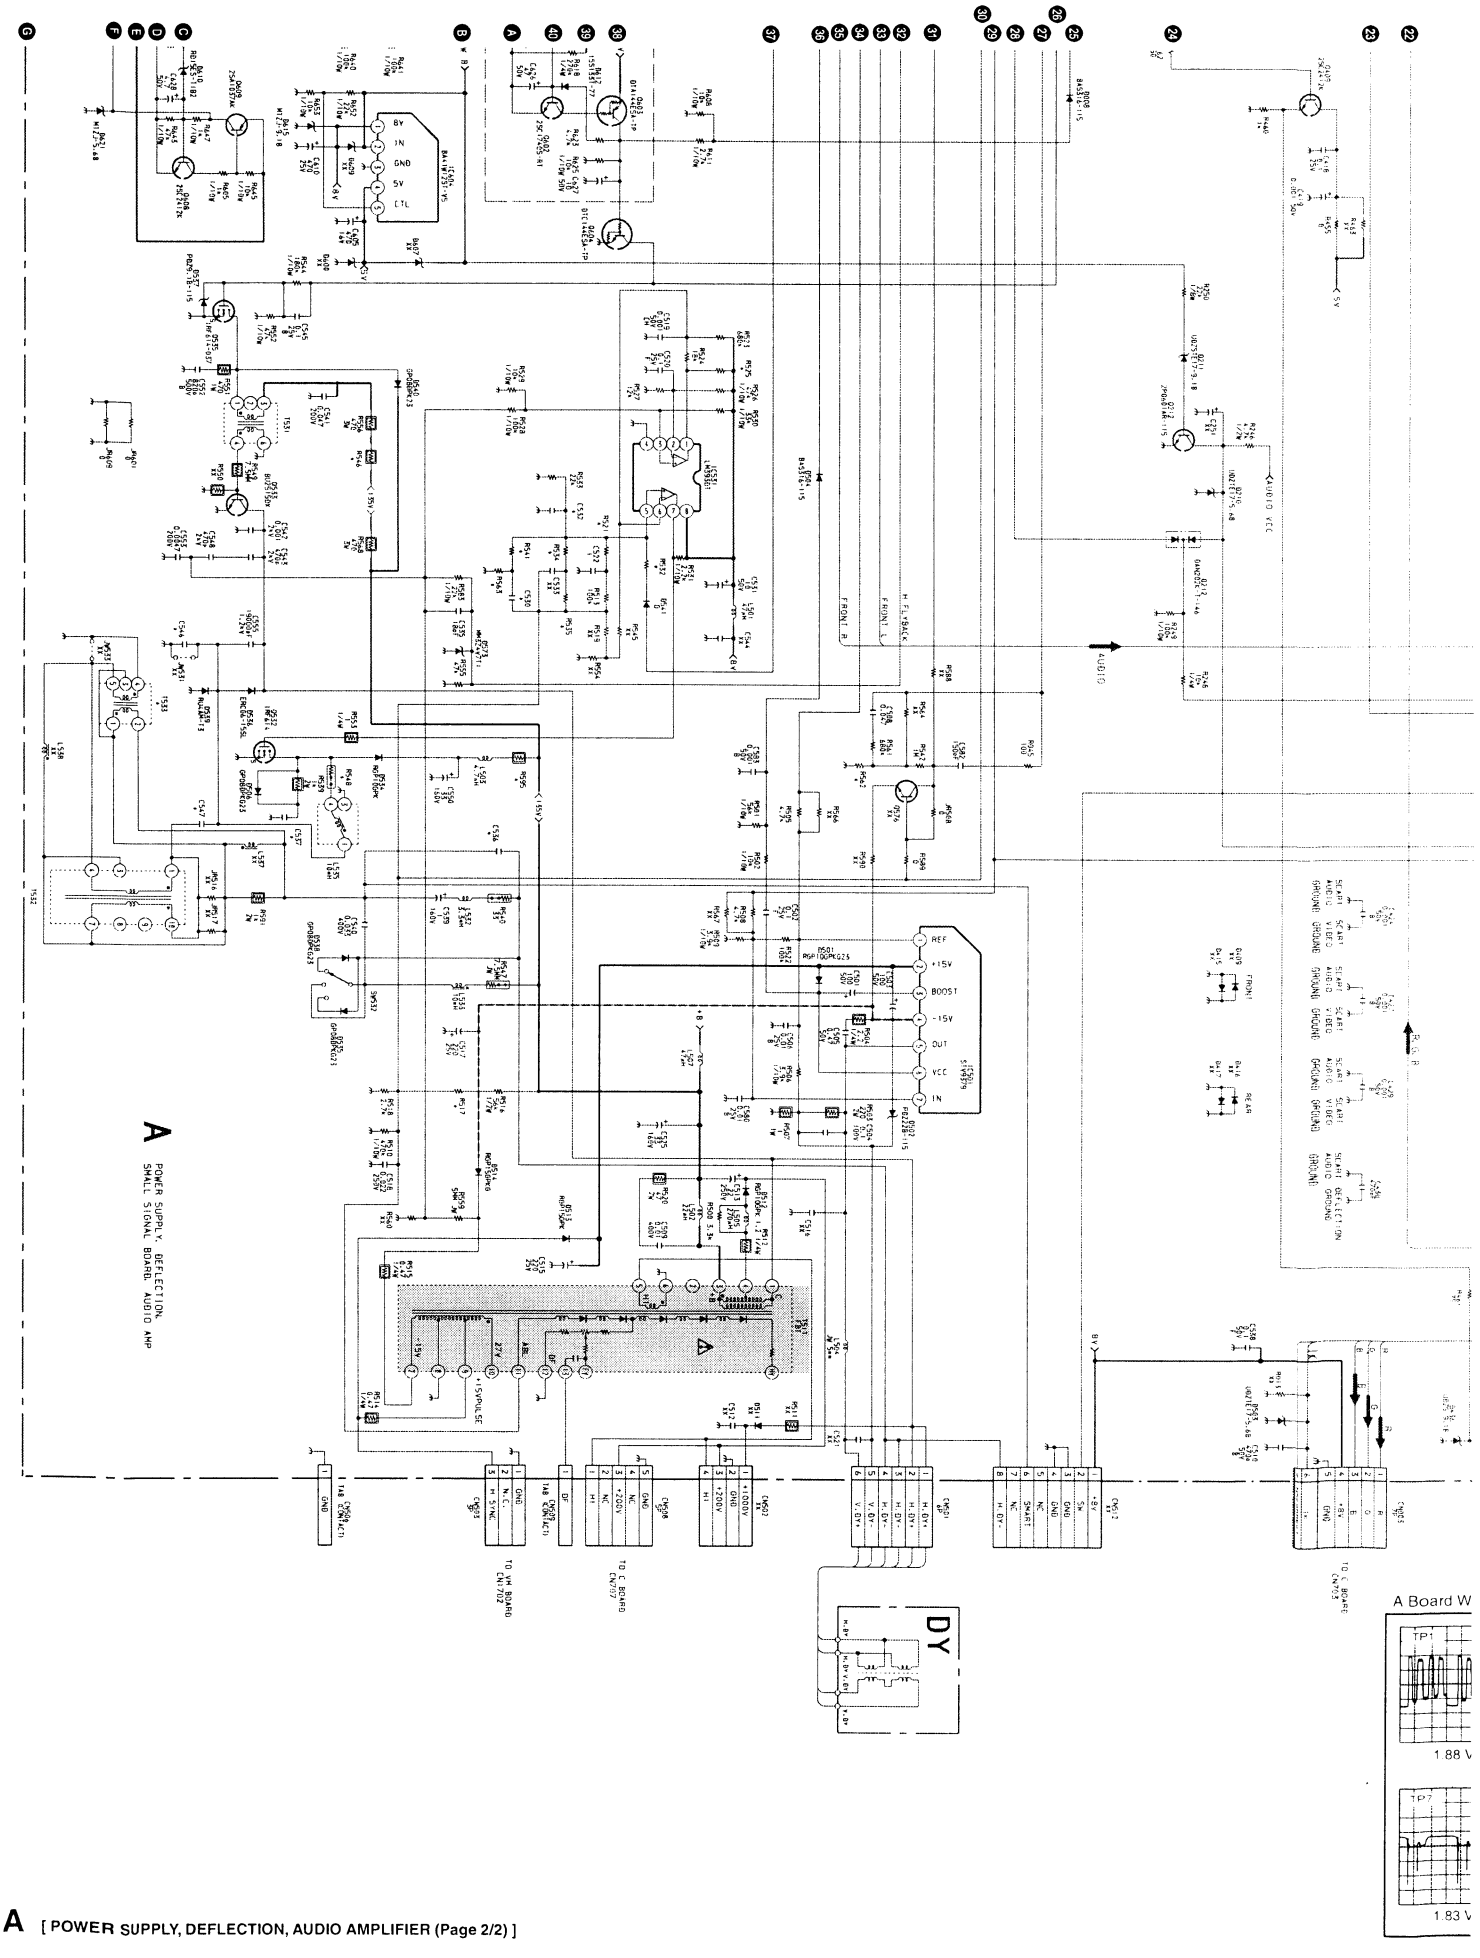

A [POWER SUPPLY, DEFLECTION, AUDIO AMPLIFIER (Page 2/2)]

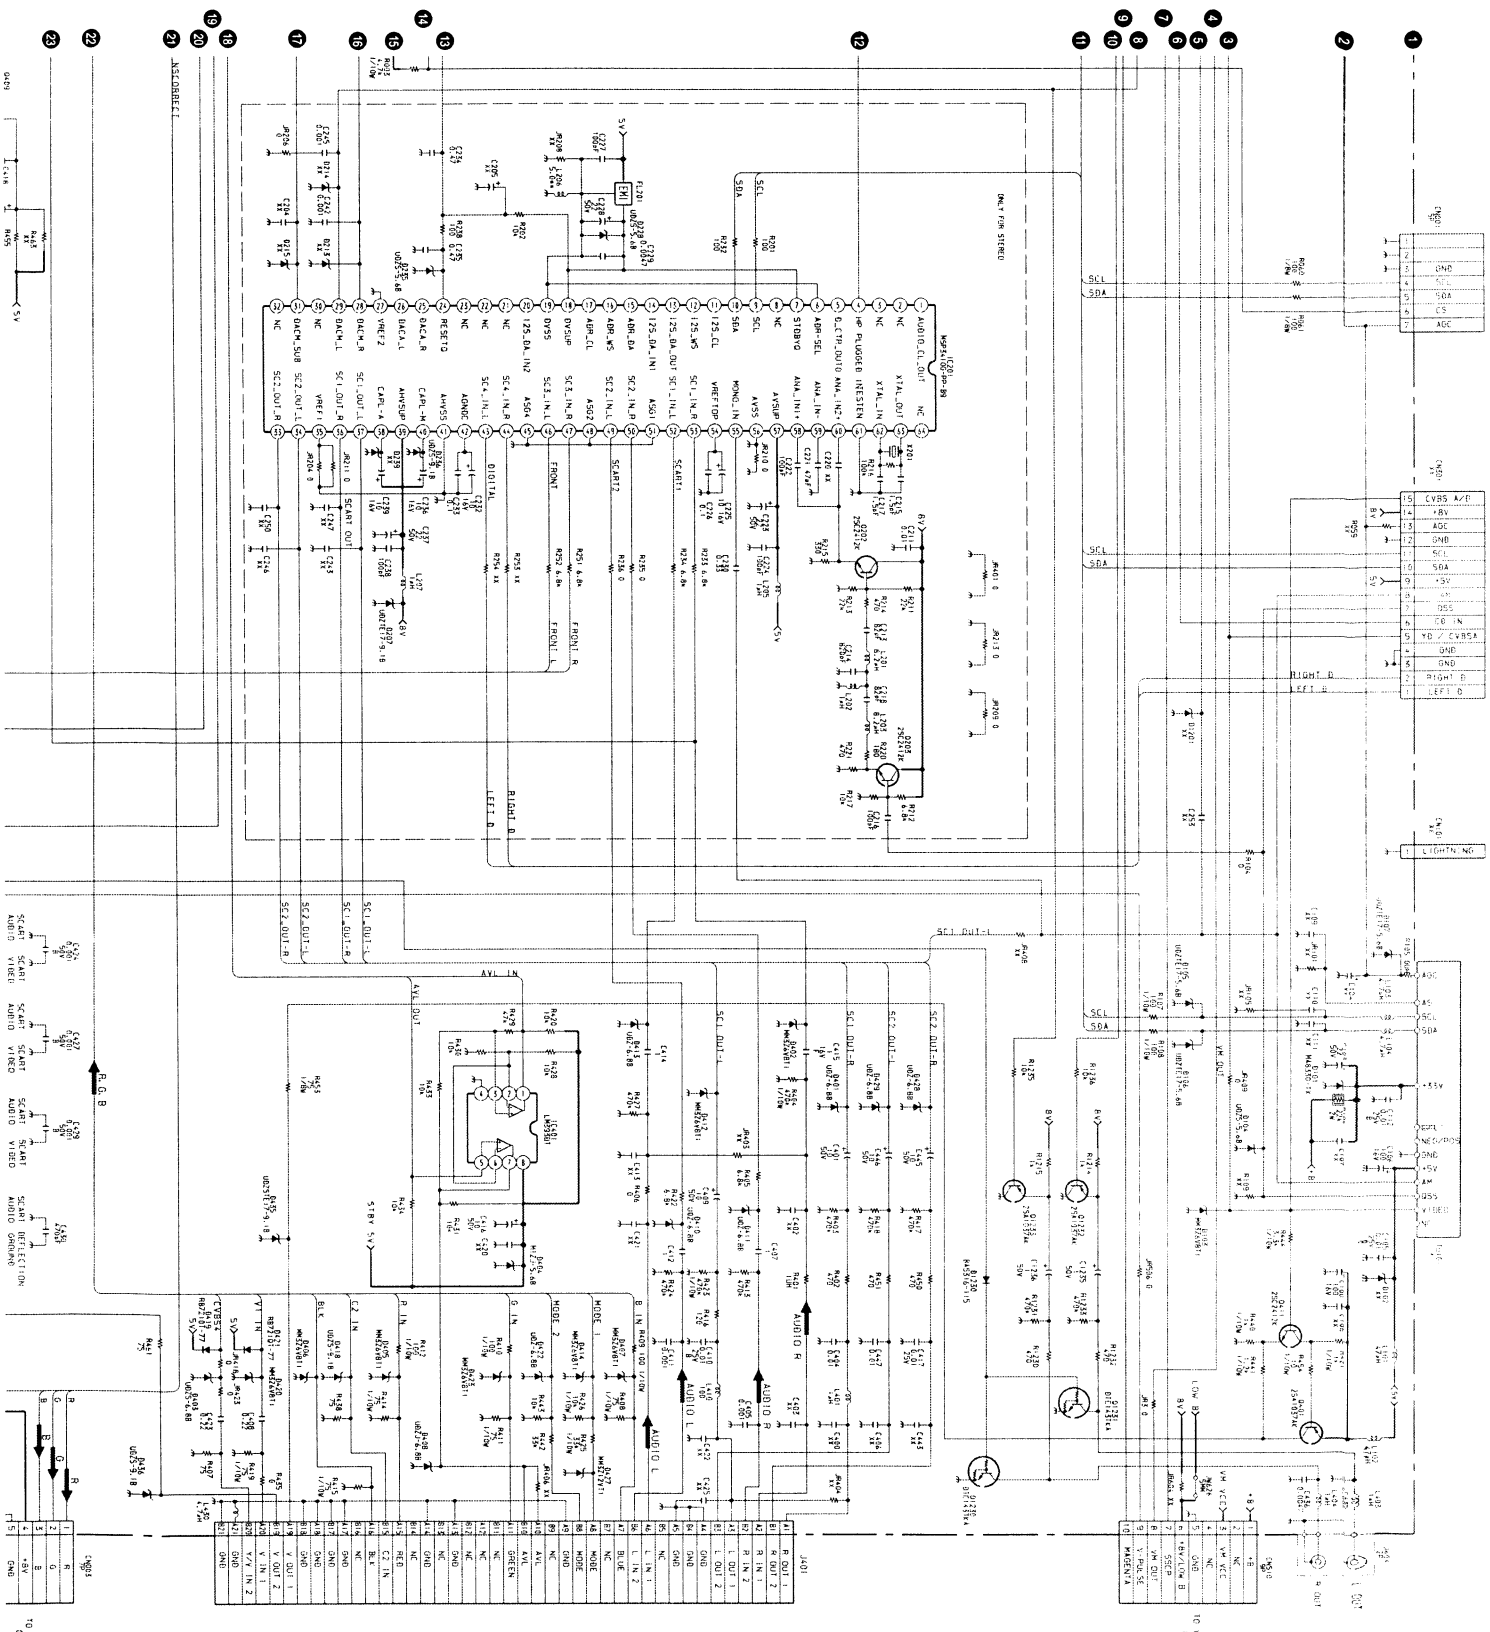

A Board Waveforms

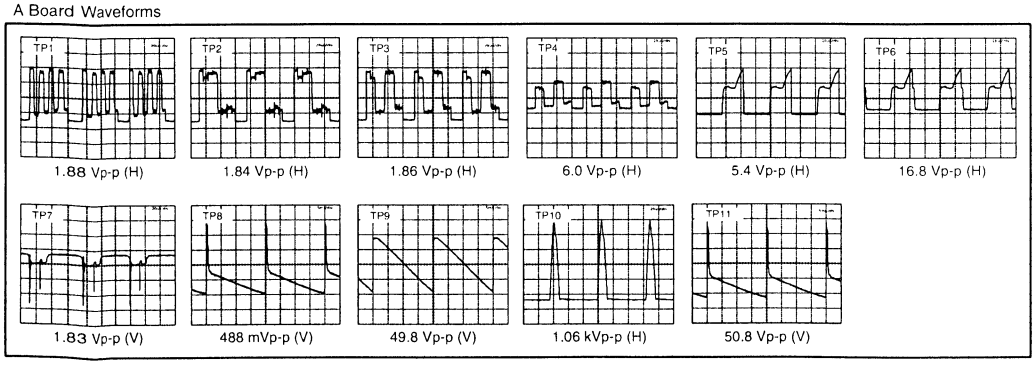

5-4. SEMICONDUCTORS

LM358N
LM393DT
LM393N
M5216P
TDA2822M
TEA2124

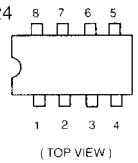

TDA9394H

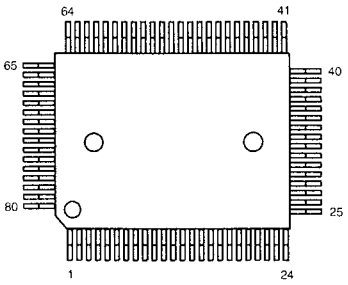

(MARKING SIDE VIEW)

IRF614-005
IRF614-037
IRF620



2SA933AS-QRT
2SAG33ASQT
2SA933AS-RT
2SC1740S-RT



MSP3410D-PP-B4

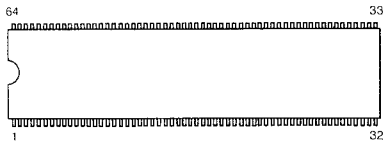

TOP209P

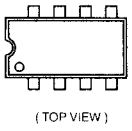

(TOP VIEW)

SE-135N
SE135N-LF4

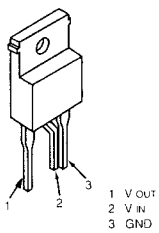

BF421-AMMO
2SA1091-O



2SC2785-HFE



STV9379

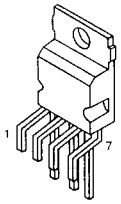

DTA144ESA
DTA144ESA-TP
DTC114EKA-T146
DTC143TKA-T146
DTC144EKA-T-146R
2SA1037K-T-146-R
R2SA1162-G
2SA1037AK-T-146-QR
2SD601A-QTX
2SC1623-L5-L6
2SC2412K-QR
2SC2412K-T-146-QR
2SC2412K-T-146-R



2SK2251-01-F19

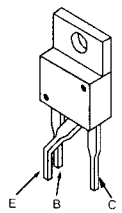

AK04-V1
AU-01Z-V1
BYD33G
BYD33G-AMMO
DINL20-TA
DINL20-U-TA2
DINL40-U-TR2
ERB44-06TP1
EGP20G
EG-1Z-V1
EL1Z
ERD28-06S
ERD28-06S
ERC06-15SL
FMN-G12S
GP08DPKG23
RGP10GPKG23
RG15GPKG23
RG1CLF-B1
RU-3AM
RU3YX-LF-C4
RU3YX-V1
RU-4AM-T3
1SS292T-77



ERA81-004TP1
ERA83-006
MTZJ-3.6A
MTZJ-T-77-2.2A
HZS9.INBZ
MTZJ-T-77-3.6B
MTZJ-T-77-4.7B
MTZJ-T-77-5.1B
MTZJ-T-77-5.6B
MTZJ-T-77-6.8A
MTZJ-T-77-8.2B
MTZJ-T-77-7.5B
MTZJ-T-77-9.1
MTZJ-T-77-9.1B
MTZJ-T-77-10
MTZJ-T-72-10A
MTZJ-T-72-10B
MTZJ-T-77-15B
MTZJ-T-77-33A
MTZJ-33C
MTZJ-7.5B
P6KE200ASY
RD3.9ES-B2
RD7.5ESB2
RD9.1ES-B3
RD10ESB2
RD15ES-T1B2
1SS119-25TD
1SS133T-77



SLA-570KT3F

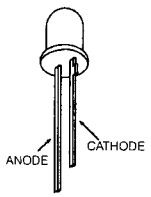

DAN202K
DAN202K-T146
MA8330-TX



1SS355TE-17
RD12SB2
UDZS-TE-17-4.7B
UDZS-TE-17-5.6B
UDZS-TE-17-6.8B
UDZS-TE-17-9.1B
UDZ-TE-17-22B

D4SB60L-F

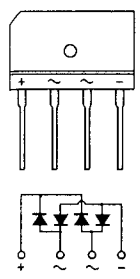

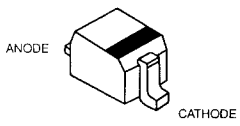

UF4005PKG23

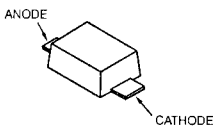

5-5 IC BLOCK DIAGRAMS

A BOARD IC604 BA41W12ST-V5

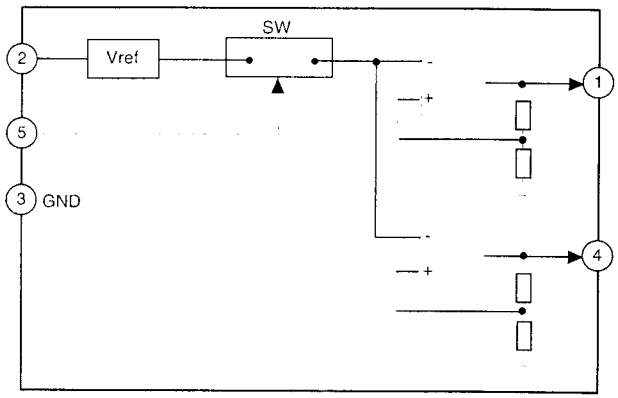

A BOARD IC401/IC531 LM393DT

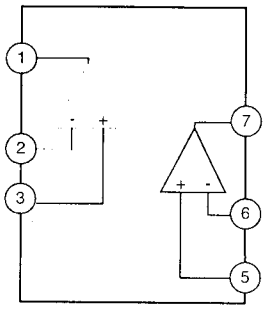

A BOARD IC601 MCZ3001D

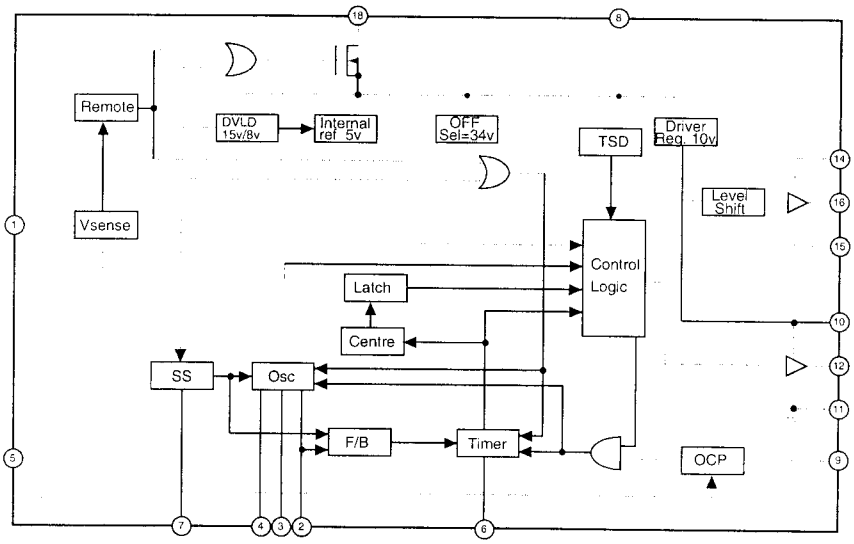

A BOARD IC1201 TDA7497

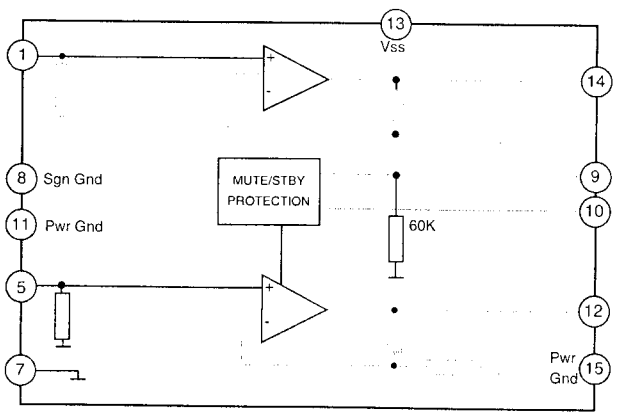

SECTION 6
EXPLODED VIEWS

NOTE :

- Items with no part number and no description are not stocked because they are seldom required for routine service.
- The construction parts of an assembled part are indicated with a collation number in the remarks column.
- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

Note : Les composants indentifies par une trame et par une marque △ sonte d'une importance critique pour la securite. Ne les remplacer que par des pieces du numero specifie.

Note : The components identified by shading and marked △ are critical for safety. Replace only with the part numbers specified in the parts list.

6-1. CHASSIS

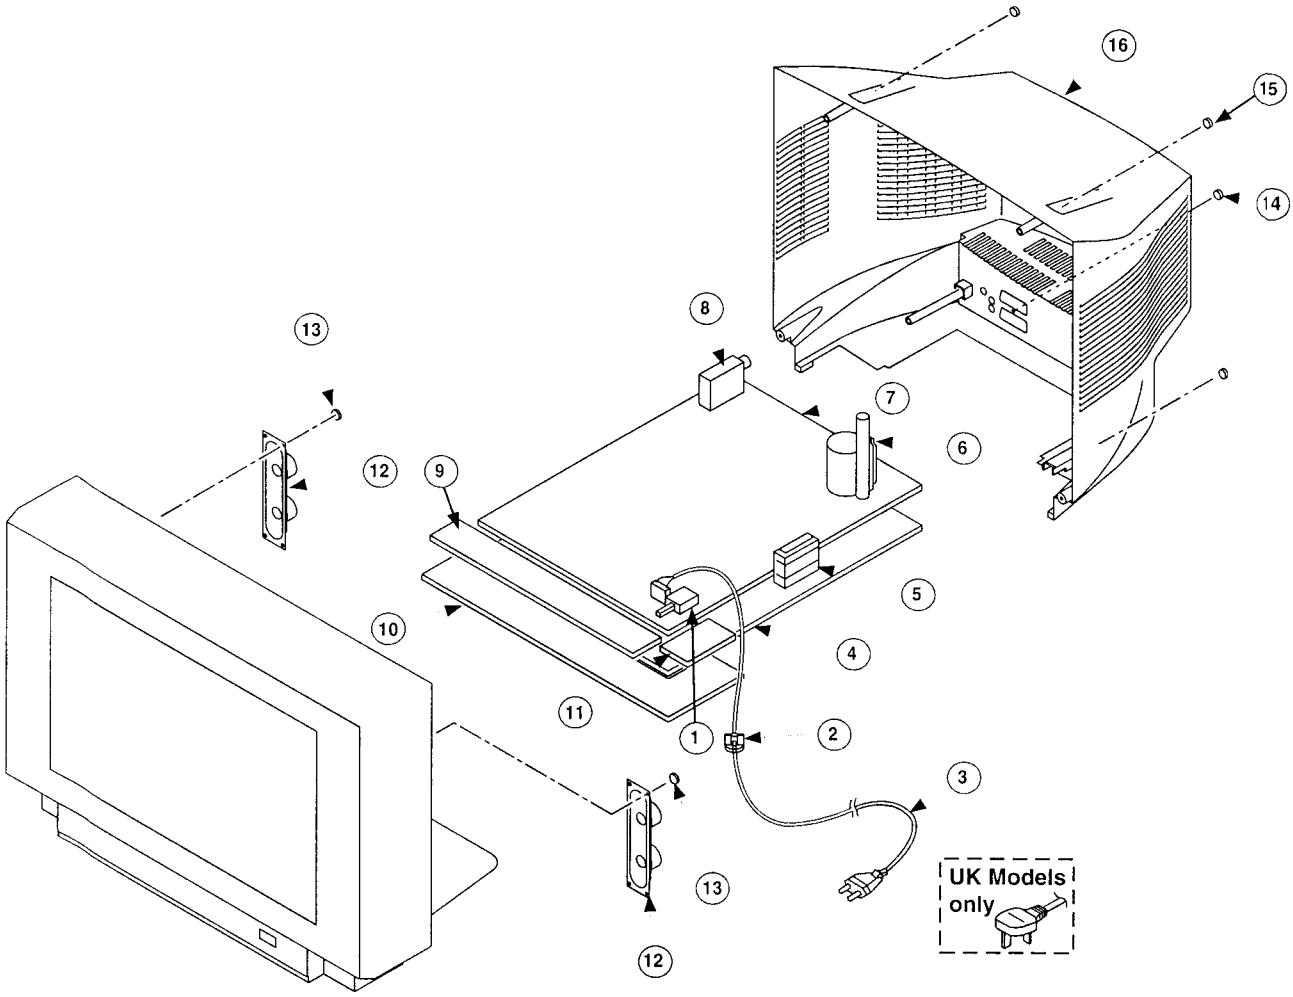

REF.NO.		PART.NO	DESCRIPTION	REMARK
1	△	1-571-433-31	SWITCH, PUSH (AC POWER)	
2		*4-202-531-01	AC CORD LOCK (SC)	
3	△	1-783-083-11	CORD POWER (WITH FILTER)	
4		*4-204-773-04	BRACKET, MAIN	
5		1-424-733-11	COIL, PFC CHOKE 65MMH	
6	△	1-453-308-31	TRANSFORMER ASSY, FLYBACK (NX4521//Z2B4)	
7		*A-1632-937-A	A BOARD, COMPLETE (KV-25FX30B)	
		*A-1632-924-A	A BOARD, COMPLETE (KV-25FX30E/25FX30K)	
		*A-1632-938-A	A BOARD, COMPLETE (KV-29FX30B)	
		*A-1632-923-A	A BOARD, COMPLETE (KV-29FX30E/29FX30K)	
8		8-598-535-10	FRONTEND (BTF-EF411)	(KV-25FX30B/29FX30)
		8-598-533-00	FRONTEND (BTF-EC411)	(KV-25FX30E/25FX30I KV-29FX30E/29FX30I)
9		*A-1646-240-A	H1 BOARD, COMPLETE	
10		4-206-017-01	BRACKET F-H	
11		*A-1624-098-A	F1 BOARD, COMPLETE	
12		1-529-988-11	SPEAKER (4.2x24CM)	
13		4-058-870-01	SCREW, (4x16) W (+) P TAPPING	
14		7-685-663-79	SCREW +BVTP 4x16 TYPE 2 IT-3	
15		7-685-663-71	SCREW +BVTP 4x16 TYPE 2 IT-3	
16		4-204-804-11	COVER, REAR (KV-25FX30)	
		4-204-772-11	COVER, REAR (KV-29FX30)	

6-2. PICTURE TUBE

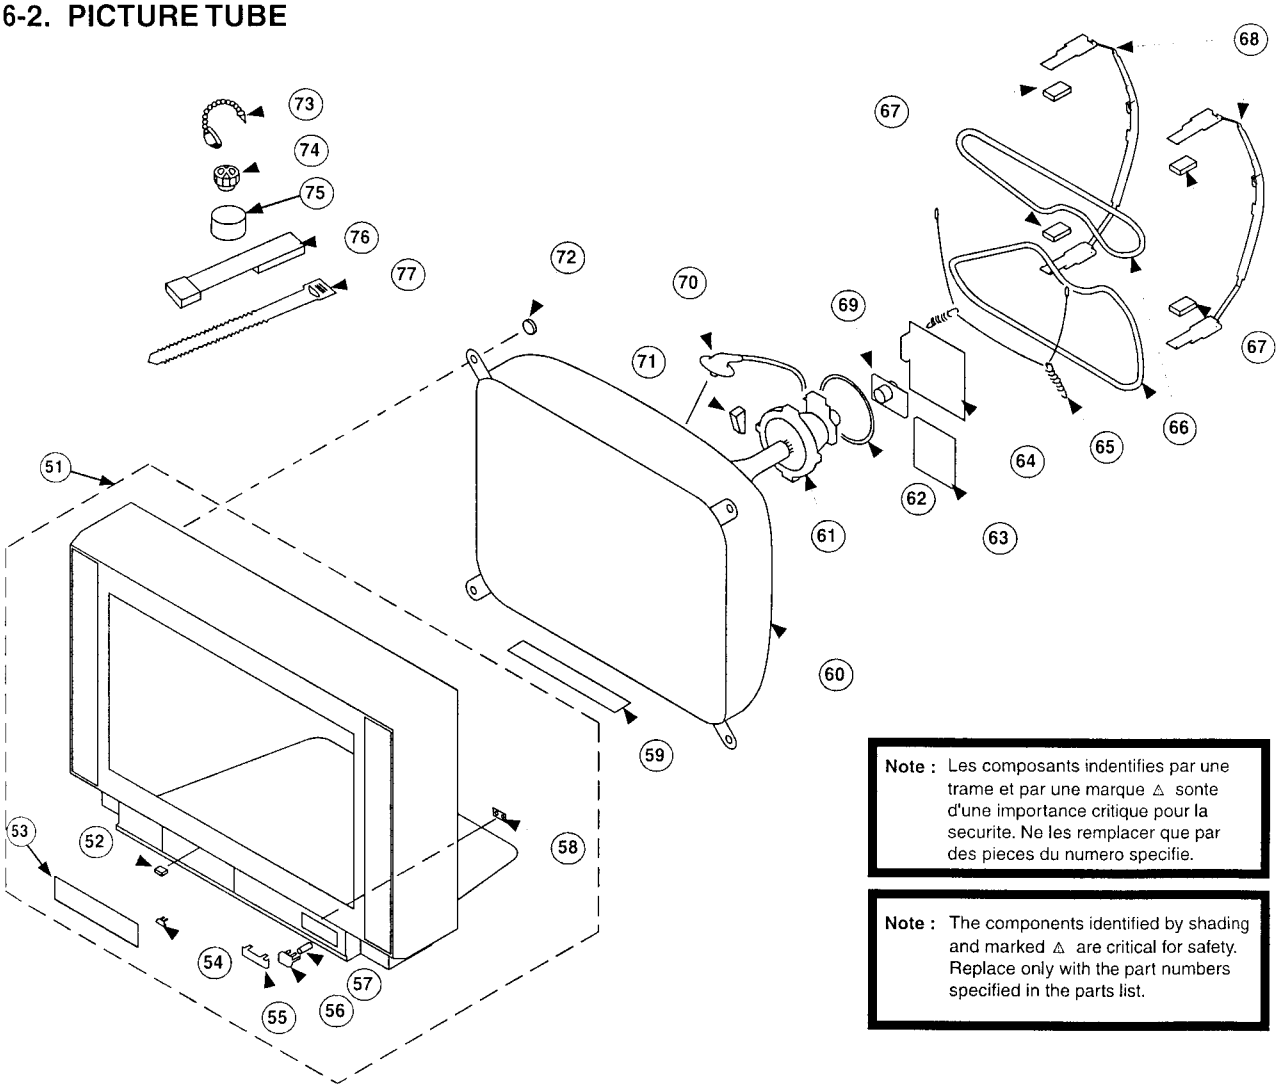

Note : Les composants indentifies par une trame et par une marque △ sonte d'une importance critique pour la securite. Ne les remplacer que par des pieces du numero specifie.

Note : The components identified by shading and marked △ are critical for safety. Replace only with the part numbers specified in the parts list.

REF.NO.		PART.NO	DESCRIPTION	REMARK
51		X-4200-716-1	BEZNET ASSY (KV-25FX30)	52-58
		X-4200-715-1	BEZNET ASSY (KV-29FX30)	52-58
52		4-072-192-02	CATCHER, PUSH	
53		4-204-770-31	DOOR, (PAINTED)	
54		3-703-035-12	SHAFT LID	
55		4-204-730-21	WINDOW, ORNAMENTAL	
56		4-204-777-21	BUTTON, POWER	
57		4-204-426-01	SPRING	
58		4-204-785-01	GUIDE, LIGHT	
59		4-204-865-21	SHEET, BLOTTING	
60	△	8-753-250-05	PICTURE TUBE (A60LPN70X) (KV-25FX30)	
	△	8-753-053-05	PICTURE TUBE (M68LNH060X) (KV-29FX30)	
61		1-451-475-11	DEFLECTION YOKE (Y25RSA) (KV-25FX30)	
		8-451-494-51	DEFLECTION YOKE (Y29RSA-L) (KV-29FX30)	
62		1-452-896-11	COIL, NA ROTATION (RT-200)	
63		*A-1645-046-A	VM BOARD, COMPLETE (KV-25FX30)	
		*A-1645-048-A	VM BOARD, COMPLETE (KV-29FX30)	

REF.NO.		PART.NO	DESCRIPTION	REMARK
64		*A-1639-021-A	C BOARD, COMPLETE	
65		4-369-318-22	SPRING, TENSION	
66	△	1-419-142-11	COIL, DEGAUSSING (KV-25FX30)	
	△	1-416-654-11	COIL, DEMAGNETIC (KV-29FX30)	
67		4-203-390-11	CUSHION, DGC	
68		*4-204-812-02	HOLDER, DGC (KV-25FX30)	
		*4-204-768-01	HOLDER, DGC (KV-29FX30)	
69		8-453-011-11	NECK ASSY, NA299M	
70	△	1-251-537-22	CAP ASSY, HIGH VOLTAGE	
71		3-704-495-02	SPACER, DY	
72		4-046-765-12	SCREW, TAPPING 7 + CROWN WASHER	
73		4-308-870-00	CLIP, LEAD WIRE	
74		1-452-094-11	MAGNET, ROTATABLE DISK; 15MM Ø	
75		1-452-032-11	MAGNET, DISK; 10MM Ø	
76		X-4387-214-1	PERMALLOY ASSY, CORRECTION	
77		3-701-007-00	BAND, BINDING	

SECTION 7
ELECTRICAL PARTS LIST

PARTS LISTING TABLE OF CONTENTS

		Page
F1 BOARD COMPLETE Parts List :	Parts common to all models listed in this manual	47
A BOARD COMMON Parts List :	Parts common to all models listed in this manual	47
A BOARD VARIANT Parts List :	Parts that belong only to the model specified	
Model		
KV-25FX30	.....	54
KV-29FX30	.....	55
C BOARD COMPLETE Parts List :	Parts common to all models listed in this manual	55
VM BOARD COMMON Parts List :	Parts common to all models listed in this manual	56
VM BOARD VARIANT Parts List :	Parts that belong only to the model specified	
Model		
KV-25FX30	.....	57
KV-29FX30	.....	58
H1 BOARD COMPLETE Parts List :	Parts common to all models listed in this manual	58
MISCELLANEOUS :	.....	59
ACCESSORIES AND PACKAGING MATERIALS :	.....	59

Note : Refer to the designated variant parts list when seeking a part indicated by an asterisk (*)
Parts indicated (XX) on the Schematic Diagram are not used in this model and therefore do not appear in the Parts List.

Note : The components identified by shading and marked △ are critical for safety. Replace only with the part numbers specified in the parts list.

F1 A

REF.NO.	PART.NO	DESCRIPTION	REMARK
***A-1624-098-A**	**F1 Board, Complete**		
	*4-374-846-01	COVER, CAPACITOR, CAP TYPE	
		< CAPACITOR >	
C6601	1-113-924-51	CERAMIC 0.0047UF	20.00% 250V
		< CONNECTOR >	
CN6601	*1-580-844-11	PIN, CONNECTOR (POWER)	
CN6602	1-695-915-21	TAB (CONTACT)	
CN6603	*1-695-292-11	PIN, CONNECTOR (POWER)	
		< FUSE >	
F6601	△ 1-576-232-31	FUSE (H.B.C.) 5A/250V	
	*1-533-725-11	HOLDER, FUSE (F6601)	
		< RESISTOR >	
R6601	1-202-719-91	SOLID 1M	10% 1/2W
		< SWITCH >	
S6601	△ 1-571-433-21	SWITCH, PUSH (AC POWER)	
		< VARISTOR >	
VDR6601	1-803-830-31	VARISTOR (ERZV14D621)	

***A-1632-937-A A Board, Complete (KV-25FX30B)**
***A-1632-924-A A Board, Complete (KV-25FX30E/ KV-25FX30K)**
***A-1632-938-A A Board, Complete (KV-29FX30B)**
***A-1632-923-A A Board, Complete (KV-29FX30E/ KV-29FX30K)**

A Board, Common Parts

	1-900-903-72	LEAD ASSY, FOCUS	
	4-382-854-01	SCREW (M3X8), P, SW (+)	
	4-382-854-01	SCREW (M3X8), P, SW (+)	
		< CAPACITOR >	
C002	1-163-233-91	CERAMIC CHIP 18PF	5.00% 50V
C004	1-163-037-91	CERAMIC CHIP 0.022UF	10.00% 50V
C005	1-126-935-91	ELECT 470UF	20.00% 10V
C006	1-163-233-91	CERAMIC CHIP 18PF	5.00% 50V
C009	1-164-004-91	CERAMIC CHIP 0.1UF	10.00% 25V
C010	1-164-005-91	CERAMIC CHIP 0.47UF	16V
C011	1-163-005-91	CERAMIC CHIP 470PF	10.00% 50V
C012	1-126-963-91	ELECT 4.7UF	20.00% 50V
C013	1-162-970-91	CERAMIC CHIP 0.01UF	10.00% 25V
C014	1-162-970-91	CERAMIC CHIP 0.01UF	10.00% 25V
C015	1-162-970-91	CERAMIC CHIP 0.01UF	10.00% 25V
C016	1-216-295-91	SHORT 0	
C018	1-162-970-91	CERAMIC CHIP 0.01UF	10.00% 25V
C019	1-162-919-91	CERAMIC 22PF	5.00% 50V
C020	1-164-004-91	CERAMIC CHIP 0.1UF	10.00% 25V
C021	1-163-037-91	CERAMIC CHIP 0.022UF	10.00% 50V
C022	1-126-935-91	ELECT 470UF	20.00% 10V
C025	1-126-935-91	ELECT 470UF	20.00% 16V
C026	1-162-970-91	CERAMIC CHIP 0.01UF	10.00% 25V
C027	1-164-004-91	CERAMIC CHIP 0.1UF	10.00% 25V
C028	1-163-009-91	CERAMIC CHIP 0.001UF	10.00% 50V
C030	1-163-009-91	CERAMIC CHIP 0.001UF	10.00% 50V
C033	1-163-009-91	CERAMIC CHIP 0.001UF	10.00% 50V
C035	1-163-009-91	CERAMIC CHIP 0.001UF	10.00% 50V
C036	1-163-009-91	CERAMIC CHIP 0.001UF	10.00% 50V
C037	1-136-244-11	FILM 0.1UF	2.00% 50V
C038	1-163-038-91	CERAMIC CHIP 0.1UF	25V
C039	1-164-505-91	CERAMIC CHIP 2.2UF	16V
C040	1-163-017-91	CERAMIC CHIP 0.0047UF	10.00% 50V
C042	1-162-625-91	CERAMIC CHIP 0.0047UF	5.00% 50V
C043	1-163-037-91	CERAMIC CHIP 0.022UF	10.00% 50V
C044	1-164-346-91	CERAMIC CHIP 1UF	16V
C045	1-164-489-91	CERAMIC CHIP 0.22UF	10.00% 16V
C046	1-163-037-91	CERAMIC CHIP 0.022UF	10.00% 50V
C047	1-126-935-91	ELECT 470UF	20.00% 16V
C053	1-164-004-91	CERAMIC CHIP 0.1UF	10.00% 25V
C055	1-126-960-91	ELECT 1UF	20.00% 50V
C100	1-126-933-91	ELECT 100UF	20.00% 16V
C103	1-126-965-91	ELECT 22UF	20.00% 50V
C105	1-162-970-91	CERAMIC CHIP 0.01UF	10.00% 25V
C106	1-126-933-91	ELECT 100UF	20.00% 16V
C112	1-162-970-91	CERAMIC CHIP 0.01UF	10.00% 25V
C211	1-162-970-91	CERAMIC CHIP 0.01UF	10.00% 25V
C213	1-163-249-91	CERAMIC CHIP 82PF	5.00% 50V
C214	1-163-139-91	CERAMIC CHIP 820PF	5.00% 50V
C215	1-163-084-91	CERAMIC CHIP 1.5PF	0.25PF 50V
C216	1-163-117-91	CERAMIC CHIP 100PF	5.00% 50V
C217	1-163-084-91	CERAMIC CHIP 1.5PF	0.25PF 50V
C218	1-163-249-91	CERAMIC CHIP 82PF	5.00% 50V
C221	1-163-109-91	CERAMIC CHIP 47PF	5.00% 50V
C222	1-163-117-91	CERAMIC CHIP 100PF	5.00% 50V
C223	1-126-965-91	ELECT 22UF	20.00% 50V
C224	1-163-117-91	CERAMIC CHIP 100PF	5.00% 50V
C225	1-126-157-91	ELECT 10UF	20.00% 16V
C226	1-164-004-91	CERAMIC CHIP 0.1UF	10.00% 25V
C227	1-163-117-91	CERAMIC CHIP 100PF	5.00% 50V
C228	1-126-965-91	ELECT 22UF	20.00% 50V
C229	1-163-017-91	CERAMIC CHIP 0.0047UF	10.00% 50V
C230	1-164-336-91	CERAMIC CHIP 0.33UF	25V
C232	1-126-157-91	ELECT 10UF	20.00% 16V
C233	1-164-004-91	CERAMIC CHIP 0.1UF	10.00% 25V
C234	1-107-823-91	CERAMIC CHIP 0.47UF	10.00% 16V

A

Note : The components identified by shading and marked △ are critical for safety. Replace only with the part numbers specified in the parts list.

REF.NO.	PART.NO	DESCRIPTION	REMARK
C235	1-164-005-91	CERAMIC CHIP 0.47UF	25V
C236	1-126-157-91	ELECT 10UF	20.00% 16V
C237	1-126-965-91	ELECT 22UF	20.00% 50V
C238	1-163-117-91	CERAMIC CHIP 100PF	5.00% 50V
C239	1-126-157-91	ELECT 10UF	20.00% 16V
C242	1-163-009-91	CERAMIC CHIP 0.001UF	10.00% 50V
C245	1-163-009-91	CERAMIC CHIP 0.001UF	10.00% 50V
C401	1-126-964-91	ELECT 10UF	20.00% 50V
C404	1-162-970-91	CERAMIC CHIP 0.01UF	10.00% 25V
C405	1-163-009-91	CERAMIC CHIP 0.001UF	10.00% 50V
C407	1-164-346-91	CERAMIC CHIP 1UF	16V
C408	1-127-715-91	CERAMIC CHIP 0.22UF	10% 16V
C409	1-126-964-91	ELECT 10UF	20.00% 50V
C410	1-162-970-91	CERAMIC CHIP 0.01UF	10.00% 25V
C411	1-163-009-91	CERAMIC CHIP 0.001UF	10.00% 50V
C412	1-164-346-91	CERAMIC CHIP 1UF	16V
C414	1-164-346-91	CERAMIC CHIP 1UF	16V
C415	1-164-346-91	CERAMIC CHIP 1UF	16V
C416	1-126-964-91	ELECT 10UF	20.00% 50V
C417	1-162-970-91	CERAMIC CHIP 0.01UF	10.00% 25V
C418	1-164-004-91	CERAMIC CHIP 0.1UF	10.00% 25V
C419	1-162-964-91	CERAMIC CHIP 0.001UF	10.00% 50V
C423	1-127-715-91	CERAMIC CHIP 0.22UF	10% 16V
C424	1-163-009-91	CERAMIC CHIP 0.001UF	10.00% 50V
C426	1-163-009-91	CERAMIC CHIP 0.001UF	10.00% 50V
C427	1-163-009-91	CERAMIC CHIP 0.001UF	10.00% 50V
C428	1-163-009-91	CERAMIC CHIP 0.001UF	10.00% 50V
C429	1-163-009-91	CERAMIC CHIP 0.001UF	10.00% 50V
C430	1-102-114-91	CERAMIC 470PF	10.00% 50V
C435	1-163-017-91	CERAMIC CHIP 0.0047UF	10.00% 50V
C436	1-163-017-91	CERAMIC CHIP 0.0047UF	10.00% 50V
C437	1-164-346-91	CERAMIC CHIP 1UF	16V
C438	1-164-346-91	CERAMIC CHIP 1UF	16V
C445	1-126-964-91	ELECT 10UF	20.00% 50V
C446	1-126-964-91	ELECT 10UF	20.00% 50V
C447	1-162-970-91	CERAMIC CHIP 0.01UF	10.00% 25V
C449	1-127-715-91	CERAMIC CHIP 0.22UF	10% 16V
C501	1-126-968-91	ELECT 100UF	20.00% 50V
C502	1-163-038-91	CERAMIC CHIP 0.1UF	25V
C503	1-115-832-91	ELECT 100UF	20.00% 50V
C504	1-106-220-91	MYLAR 0.1UF	10.00% 100V
C505	1-137-194-81	FILM 0.47UF	5.00% 50V
C506	1-162-970-91	CERAMIC CHIP 0.01UF	10.00% 25V
C508	1-163-035-91	CERAMIC CHIP 0.047UF	50V
C509	1-107-364-81	MYLAR 0.01UF	10.00% 400V
C510	1-163-005-91	CERAMIC CHIP 470PF	10.00% 50V
C513	1-107-662-91	ELECT 22UF	20.00% 250V
C515	1-104-666-91	ELECT 220UF	20.00% 25V
C517	1-115-781-91	ELECT 220UF	20.00% 25V
C518	1-106-375-81	MYLAR 0.022UF	10.00% 250V
C519	1-163-275-91	CERAMIC CHIP 0.001UF	5.00% 50V
C520	1-163-038-91	CERAMIC CHIP 0.1UF	25V
C522	1-130-495-91	MYLAR 0.1UF	5.00% 50V
C525	1-123-024-51	ELECT 33UF	160V
C531	1-126-964-91	ELECT 10UF	20.00% 50V
C535	1-163-233-91	CERAMIC CHIP 18PF	5.00% 50V
C538	1-165-319-91	CERAMIC CHIP 0.1UF	50V
C539	1-111-230-91	ELECT 1UF	20.00% 160V
C540	1-137-051-91	FILM 0.033UF	10.00% 400V
C541	1-106-383-91	MYLAR 0.047UF	10.00% 200V
C542	1-161-754-61	CERAMIC 0.001UF	10.00% 2KV
C543	1-162-134-51	CERAMIC 470PF	10.00% 2KV
C545	1-164-004-91	CERAMIC CHIP 0.1UF	10.00% 25V
C548	1-162-134-51	CERAMIC 470PF	10.00% 2KV
C550	1-107-638-91	ELECT 33UF	20.00% 160V
C552	1-102-212-91	CERAMIC 820PF	10.00% 500V
C553	1-137-417-91	MYLAR 0.0047UF	10.00% 200V
C555	1-127-717-11	FILM 19000PF	3% 1.2KV
C570	1-126-961-91	ELECT 2.2UF	20.00% 50V
C580	1-162-970-91	CERAMIC CHIP 0.01UF	10.00% 25V
C582	1-163-255-91	CERAMIC CHIP 150PF	5.00% 50V
C583	1-163-009-91	CERAMIC CHIP 0.001UF	10.00% 50V
C600	1-119-888-51	CERAMIC 2200PF	20.00% 250V
C601	△ 1-136-516-12	FILM 0.1UF	20.00% 300V
C602	△ 1-136-516-12	FILM 0.1UF	20.00% 300V
C603	△ 1-119-889-51	CERAMIC 1000PF	10.00% 250V
C604	△ 1-119-889-51	CERAMIC 1000PF	10.00% 250V
C605	1-126-935-91	ELECT 470UF	20.00% 16V
C606	1-117-751-11	ELECT(BLOCK) 220UF	20.00% 450V
C607	1-126-964-91	ELECT 10UF	20.00% 50V
C608	1-126-963-91	ELECT 4.7UF	20.00% 50V
C610	1-126-941-91	ELECT 470UF	20.00% 25V
C611	1-163-009-91	CERAMIC CHIP 0.001UF	10.00% 50V
C612	1-104-571-91	CERAMIC 0.0015UF	10.00% 2KV
C613	1-104-571-91	CERAMIC 0.0015UF	10.00% 2KV
C614	1-161-964-51	CERAMIC 0.0047UF	250V
C615	1-115-339-91	CERAMIC CHIP 0.1UF	10.00% 50V
C616	1-165-127-91	CERAMIC 470PF	10.00% 500V
C617	1-165-127-91	CERAMIC 470PF	10.00% 500V
C618	1-126-949-91	ELECT 220UF	20.00% 35V
C619	1-164-644-51	CERAMIC 330PF	10.00% 500V
C620	1-137-990-21	FILM 33000PF	3% 800V
C621	1-164-644-51	CERAMIC 330PF	10.00% 500V
C622	1-104-571-91	CERAMIC 0.0015UF	10.00% 2KV
C623	1-104-571-91	CERAMIC 0.0015UF	10.00% 2KV
C624	1-126-935-91	ELECT 470UF	20.00% 16V
C626	1-126-967-91	ELECT 47UF	20.00% 50V
C627	1-126-964-91	ELECT 10UF	20.00% 50V
C628	1-126-963-91	ELECT 4.7UF	20.00% 50V
C629	1-165-127-91	CERAMIC 470PF	10.00% 500V

REF.NO.	PART.NO	DESCRIPTION	REMARK
C630	1-107-641-41	ELECT 220UF	20.00% 160V
C631	1-126-942-91	ELECT 1000UF	20.00% 25V
C632	1-126-964-91	ELECT 10UF	20.00% 50V
C633	1-163-009-91	CERAMIC CHIP 0.001UF	10.00% 50V
C634	1-128-562-91	ELECT 47UF	20.00% 100V
C635	1-136-165-81	FILM 0.1UF	5.00% 50V
C636	1-136-479-41	FILM 0.001UF	2.00% 50V
C637	1-126-967-91	ELECT 47UF	20.00% 50V
C638	1-107-679-91	ELECT 10UF	20.00% 450V
C639	1-104-665-91	ELECT 100UF	20.00% 25V
C640	1-104-664-91	ELECT 47UF	20.00% 25V
C641	1-115-785-91	ELECT 470UF	20.00% 16V
C642	1-104-665-91	ELECT 100UF	20.00% 25V
C643	1-165-127-91	CERAMIC 470PF	10.00% 500V
C645	1-164-004-91	CERAMIC CHIP 0.1UF	10.00% 25V
C648	1-125-782-91	CERAMIC 4700PF	10.00% 1KV
C649	1-163-038-91	CERAMIC CHIP 0.1UF	25V
C657	1-126-952-91	ELECT 1000UF	20.00% 35V
C1201	1-126-972-51	ELECT 1000UF	20.00% 50V
C1203	1-535-143-61	LEAD,JUMPER (5.0MM)	
C1207	1-126-960-91	ELECT 1UF	20.00% 50V
C1209	1-163-033-91	CERAMIC CHIP 0.022UF	50V
C1210	1-126-960-91	ELECT 1UF	20.00% 50V
C1211	1-163-033-91	CERAMIC CHIP 0.022UF	50V
C1213	1-164-004-91	CERAMIC CHIP 0.1UF	10.00% 25V
C1215	1-126-952-91	ELECT 1000UF	20.00% 35V
C1218	1-109-982-91	CERAMIC CHIP 1UF	10.00% 10V
C1219	1-104-666-91	ELECT 220UF	20.00% 25V
C1221	1-115-339-91	CERAMIC CHIP 0.1UF	10.00% 50V
C1228	1-126-952-91	ELECT 1000UF	20.00% 35V
C1229	1-163-001-91	CERAMIC CHIP 220PF	10.00% 50V
C1230	1-163-001-91	CERAMIC CHIP 220PF	10.00% 50V
C1235	1-126-960-91	ELECT 1UF	20.00% 50V
C1236	1-126-960-91	ELECT 1UF	20.00% 50V

< CONNECTOR >

CN001	*1-564-508-51	PLUG, CONNECTOR 5P
CN003	*1-564-510-51	PLUG, CONNECTOR 7P
CN405	*1-564-510-51	PLUG, CONNECTOR 7P
CN406	*1-564-511-51	PLUG, CONNECTOR 8P
CN501	1-580-798-32	CONNECTOR PIN (DY)
CN503	*1-564-506-51	PLUG, CONNECTOR 3P
CN506	1-695-915-21	TAB (CONTACT)
CN508	*1-564-508-11	PLUG, CONNECTOR 5P
CN509	1-695-915-21	TAB (CONTACT)
CN510	1-691-771-11	PLUG (MICRO CONNECTOR) 9P
CN602	1-508-765-13	PIN, CONNECTOR (5MM PITCH) 3P
CN603	*1-508-786-13	PIN, CONNECTOR (5MM PITCH) 2P
CN605	*1-691-960-11	PIN, CONNECTOR (PC BOARD) 3P
CN606	*1-695-292-11	PIN, CONNECTOR (POWER)
CN1200	*1-564-509-51	PLUG, CONNECTOR 6P
CN1201	*1-564-507-51	PLUG, CONNECTOR 4P

< DIODE >

D001	8-719-069-55	DIODE UDZSTE-175.6B
D002	8-719-069-55	DIODE UDZSTE-175.6B
D003	8-719-109-69	DIODE RD3.6ES-B2
D005	8-719-929-15	DIODE HZS9.1NB2
D006	8-719-109-89	DIODE RD5.6ESB2
D007	8-719-069-55	DIODE UDZSTE-175.6B
D008	8-719-074-43	DIODE BAS316-115
D010	8-719-074-43	DIODE BAS316-115
D011	8-719-074-43	DIODE BAS316-115
D012	8-719-929-15	DIODE HZS9.1NB2
D013	8-719-109-69	DIODE RD3.6ES-B2
D014	1-216-295-11	SHORT 0
D016	8-719-109-89	DIODE RD5.6ESB2
D018	8-719-109-69	DIODE HZS9.1NB2
D019	8-719-069-57	DIODE UDZ-TE-17-6.8B
D021	8-719-978-33	DIODE DTZ-TT11-6.8B
D022	8-719-069-55	DIODE UDZSTE-175.6B
D035	8-719-069-55	DIODE UDZSTE-175.6B
D036	8-719-069-55	DIODE UDZSTE-175.6B
D051	8-719-081-98	DIODE MM3Z6V8T1
D101	8-719-977-81	DIODE DTZ33B
D103	8-719-081-98	DIODE MM3Z6V8T1
D104	8-719-069-55	DIODE UDZSTE-175.6B
D105	8-719-069-55	DIODE UDZSTE-175.6B
D106	8-719-069-55	DIODE UDZSTE-175.6B
D107	8-719-069-55	DIODE UDZSTE-175.6B
D207	8-719-069-60	DIODE UDZSTE-179.1B
D210	8-719-069-55	DIODE UDZSTE-175.6B
D211	8-719-069-60	DIODE UDZSTE-179.1B
D212	8-719-914-43	DIODE DAN202K
D228	8-719-069-55	DIODE UDZSTE-175.6B
D235	8-719-069-55	DIODE UDZSTE-175.6B
D236	8-719-069-60	DIODE UDZSTE-179.1B
D401	8-719-978-33	DIODE DTZ-TT11-6.8B
D402	8-719-081-98	DIODE MM3Z6V8T1
D403	8-719-978-33	DIODE DTZ-TT11-6.8B
D404	8-719-109-89	DIODE RD5.6ESB2
D405	8-719-081-98	DIODE MM3Z6V8T1
D406	8-719-081-98	DIODE MM3Z6V8T1
D407	8-719-081-98	DIODE MM3Z6V8T1
D408	8-719-978-33	DIODE DTZ-TT11-6.8B
D410	8-719-978-33	DIODE DTZ-TT11-6.8B
D411	8-719-978-33	DIODE DTZ-TT11-6.8B
D412	8-719-081-98	DIODE MM3Z6V8T1
D413	8-719-978-33	DIODE DTZ-TT11-6.8B

A

REF.NO.	PART.NO	DESCRIPTION	REMARK
D414	8-719-081-98	DIODE MM3Z6V8T1	
D418	8-719-069-60	DIODE UDZSTE-179.1B	
D419	8-719-049-26	DIODE RB721Q	
D420	8-719-081-98	DIODE MM3Z6V8T1	
D421	8-719-049-26	DIODE RB721Q	
D422	8-719-978-33	DIODE DTZ-TT11-6.8B	
D423	8-719-081-98	DIODE MM3Z6V8T1	
D424	8-719-069-60	DIODE UDZSTE-179.1B	
D427	8-719-082-01	DIODE MM3Z12VT1	
D428	8-719-978-33	DIODE DTZ-TT11-6.8B	
D429	8-719-978-33	DIODE DTZ-TT11-6.8B	
D435	8-719-069-60	DIODE UDZSTE-179.1B	
D436	8-719-069-60	DIODE UDZSTE-179.1B	
D501	8-719-979-85	DIODE EGP20G	
D502	8-719-081-90	DIODE PDZ22B-115	
D503	8-719-069-55	DIODE UDZSTE-175.6B	
D504	8-719-074-43	DIODE BAS316-115	
D506	8-719-908-03	DIODE GP08D	
D507	8-719-070-59	DIODE PDZ6.8B-115	
D512	8-719-302-43	DIODE EL1Z	
D513	8-719-979-85	DIODE EGP20G	
D514	8-719-979-85	DIODE EGP20G	
D534	8-719-302-43	DIODE EL1Z	
D535	8-719-908-03	DIODE GP08D	
D536	8-719-945-80	DIODE ERC06-15S	
D537	8-719-070-62	DIODE PDZ9.1B-115	
D538	8-719-908-03	DIODE GP08D	
D539	8-719-312-10	DIODE RU4AM-T3	
D540	8-719-908-03	DIODE GP08D	
D541	1-216-295-91	SHORT 0	
D573	8-719-082-00	DIODE MM3Z4V7T1	
D601	8-719-510-53	DIODE D4SB60L	
D602	8-719-911-19	DIODE 1SS119-25	
D604	8-719-083-94	DIODE FUF4005	
D608	8-719-063-70	DIODE D1NL20U	
D610	8-719-110-41	DIODE RD15ES-B2	
D611	8-719-991-33	DIODE 1SS133T-77	
D612	8-719-991-33	DIODE 1SS133T-77	
D613	8-719-911-19	DIODE 1SS119-25	
D614	8-719-077-76	DIODE D2SB60A-F04	
D615	8-719-929-15	DIODE HZS9.1NB2	
D618	8-719-022-97	DIODE D2S4MF	
D619	8-719-022-97	DIODE D2S4MF	
D620	8-719-109-85	DIODE RD5.1ESB2	
D621	8-719-109-89	DIODE RD5.6ESB2	
D623	8-719-911-19	DIODE 1SS119-25	
D624	8-719-063-70	DIODE D1NL20U	
D625	8-719-062-39	DIODE D4SBL20UF1	
D627	8-719-063-70	DIODE D1NL20U	
D628	8-719-083-49	DIODE P6KE200ASY	
D629	8-719-083-94	DIODE FUF4005	
D631	8-719-921-63	DIODE MTZJ-7.5B	
D632	8-719-063-70	DIODE D1NL20U	
D633	8-719-109-69	DIODE RD3.6ES-B2	
D638	8-719-083-92	DIODE YG802C09RF122	
D640	8-719-921-63	DIODE MTZJ-7.5B	
D649	8-719-056-83	DIODE UDZ-TE-17-6.8B	
D1204	8-719-069-55	DIODE UDZSTE-175.6B	
D1205	8-719-081-90	DIODE PDZ22B-115	
D1230	8-719-074-43	DIODE BAS316-115	
		< FERRITE BEAD >	
FB601	1-410-397-31	FERRITE 1.1UH	
FB602	1-410-397-31	FERRITE 1.1UH	
FB604	1-410-397-31	FERRITE 1.1UH	
FB605	1-410-397-31	FERRITE 1.1UH	
FB606	1-412-911-21	FERRITE 0UH	
FB607	1-412-911-21	FERRITE 0UH	
		< FILTER >	
FL201	1-239-803-21	FILTER, EMI	
		< IC >	
IC001	6-800-338-01	IC TDA9394H/N1/4/0334	
IC004	8-759-575-72	IC M24C08-WMN6T	
IC201	6-700-373-01	IC MSP3410G-PP-B9	
IC401	8-759-665-11	IC LM393DT	
IC501	8-759-192-71	IC STV9379	
IC531	8-759-665-11	IC LM393DT	
IC601	8-759-670-30	IC MCZ3001D	
IC602	8-749-016-19	IC SE135N-LF4	
IC604	8-759-668-87	IC BA41W12ST-V5	
IC608	8-759-591-02	IC L78L33ABZ-AP	
IC609	8-759-468-89	IC TOP209P	
IC1201	8-759-831-57	IC TDA7495S	
		< JACK >	
J401	1-766-296-21	CONNECTOR, DUAL SCART	
J404	1-784-632-11	JACK, PIN 2P	
		< COIL >	
L001	1-408-611-21	INDUCTOR 47UH	
L002	1-414-938-21	INDUCTOR 47UH	
L004	1-408-611-21	INDUCTOR 47UH	
L006	1-408-611-21	INDUCTOR 47UH	
L027	1-216-295-91	SHORT 0	
L101	1-412-533-41	INDUCTOR 47UH	
L102	1-408-611-21	INDUCTOR 47UH	
L103	1-412-002-41	INDUCTOR 4.7UH	

Note : The components identified by shading and marked △ are critical for safety. Replace only with the part numbers specified in the parts list.

A

REF.NO.	PART.NO	DESCRIPTION	REMARK
L104	1-412-002-41	INDUCTOR 4.7UH	
L201	1-408-602-21	INDUCTOR 8.2UH	
L202	1-408-591-21	INDUCTOR 1UH	
L203	1-408-602-21	INDUCTOR 8.2UH	
L205	1-408-591-21	INDUCTOR 1UH	
L206	1-535-143-61	LEAD, JUMPER (5.0MM)	
L207	1-408-591-21	INDUCTOR 1UH	
L401	1-410-993-42	INDUCTOR 1UH	
L403	1-410-993-42	INDUCTOR 1UH	
L404	1-410-993-42	INDUCTOR 1UH	
L405	1-535-143-61	LEAD, JUMPER (5.0MM)	
L406	1-535-143-61	LEAD, JUMPER (5.0MM)	
L410	1-216-025-91	RES-CHIP 100 5%	1/10W
L430	1-412-002-41	INDUCTOR 4.7UH	
L446	1-216-295-91	SHORT 0	
L448	1-216-295-91	SHORT 0	
L501	1-414-187-31	INDUCTOR 47UH	
L502	1-412-529-41	INDUCTOR 22UH	
L503	1-412-521-41	INDUCTOR 4.7UH	
L504	1-535-143-61	LEAD, JUMPER (5.0MM)	
L505	1-412-542-41	INDUCTOR 270UH	
L507	1-412-533-41	INDUCTOR 47UH	
L532	1-412-553-41	INDUCTOR 3.3MH	
L533	1-406-989-11	INDUCTOR 10MH	
L535	1-459-111-21	INDUCTOR 10MH	
L601	1-408-603-21	INDUCTOR 10UH	
L602	1-408-611-21	INDUCTOR 47UH	
L603	1-535-143-61	LEAD, JUMPER (5.0MM)	
L1201	1-535-143-61	LEAD, JUMPER (5.0MM)	
L1203	1-535-143-61	LEAD, JUMPER (5.0MM)	
		< PHOTO COUPLER >	
PH601	△ 8-749-016-21	IC TCET1103G	
		< IC LINK >	
PS1201	1-533-597-31	LINK, IC	
		< TRANSISTOR >	
Q002	8-729-027-56	TRANSISTOR DTC143TKA-T146	
Q013	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
Q014	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
Q049	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
Q202	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
Q203	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
Q212	8-729-422-33	TRANSISTOR 2SD601A-Q-TX	
Q401	8-729-026-49	TRANSISTOR 2SA1037AK-T146	
Q409	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
Q411	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
Q532	8-729-053-33	TRANSISTOR IRF614-037	
Q533	8-729-049-08	TRANSISTOR BU2515DX-127	
Q535	8-729-053-33	TRANSISTOR IRF614-037	
Q570	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
Q601	8-729-026-49	TRANSISTOR 2SA1037AK-T146	
Q602	8-729-119-78	TRANSISTOR 2SC2785-HFE	
Q603	8-729-029-56	TRANSISTOR DTA144ESA	
Q604	8-729-030-02	TRANSISTOR DTC144ESA	
Q606	8-729-053-36	TRANSISTOR 2SK2640-01MR	
Q607	8-729-053-36	TRANSISTOR 2SK2640-01MR	
Q608	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
Q609	8-729-026-49	TRANSISTOR 2SA1037AK-T146	
Q1210	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
Q1211	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
Q1230	8-729-027-56	TRANSISTOR DTC143TKA-T146	
Q1231	8-729-027-56	TRANSISTOR DTC143TKA-T146	
Q1232	8-729-026-49	TRANSISTOR 2SA1037AK-T146	
Q1233	8-729-026-49	TRANSISTOR 2SA1037AK-T146	
		< RESISTOR >	
JR3	1-216-296-91	SHORT 0	
JR4	1-216-295-91	SHORT 0	
JR5	1-216-295-91	SHORT 0	
JR7	1-216-295-91	SHORT 0	
JR9	1-216-295-91	SHORT 0	
JR10	1-216-295-91	SHORT 0	
JR16	1-216-296-91	SHORT 0	
JR17	1-216-295-91	SHORT 0	
JR21	1-216-818-91	RES-CHIP 560 5%	1/10W
JR24	1-216-295-91	SHORT 0	
JR25	1-216-295-91	SHORT 0	
JR26	1-216-295-91	SHORT 0	
JR204	1-216-296-91	SHORT 0	
JR206	1-216-296-91	SHORT 0	
JR209	1-216-295-91	SHORT 0	
JR210	1-216-295-91	SHORT 0	
JR211	1-216-296-91	SHORT 0	
JR213	1-216-295-91	SHORT 0	
JR401	1-216-295-91	SHORT 0	
JR409	1-216-295-91	SHORT 0	
JR418	1-216-296-91	SHORT 0	
JR419	1-216-295-91	SHORT 0	
JR423	1-216-296-91	SHORT 0	
JR506	1-216-296-91	SHORT 0	
JR508	1-216-296-91	SHORT 0	
JR601	1-216-295-91	SHORT 0	
JR609	1-216-295-91	SHORT 0	
JR610	1-216-296-91	SHORT 0	
JR1209	1-216-295-91	SHORT 0	
R001	1-216-295-91	SHORT 0	

A

REF.NO.	PART.NO	DESCRIPTION			REMARK
R003	1-216-065-91	RES-CHIP	4.7K	5%	1/10W
R004	1-216-033-91	RES-CHIP	220	5%	1/10W
R005	1-216-041-91	RES-CHIP	470	5%	1/10W
R006	1-216-025-91	RES-CHIP	100	5%	1/10W
R007	1-216-025-91	RES-CHIP	100	5%	1/10W
R008	1-216-025-91	RES-CHIP	100	5%	1/10W
R009	1-216-049-91	RES-CHIP	1K	5%	1/10W
R010	1-216-049-91	RES-CHIP	1K	5%	1/10W
R011	1-216-295-91	SHORT	0		
R012	1-216-121-91	RES-CHIP	1M	5%	1/10W
R014	1-216-069-91	RES-CHIP	6.8K	5%	1/10W
R015	1-216-198-91	RES-CHIP	1K	5%	1/8W
R017	1-216-025-91	RES-CHIP	100	5%	1/10W
R018	1-208-820-91	METAL CHIP	39K	0.5%	1/10W
R020	1-216-077-91	RES-CHIP	15K	5%	1/10W
R022	1-216-089-91	RES-CHIP	47K	5%	1/10W
R023	1-216-035-91	RES-CHIP	270	5%	1/10W
R024	1-216-025-91	RES-CHIP	100	5%	1/10W
R025	1-216-025-91	RES-CHIP	100	5%	1/10W
R026	1-216-025-91	RES-CHIP	100	5%	1/10W
R027	1-216-025-91	RES-CHIP	100	5%	1/10W
R028	1-216-025-91	RES-CHIP	100	5%	1/10W
R029	1-216-061-91	RES-CHIP	3.3K	5%	1/10W
R030	1-216-821-91	RES-CHIP	1K	5%	1/16W
R031	1-216-061-91	RES-CHIP	3.3K	5%	1/10W
R032	1-216-061-91	RES-CHIP	3.3K	5%	1/10W
R033	1-216-073-91	RES-CHIP	10K	5%	1/10W
R034	1-216-119-91	RES-CHIP	820K	5%	1/10W
R035	1-216-101-91	RES-CHIP	150K	5%	1/10W
R036	1-216-073-91	RES-CHIP	10K	5%	1/10W
R039	1-216-065-91	RES-CHIP	4.7K	5%	1/10W
R040	1-216-033-91	RES-CHIP	220	5%	1/10W
R041	1-216-025-91	RES-CHIP	100	5%	1/10W
R042	1-216-025-91	RES-CHIP	100	5%	1/10W
R044	1-216-073-91	RES-CHIP	10K	5%	1/10W
R045	1-216-025-91	RES-CHIP	100	5%	1/10W
R046	1-216-025-91	RES-CHIP	100	5%	1/10W
R047	1-216-025-91	RES-CHIP	100	5%	1/10W
R048	1-216-073-91	RES-CHIP	10K	5%	1/10W
R049	1-216-049-91	RES-CHIP	1K	5%	1/10W
R050	1-216-025-91	RES-CHIP	100	5%	1/10W
R051	1-216-295-91	SHORT	0		
R052	1-216-295-91	SHORT	0		
R053	1-216-077-91	RES-CHIP	15K	5%	1/10W
R055	1-216-025-91	RES-CHIP	100	5%	1/10W
R056	1-216-081-91	RES-CHIP	22K	5%	1/10W
R060	1-216-025-91	RES-CHIP	100	5%	1/10W
R061	1-216-025-91	RES-CHIP	100	5%	1/10W
R070	1-216-025-91	RES-CHIP	100	5%	1/10W
R071	1-216-049-91	RES-CHIP	1K	5%	1/10W
R072	1-216-295-91	SHORT	0		
R074	1-216-073-91	RES-CHIP	10K	5%	1/10W
R090	1-216-057-91	RES-CHIP	2.2K	5%	1/10W
R092	1-216-073-91	RES-CHIP	10K	5%	1/10W
R094	1-216-025-91	RES-CHIP	100	5%	1/10W
R095	1-216-065-91	RES-CHIP	4.7K	5%	1/10W
R096	1-216-073-91	RES-CHIP	10K	5%	1/10W
R101	1-216-093-91	RES-CHIP	68K	5%	1/10W
R102	1-216-097-91	RES-CHIP	100K	5%	1/10W
R103	1-216-210-91	RES-CHIP	3.3K	5%	1/8W
R104	1-216-295-91	SHORT	0		
R105	1-414-813-91	FERRITE	0UH		
R106	1-215-900-91	METAL OXIDE	22K	5%	2W
R107	1-216-025-91	RES-CHIP	100	5%	1/10W
R108	1-216-025-91	RES-CHIP	100	5%	1/10W
R201	1-216-025-91	RES-CHIP	100	5%	1/10W
R202	1-216-073-91	RES-CHIP	10K	5%	1/10W
R211	1-216-081-91	RES-CHIP	22K	5%	1/10W
R212	1-216-069-91	RES-CHIP	6.8K	5%	1/10W
R213	1-216-081-91	RES-CHIP	22K	5%	1/10W
R214	1-216-041-91	RES-CHIP	470	5%	1/10W
R215	1-216-037-91	RES-CHIP	330	5%	1/10W
R216	1-216-097-91	RES-CHIP	100K	5%	1/10W
R217	1-216-222-91	RES-CHIP	10K	5%	1/8W
R220	1-216-031-91	RES-CHIP	180	5%	1/10W
R221	1-216-190-91	RES-CHIP	470	5%	1/8W
R232	1-216-025-91	RES-CHIP	100	5%	1/10W
R233	1-216-069-91	RES-CHIP	6.8K	5%	1/10W
R234	1-216-069-91	RES-CHIP	6.8K	5%	1/10W
R235	1-216-295-91	SHORT	0		
R236	1-216-295-91	SHORT	0		
R238	1-216-025-91	RES-CHIP	100	5%	1/10W
R246	1-260-107-91	CARBON	4.7K	5%	1/2W
R248	1-249-429-91	CARBON	10K	5%	1/4W
R249	1-216-097-91	RES-CHIP	100K	5%	1/10W
R250	1-216-230-91	RES-CHIP	22K	5%	1/8W
R251	1-216-069-91	RES-CHIP	6.8K	5%	1/10W
R252	1-216-069-91	RES-CHIP	6.8K	5%	1/10W
R401	1-410-993-42	INDUCTOR	1UH		
R402	1-216-041-91	RES-CHIP	470	5%	1/10W
R403	1-216-113-91	RES-CHIP	470K	5%	1/10W
R404	1-216-113-91	RES-CHIP	470K	5%	1/10W
R405	1-216-831-91	RES-CHIP	6.8K	5%	1/10W
R406	1-216-296-91	SHORT	0		
R407	1-216-022-91	RES-CHIP	75	5%	1/10W
R408	1-216-022-91	RES-CHIP	75	5%	1/10W
R409	1-216-025-91	RES-CHIP	100	5%	1/10W
R410	1-216-025-91	RES-CHIP	100	5%	1/10W
R411	1-216-022-91	RES-CHIP	75	5%	1/10W
R412	1-216-025-91	RES-CHIP	100	5%	1/10W

REF.NO.	PART.NO	DESCRIPTION			REMARK
R413	1-216-113-91	RES-CHIP	470K	5%	1/10W
R414	1-216-022-91	RES-CHIP	75	5%	1/10W
R415	1-216-022-91	RES-CHIP	75	5%	1/10W
R416	1-216-027-91	RES-CHIP	120	5%	1/10W
R417	1-216-113-91	RES-CHIP	470K	5%	1/10W
R418	1-216-113-91	RES-CHIP	470K	5%	1/10W
R419	1-216-022-91	RES-CHIP	75	5%	1/10W
R420	1-216-073-91	RES-CHIP	10K	5%	1/10W
R421	1-216-049-91	RES-CHIP	1K	5%	1/10W
R422	1-216-831-91	RES-CHIP	6.8K	5%	1/10W
R423	1-216-113-91	RES-CHIP	470K	5%	1/10W
R424	1-216-113-91	RES-CHIP	470K	5%	1/10W
R425	1-216-085-91	RES-CHIP	33K	5%	1/10W
R426	1-216-073-91	RES-CHIP	10K	5%	1/10W
R427	1-216-113-91	RES-CHIP	470K	5%	1/10W
R428	1-216-073-91	RES-CHIP	10K	5%	1/10W
R429	1-216-089-91	RES-CHIP	47K	5%	1/10W
R430	1-216-073-91	RES-CHIP	10K	5%	1/10W
R431	1-216-073-91	RES-CHIP	10K	5%	1/10W
R433	1-216-073-91	RES-CHIP	10K	5%	1/10W
R434	1-216-073-91	RES-CHIP	10K	5%	1/10W
R435	1-216-295-91	SHORT	0		
R438	1-216-022-91	RES-CHIP	75	5%	1/10W
R439	1-216-022-91	RES-CHIP	75	5%	1/10W
R440	1-216-049-91	RES-CHIP	1K	5%	1/10W
R441	1-216-051-91	RES-CHIP	1.2K	5%	1/10W
R442	1-216-085-91	RES-CHIP	33K	5%	1/10W
R443	1-216-073-91	RES-CHIP	10K	5%	1/10W
R444	1-216-061-91	RES-CHIP	3.3K	5%	1/10W
R446	1-216-113-91	RES-CHIP	470K	5%	1/10W
R447	1-216-295-91	SHORT	0		
R448	1-216-113-91	RES-CHIP	470K	5%	1/10W
R449	1-216-295-91	SHORT	0		
R450	1-216-041-91	RES-CHIP	470	5%	1/10W
R451	1-216-041-91	RES-CHIP	470	5%	1/10W
R453	1-216-171-91	RES-CHIP	75	5%	1/8W
R454	1-216-001-91	RES-CHIP	10	5%	1/10W
R455	1-216-295-91	SHORT	0		
R460	1-216-049-91	RES-CHIP	1K	5%	1/10W
R461	1-216-022-91	RES-CHIP	75	5%	1/10W
R462	1-216-029-91	RES-CHIP	150	5%	1/10W
R500	1-216-061-91	RES-CHIP	3.3K	5%	1/10W
R501	1-216-091-91	RES-CHIP	56K	5%	1/10W
R502	1-216-073-91	RES-CHIP	10K	5%	1/10W
R503	1-215-888-21	METAL OXIDE	220	5%	2W
R504	1-249-385-91	CARBON	2.2	5%	1/4W
R505	1-216-667-91	METAL CHIP	4.7K	0.5%	1/10W
R506	1-208-796-91	METAL CHIP	3.9K	0.5%	1/10W
R507	1-216-349-51	METAL OXIDE	1	5%	1W
R508	1-216-667-91	METAL CHIP	4.7K	0.5%	1/10W
R509	1-208-796-91	METAL CHIP	3.9K	0.5%	1/10W
R510	1-216-113-91	RES-CHIP	470K	5%	1/10W
R512	1-249-382-91	CARBON	1.2	5%	1/4W
R513	1-216-097-91	RES-CHIP	100K	5%	1/10W
R514	1-249-377-91	CARBON	0.47	5%	1/4W
R515	1-249-377-91	CARBON	0.47	5%	1/4W
R516	1-214-907-81	METAL	56K	1%	1/2W
R518	1-216-059-91	RES-CHIP	2.7K	5%	1/10W
R520	1-215-884-91	METAL OXIDE	47	5%	2W
R522	1-216-097-91	RES-CHIP	100K	5%	1/10W
R523	1-216-117-91	RES-CHIP	680K	5%	1/10W
R524	1-216-079-91	RES-CHIP	18K	5%	1/10W
R526	1-216-089-91	RES-CHIP	47K	5%	1/10W
R527	1-216-075-91	RES-CHIP	12K	5%	1/10W
R528	1-216-097-91	RES-CHIP	100K	5%	1/10W
R529	1-216-073-91	RES-CHIP	10K	5%	1/10W
R530	1-216-085-91	RES-CHIP	33K	5%	1/10W
R531	1-216-057-91	RES-CHIP	2.2K	5%	1/10W
R533	1-216-081-00	RES-CHIP	22K	5%	1/10W
R539	1-215-892-81	METAL OXIDE	1K	5%	2W
R540	1-212-970-61	FUSIBLE	33	5%	1/2W
R542	1-216-121-91	RES-CHIP	1M	5%	1/10W
R543	1-216-065-91	RES-CHIP	4.7K	5%	1/10W
R544	1-216-103-91	RES-CHIP	180K	5%	1/10W
R547	1-535-143-71	LEAD, JUMPER (7.5MM)			
R549	1-535-143-71	LEAD, JUMPER (7.5MM)			
R551	1-215-867-21	METAL OXIDE	470	5%	1W
R552	1-216-089-91	RES-CHIP	47K	5%	1/10W
R553	1-249-381-91	CARBON	1	5%	1/4W
R555	1-216-089-91	RES-CHIP	47K	5%	1/10W
R556	1-215-915-51	METAL OXIDE	470	5%	3W
R557	1-216-065-91	RES-CHIP	4.7K	5%	1/10W
R559	1-535-143-61	LEAD, JUMPER (5.0MM)			
R561	1-216-117-91	RES-CHIP	680K	5%	1/10W
R565	1-216-033-91	RES-CHIP	220	5%	1/10W
R568	1-215-915-51	METAL OXIDE	470	5%	3W
R569	1-216-073-91	RES-CHIP	10K	5%	1/10W
R570	1-216-049-91	RES-CHIP	1K	5%	1/10W
R571	1-216-035-91	RES-CHIP	270	5%	1/10W
R572	1-216-039-91	RES-CHIP	390	5%	1/10W
R583	1-216-081-91	RES-CHIP	22K	5%	1/10W
R589	1-216-295-91	SHORT	0		
R591	1-215-892-51	METAL OXIDE	1K	5%	2W
R601	1-216-645-91	METAL CHIP	560	0.5%	1/10W
R602	1-202-961-11	CEMENTED	1.8	5%	10W
R603	1-202-933-11	FUSIBLE	0.1	10%	1/2W
R605	1-216-049-91	RES-CHIP	1K	5%	1/10W
R608	1-216-073-91	RES-CHIP	10K	5%	1/10W
R609	1-216-677-91	METAL CHIP	12K	0.5%	1/10W
R610	1-215-481-91	METAL	330K	1%	1/4W

A

Note : The components identified by shading and marked △ are critical for safety. Replace only with the part numbers specified in the parts list.

REF.NO.		PART.NO	DESCRIPTION			REMARK
R611		1-216-059-91	RES-CHIP	2.7K	5%	1/10W
R612		1-249-429-91	CARBON	10K	5%	1/4W
R613	△	1-219-720-91	METAL	10M	5%	1W
R615		1-215-385-91	METAL	33	1%	1/4W
R618		1-247-889-91	CARBON	270K	5%	1/4W
R619		1-216-065-91	RES-CHIP	4.7K	5%	1/10W
R621		1-216-113-91	RES-CHIP	470K	5%	1/10W
R622		1-216-073-91	RES-CHIP	10K	5%	1/10W
R623		1-216-065-91	RES-CHIP	4.7K	5%	1/10W
R624		1-216-001-91	RES-CHIP	10	5%	1/10W
R625		1-216-073-91	RES-CHIP	10K	5%	1/10W
R627		1-249-389-91	CARBON	4.7	5%	1/4W
R628		1-247-791-91	CARBON	22	5%	1/4W
R629		1-216-073-91	RES-CHIP	10K	5%	1/10W
R632		1-249-417-91	CARBON	1K	5%	1/4W
R633		1-215-481-91	METAL	330K	1%	1/4W
R634		1-217-625-11	METAL	0.05	10%	2W
R635		1-260-300-71	CARBON	4.7	5%	1/2W
R636		1-249-413-91	CARBON	470	5%	1/4W
R637		1-216-041-91	RES-CHIP	470	5%	1/10W
R639		1-208-814-91	METAL CHIP	22K	0.5%	1/10W
R640		1-208-830-91	METAL CHIP	100K	0.5%	1/10W
R641		1-216-097-91	RES-CHIP	100K	5%	1/10W
R642		1-249-405-91	CARBON	100	5%	1/4W
R643		1-216-089-91	RES-CHIP	47K	5%	1/10W
R645		1-216-073-91	RES-CHIP	10K	5%	1/10W
R647		1-216-049-91	RES-CHIP	1K	5%	1/10W
R648		1-215-481-91	METAL	330K	1%	1/4W
R649		1-208-805-91	METAL CHIP	9.1K	0.5%	1/10W
R650		1-208-758-91	METAL CHIP	100	0.5%	1/10W
R651		1-220-926-21	FUSIBLE	0.47	10%	1/2W
R652		1-216-081-91	RES-CHIP	22K	5%	1/10W
R653		1-216-073-91	RES-CHIP	10K	5%	1/10W
R654		1-216-001-91	RES-CHIP	10	5%	1/10W
R656		1-216-365-51	METAL OXIDE	0.47	5%	2W
R658		1-202-961-11	CEMENTED	1.8	5%	10W
R660		1-247-807-91	CARBON	100	5%	1/4W
R1202		1-216-073-91	RES-CHIP	10K	5%	1/10W
R1207		1-216-077-91	RES-CHIP	15K	5%	1/10W
R1208		1-216-067-91	RES-CHIP	5.6K	5%	1/10W
R1209		1-216-073-91	RES-CHIP	10K	5%	1/10W
R1210		1-216-077-91	RES-CHIP	15K	5%	1/10W
R1211		1-216-049-91	RES-CHIP	1K	5%	1/10W
R1212		1-216-057-91	RES-CHIP	2.2K	5%	1/10W
R1213		1-216-049-91	RES-CHIP	1K	5%	1/10W
R1214		1-216-049-91	RES-CHIP	1K	5%	1/10W
R1215		1-216-049-91	RES-CHIP	1K	5%	1/10W
R1230		1-216-041-91	RES-CHIP	470	5%	1/10W
R1231		1-216-113-91	RES-CHIP	470K	5%	1/10W
R1232		1-216-041-91	RES-CHIP	470	5%	1/10W
R1233		1-216-113-91	RES-CHIP	470K	5%	1/10W
R1235		1-216-073-91	RES-CHIP	10K	5%	1/10W
R1236		1-216-073-91	RES-CHIP	10K	5%	1/10W
			< RELAY >			
RY601	△	1-755-388-11	RELAY (AC POWER)			
			< SWITCH >			
SW532		1-572-707-21	SWITCH, LEVER			
			< TRANSFORMER >			
T511	△	1-453-308-31	TRANSFORMER ASSY, FLYBACK (NX-4521//Z2B4)			
T531		1-437-210-21	TRANSFORMER, HORIZONTAL DRIVE			
T532		1-426-981-91	TRANSFORMER, FERRITE (PMT)			
T601	△	1-427-962-11	TRANSFORMER, LINE FILTER			
T602	△	1-431-732-31	TRANSFORMER, CONVERTER (SRT)			
T603	△	1-435-977-11	TRANSFORMER, CONVERTER (PIT)			
			< THERMISTOR >			
TH601		1-803-586-41	THERMISTOR			
THP601	△	1-803-951-11	THERMISTOR, PTC			
			< CRYSTAL >			
X001		1-578-774-71	VIBRATOR, CRYSTAL			
X201		1-760-628-21	VIBRATOR, CRYSTAL			

A Board Variant Parts KV-25FX30

			< CAPACITOR >			
C532		1-163-017-91	CERAMIC	0.0047UF	10.00%	50V
C536		1-117-813-21	FILM	0.75UF	5.00%	250V
C537		1-137-417-91	MYLAR	0.0047UF	10.00%	200V
C546		1-130-895-51	FILM	0.056UF	5.00%	400V
C547		1-117-813-11	FILM	0.75UF	5.00%	250V
			< DIODE >			
D505		8-719-988-61	DIODE 1SS355TE-17			
			< RESISTOR >			
R517		1-215-454-91	METAL	24K	1%	1/4W
R521		1-216-113-91	RES-CHIP	470K	5%	1/10W
R525		1-216-057-91	RES-CHIP	2.2K	5%	1/10W
R532		1-216-073-91	RES-CHIP	10K	5%	1/10W
R534		1-216-109-91	RES-CHIP	330K	5%	1/10W
R535		1-216-109-91	RES-CHIP	330K	5%	1/10W
R546		1-215-915-51	METAL	470	5%	3W
R548		1-212-849-61	FUSIBLE	4.7	5%	1/4W
R562		1-216-097-91	RES-CHIP	100K	5%	1/10W

Note : The components identified by shading and marked ⚠ are critical for safety. Replace only with the part numbers specified in the parts list.

A C

REF.NO.	PART.NO	DESCRIPTION			REMARK
R595	1-249-382-91	CARBON	1.2	5%	1/4W
R600	1-216-035-91	RES-CHIP	270	5%	1/10W
		< TRANSFORMER >			
T533	1-435-347-11	TRANSFORMER, HORIZONTAL LINEAR			
		< TUNER >			
TU101	8-598-535-10	FRONTEND BTF-EF411 (KV-25FX30B)			
	8-598-533-00	FRONTEND BTF-EC411 (KV-25FX30E/25FX30K)			

A Board Variant Parts KV-29FX30

		< CAPACITOR >			
C530	1-162-970-91	CERAMIC	0.01UF	10.00%	50V
C532	1-163-037-91	CERAMIC	0.022UF	10.00%	50V
C536	1-115-521-21	FILM	0.82UF	5.00%	250V
C537	1-106-351-91	MYLAR	0.0022UF	99.00%	200V
C546	1-130-118-51	FILM	0.051UF	5.00%	400V
C547	1-115-521-11	FILM	0.82UF	5.00%	250V
C1232	1-115-339-11	CERAMIC	0.1UF	10.00%	50V
		< DIODE >			
D505	8-719-081-97	DIODE MMDL914T1			
		< RESISTOR >			
R517	1-215-447-91	METAL	12K	1%	1/4W
R521	1-216-103-91	RES-CHIP	180K	5%	1/10W
R525	1-216-041-91	RES-CHIP	470	5%	1/10W
R532	1-216-059-91	RES-CHIP	2.7K	5%	1/10W
R534	1-216-111-91	RES-CHIP	390K	5%	1/10W
R535	1-216-093-91	RES-CHIP	68K	5%	1/10W
R541	1-216-109-91	RES-CHIP	330K	5%	1/10W
R546	1-216-479-51	METAL OXIDE	560	5%	3W
R548	1-249-387-91	CARBON	3.3	5%	1/4W
R562	1-216-099-91	RES-CHIP	120K	5%	1/10W
R563	1-216-097-91	RES-CHIP	100K	5%	1/10W
R595	1-249-377-91	CARBON	0.47	5%	1/4W
R600	1-216-037-91	RES-CHIP	330	5%	1/10W
		< TRANSFORMER >			
T533	1-433-906-11	TRANSFORMER, HORIZONTAL LINEAR			
		< TUNER >			
TU101	8-598-535-10	FRONTEND BTF-EF411 (KV-29FX30B)			
	8-598-533-00	FRONTEND BTF-EC411 (KV-29FX30E/29FX30K)			

REF.NO.	PART.NO	DESCRIPTION			REMARK

*A-1639-021-A C Board, Complete

	4-382-854-01	SCREW (M3X8), P, SW (+)			
	4-382-854-01	SCREW (M3X8), P, SW (+)			
		< CAPACITOR >			
C701	1-136-189-91	MYLAR	0.1UF	10.00%	250V
C702	1-126-964-91	ELECT	10UF	20.00%	50V
C703	1-101-004-91	CERAMIC	0.01UF		50V
C704	1-107-649-91	ELECT	2.2UF	20.00%	250V
C708	1-162-114-51	CERAMIC	0.0047UF		2KV
C710	1-107-652-91	ELECT	10UF	20.00%	250V
C1803	1-101-005-91	CERAMIC	0.022UF		50V
C1804	1-126-964-91	ELECT	10UF	20.00%	50V
C1805	1-101-880-91	CERAMIC	47PF	5.00%	50V
		< CONNECTOR >			
CN702	1-695-915-21	TAB (CONTACT)			
CN703	*1-564-510-51	PLUG, CONNECTOR 7P			
CN706	1-695-915-21	TAB (CONTACT)			
CN707	*1-564-508-51	PLUG, CONNECTOR 5P			
CN1801	*1-564-506-51	PLUG, CONNECTOR 3P			
		< DIODE >			
D701	8-719-991-33	DIODE 1SS133T-77			
D702	8-719-901-83	DIODE 1SS83			
D703	8-719-901-83	DIODE 1SS83			
D705	8-719-302-43	DIODE EL1Z			
D706	8-719-901-83	DIODE 1SS83			
D707	8-719-901-83	DIODE 1SS83			
D708	8-719-109-97	DIODE RD6.8ES-B2			
D709	8-719-109-97	DIODE RD6.8ES-B2			
D710	8-719-109-97	DIODE RD6.8ES-B2			
D1801	8-719-110-17	DIODE RD10ESB2			
D1802	8-719-110-17	DIODE RD10ESB2			
D1803	8-719-110-17	DIODE RD10ESB2			
		< IC >			
IC701	8-759-562-43	IC TDA6108JF/N1B			
IC1801	8-759-603-37	IC M5216P			
		< SOCKET >			
J701	⚠ 1-251-732-11	SOCKET, CRT			
		< COIL >			
L704	1-414-183-31	INDUCTOR	10UH		
		< RESISTOR >			
R701	1-247-903-91	CARBON	1M	5%	1/4W

C VM

REF.NO.	PART.NO	DESCRIPTION			REMARK
R702	1-249-429-91	CARBON	10K	5%	1/4W
R703	1-247-903-91	CARBON	1M	5%	1/4W
R704	1-535-143-31	LEAD, JUMPER (15.0MM)			
R705	1-215-869-21	METAL OXIDE	1K	5%	1W
R706	1-249-411-91	CARBON	330	5%	1/4W
R712	1-215-869-21	METAL OXIDE	1K	5%	1W
R716	1-249-411-91	CARBON	330	5%	1/4W
R718	1-202-814-91	SOLID	33K	10%	1/2W
R726	1-215-869-21	METAL OXIDE	1K	5%	1W
R727	1-249-411-91	CARBON	330	5%	1/4W
R728	1-249-398-91	CARBON	27	5%	1/4W
R741	1-202-549-81	SOLID	100	20%	1/2W
R1801	1-249-441-91	CARBON	100K	5%	1/4W
R1805	1-249-429-91	CARBON	10K	5%	1/4W
R1806	1-247-899-91	CARBON	680K	5%	1/4W
R1807	1-249-429-91	CARBON	10K	5%	1/4W
R1808	1-249-429-91	CARBON	10K	5%	1/4W
R1809	1-249-429-91	CARBON	10K	5%	1/4W
R1810	1-249-429-91	CARBON	10K	5%	1/4W
		< VARIABLE RESISTOR >			
RV702	1-241-656-11	RES, ADJ, METAL FILM 110M			

***A-1645-046-A VM Board, Complete (KV-25FX30)**
***A-1645-048-A VM Board, Complete (KV-29FX30)**

VM Board, Common Parts

REF.NO.	PART.NO	DESCRIPTION			REMARK
		< CAPACITOR >			
C1701	1-104-665-91	ELECT	100UF	20.00%	25V
C1702	1-162-970-91	CERAMIC CHIP	0.01UF	10.00%	25V
C1703	1-162-955-91	CERAMIC CHIP	150PF	5.00%	50V
C1704	1-104-665-91	ELECT	100UF	20.00%	25V
C1705	1-162-919-91	CERAMIC CHIP	22PF	5.00%	50V
C1710	1-106-375-81	MYLAR	0.022UF	10.00%	250V
C1711	1-106-375-81	MYLAR	0.022UF	10.00%	250V
C1721	1-107-639-91	ELECT	47UF	20.00%	160V
C1722	1-136-153-81	FILM	0.01UF	5.00%	50V
C1723	1-126-935-91	ELECT	470UF	20.00%	10V
C1728	1-126-935-91	ELECT	470UF	20.00%	10V
C1733	1-104-664-91	ELECT	47UF	20.00%	25V
C1734	1-104-664-91	ELECT	47UF	20.00%	25V
C1737	1-104-999-51	MYLAR	0.1UF	5.00%	200V
C1844	1-129-716-91	FILM	0.015UF	5.00%	630V
C1845	1-129-725-91	FILM	0.082UF	5.00%	400V
C1848	1-136-347-91	FILM	0.0047UF	5.00%	630V
C1901	1-162-927-91	CERAMIC CHIP	100PF	5.00%	50V
C1902	1-137-374-91	MYLAR	0.047UF	5.00%	50V
C1903	1-126-964-91	ELECT	10UF	20.00%	50V
C1904	1-137-366-91	MYLAR	0.0022UF	5.00%	50V
C1905	1-137-374-91	MYLAR	0.047UF	5.00%	50V
C1906	1-162-970-91	CERAMIC CHIP	0.01UF	10.00%	25V
C1908	1-109-954-91	ELECT	0.47UF	20.00%	160V
C1911	1-109-954-91	ELECT	0.47UF	20.00%	160V
C1913	1-129-992-91	FILM	0.0024UF	5.00%	630V
C1914	1-102-244-91	CERAMIC	220PF	10.00%	500V
C1915	1-136-205-91	MYLAR	0.022UF	10.00%	250V
C1916	1-162-962-91	CERAMIC CHIP	470PF	10.00%	50V
C1951	1-126-964-91	ELECT	10UF	20.00%	50V
C1952	1-126-964-91	ELECT	10UF	20.00%	50V
C1953	1-137-367-91	MYLAR	0.0033UF	5.00%	50V
C1954	1-162-970-91	CERAMIC CHIP	0.01UF	10.00%	25V
C1957	1-126-964-91	ELECT	10UF	20.00%	50V
C1958	1-136-169-91	FILM	0.22UF	5.00%	50V
C1959	1-136-169-91	FILM	0.22UF	5.00%	50V
		< CONNECTOR >			
CN1701	1-691-771-11	PLUG (MICRO CONNECTOR) 9P			
CN1702	*1-564-506-51	PLUG, CONNECTOR 3P			
CN1718	*1-770-723-11	CONNECTOR, BOARD TO BOARD 8P			
		< DIODE >			
D1711	8-719-988-61	DIODE 1SS355TE-17			
D1719	8-719-991-33	DIODE 1SS133T-77			
D1722	8-719-991-33	DIODE 1SS133T-77			
D1733	8-719-921-40	DIODE MTZJ-T-4.7C			
D1734	8-719-921-40	DIODE MTZJ-T-4.7C			
D1840	8-719-302-43	DIODE EL1Z			
D1901	8-719-991-33	DIODE 1SS133T-77			
D1902	8-719-991-33	DIODE 1SS133T-77			
D1903	8-719-991-33	DIODE 1SS133T-77			
D1904	8-719-991-33	DIODE 1SS133T-77			
D1905	8-719-110-41	DIODE RD15ES-B2			
D1906	8-719-970-87	DIODE ERA38-06			
D1907	8-719-970-87	DIODE ERA38-06			
D1908	8-719-300-33	DIODE RU-3AM			
D1909	8-719-991-33	DIODE 1SS133T-77			
		< FERRITE BEAD >			
FB1701	1-535-143-61	LEAD, JUMPER (5.0MM)			
		< IC >			
IC1701	8-759-394-36	IC BA09T			
IC1901	8-759-450-95	IC LM393N			
IC1902	8-759-008-70	IC LM358N			
		< COIL >			
L1701	1-414-183-31	INDUCTOR	10UH		
L1702	1-412-525-41	INDUCTOR	10UH		
L1703	1-414-184-31	INDUCTOR	15UH		

REF.NO.	PART.NO	DESCRIPTION			REMARK
L1843	1-406-989-11	INDUCTOR	10MH		
L1901	1-406-677-21	INDUCTOR	10MH		
L1902	1-414-177-31	INDUCTOR	1UH		
L1959	1-406-679-21	INDUCTOR	22MH		
		< TRANSISTOR >			
Q1701	8-729-120-28	TRANSISTOR 2SC1623-L5L6			
Q1704	8-729-120-28	TRANSISTOR 2SC2412K-T-146-R			
Q1705	8-729-119-78	TRANSISTOR 2SC2785-HFE			
Q1706	8-729-026-39	TRANSISTOR 2SA933AS-QT			
Q1707	8-729-049-09	TRANSISTOR BC327-25			
Q1708	8-729-045-05	TRANSISTOR 2SA2005			
Q1709	8-729-119-78	TRANSISTOR 2SC2785-HFE			
Q1710	8-729-049-10	TRANSISTOR BC337-25			
Q1711	8-729-045-04	TRANSISTOR 2SC5511			
Q1840	8-729-119-76	TRANSISTOR 2SA1175-HFE			
Q1841	8-729-039-68	TRANSISTOR IRF620			
Q1901	8-729-120-28	TRANSISTOR 2SC2412K-T-146-R			
Q1902	8-729-120-28	TRANSISTOR 2SC2412K-T-146-R			
Q1903	8-729-043-95	TRANSISTOR 2SC3840(3)			
Q1906	8-729-120-28	TRANSISTOR 2SC2412K-T-146-R			
Q1907	8-729-140-97	TRANSISTOR 2SB734-34			
		< RESISTOR >			
R1701	1-216-814-91	RES-CHIP	270	5%	1/16W
R1702	1-216-814-91	RES-CHIP	270	5%	1/16W
R1709	1-216-825-91	RES-CHIP	2.2K	5%	1/16W
R1710	1-216-839-91	RES-CHIP	33K	5%	1/16W
R1711	1-216-823-91	RES-CHIP	1.5K	5%	1/16W
R1712	1-216-824-91	RES-CHIP	1.8K	5%	1/16W
R1713	1-216-809-91	RES-CHIP	100	5%	1/16W
R1714	1-260-089-81	CARBON	150	5%	1/2W
R1719	1-216-822-91	RES-CHIP	1.2K	5%	1/16W
R1720	1-249-433-91	CARBON	22K	5%	1/4W
R1721	1-249-433-91	CARBON	22K	5%	1/4W
R1722	1-216-822-91	RES-CHIP	1.2K	5%	1/16W
R1723	1-249-399-91	CARBON	33	5%	1/4W
R1724	1-216-830-91	RES-CHIP	5.6K	5%	1/16W
R1725	1-247-889-91	CARBON	270K	5%	1/4W
R1726	1-247-889-91	CARBON	270K	5%	1/4W
R1727	1-216-830-91	RES-CHIP	5.6K	5%	1/16W
R1728	1-249-399-91	CARBON	33	5%	1/4W
R1729	1-249-407-91	CARBON	150	5%	1/4W
R1732	1-249-407-91	CARBON	150	5%	1/4W
R1733	1-214-809-81	METAL	5.1	1%	1/2W
R1734	1-214-809-81	METAL	5.1	1%	1/2W
R1735	1-215-922-21	METAL OXIDE	6.8K	5%	3W
R1736	1-215-892-21	METAL	1K	5%	2W
R1737	1-215-867-21	METAL OXIDE	470	5%	1W

REF.NO.	PART.NO	DESCRIPTION			REMARK
R1739	1-535-143-61	LEAD, JUMPER (5.0MM)			
R1842	1-216-025-91	RES-CHIP	100	5%	1/10W
R1846	1-216-057-91	RES-CHIP	2.2K	5%	1/10W
R1903	1-216-073-91	RES-CHIP	10K	5%	1/10W
R1904	1-216-073-91	RES-CHIP	10K	5%	1/10W
R1905	1-216-097-91	RES-CHIP	100K	5%	1/10W
R1906	1-216-073-91	RES-CHIP	10K	5%	1/10W
R1907	1-216-097-91	RES-CHIP	100K	5%	1/10W
R1908	1-216-033-91	RES-CHIP	220	5%	1/10W
R1909	1-215-489-91	METAL	680K	1%	1/4W
R1910	1-216-295-91	SHORT	0		
R1911	1-216-073-91	RES-CHIP	10K	5%	1/10W
R1912	1-216-121-91	RES-CHIP	1M	5%	1/10W
R1913	1-216-049-91	RES-CHIP	1K	5%	1/10W
R1914	1-216-057-91	RES-CHIP	2.2K	5%	1/10W
R1915	1-216-065-91	RES-CHIP	4.7K	5%	1/10W
R1916	1-216-667-91	METAL CHIP	4.7K	0.5%	1/10W
R1917	1-216-693-91	METAL CHIP	56K	0.5%	1/10W
R1919	1-216-675-91	METAL CHIP	10K	0.5%	1/10W
R1920	1-216-295-91	SHORT	0		
R1922	1-215-919-91	METAL OXIDE	2.2K	5%	3W
R1923	1-216-097-91	RES-CHIP	100K	5%	1/10W
R1924	1-216-097-91	RES-CHIP	100K	5%	1/10W
R1925	1-216-097-91	RES-CHIP	100K	5%	1/10W
R1926	1-216-295-91	SHORT	0		
R1953	1-216-107-91	RES-CHIP	270K	5%	1/10W
R1954	1-216-109-91	RES-CHIP	330K	5%	1/10W
R1955	1-216-105-91	RES-CHIP	220K	5%	1/10W
R1956	1-218-463-91	RES-CHIP	8.2M	5%	1/10W
R1957	1-216-073-91	RES-CHIP	10K	5%	1/10W
R1958	1-216-025-91	RES-CHIP	100	5%	1/10W
R1959	1-216-063-91	RES-CHIP	3.9K	5%	1/10W
R1960	1-216-073-91	RES-CHIP	10K	5%	1/10W
R1961	1-216-687-91	METAL CHIP	33K	0.5%	1/10W
R1962	1-216-687-91	METAL CHIP	33K	0.5%	1/10W
R1964	1-216-025-91	RES-CHIP	100	5%	1/10W
R1965	1-216-041-91	RES-CHIP	470	5%	1/10W
		< TRANSFORMER >			
T1901	1-433-849-11	TRANSFORMER, DYNAMIC FOCUS			

VM Board Variant Parts KV-25FX30

		< RESISTOR >			
R1847	1-216-474-21	METAL OXIDE	82	5%	3W
R1848	1-215-910-21	METAL OXIDE	68	5%	3W
R1918	1-216-485-21	METAL OXIDE	5.6K	5%	3W
R1921	1-216-485-21	METAL OXIDE	5.6K	5%	3W
R1931	1-216-689-91	RES-CHIP	39K	5%	1/10W

VM H1

REF.NO.	PART.NO	DESCRIPTION			REMARK
R1966	1-215-887-51	METAL OXIDE	150	5%	2W
R1967	1-215-917-51	METAL OXIDE	1K	5%	3W
R1968	1-215-887-51	METAL OXIDE	150	5%	2W
R1969	1-215-917-51	METAL OXIDE	1K	5%	3W

VM Board Variant Parts KV-29FX30

< CAPACITOR >

C1917	1-102-228-91	CERAMIC	470PF	10.00%	500V

< RESISTOR >

R1847	1-216-476-21	METAL OXIDE	180	5%	3W
R1848	1-215-911-21	METAL OXIDE	100	5%	3W
R1918	1-215-922-91	METAL OXIDE	6.8K	5%	3W
R1921	1-215-922-91	METAL OXIDE	6.8K	5%	3W
R1931	1-216-691-91	RES-CHIP	47K	5%	1/10W
R1966	1-215-886-91	METAL OXIDE	100	5%	2W
R1967	1-215-922-51	METAL OXIDE	6.8K	5%	3W
R1968	1-215-886-91	METAL OXIDE	100	5%	2W
R1969	1-216-485-21	METAL OXIDE	5.6K	5%	3W

*A-1646-240-A H1 Board, Complete

4-203-258-02 HOLDER, LED

< CAPACITOR >

C900	1-102-074-91	CERAMIC	0.001UF	10.00% 50V
C901	1-102-074-91	CERAMIC	0.001UF	10.00% 50V
C902	1-137-372-91	MYLAR	0.022UF	5.00% 50V
C903	1-137-372-91	MYLAR	0.022UF	5.00% 50V
C904	1-104-665-91	ELECT	100UF	20.00% 25V
C905	1-126-964-91	ELECT	10UF	20.00% 50V
C906	1-126-960-91	ELECT	1UF	20.00% 50V
C907	1-126-960-91	ELECT	1UF	20.00% 50V
C908	1-137-366-91	MYLAR	0.0022UF	5.00% 50V
C909	1-137-366-91	MYLAR	0.0022UF	5.00% 50V
C911	1-102-074-91	CERAMIC	0.001UF	10.00% 50V
C912	1-102-074-91	CERAMIC	0.001UF	10.00% 50V

< CONNECTOR >

CN906	*1-564-511-51	PLUG, CONNECTOR 8P
CN907	*1-564-510-51	PLUG, CONNECTOR 7P
CN908	*1-564-509-51	PLUG, CONNECTOR 6P

< DIODE >

D901	8-719-302-45	DIODE SEL1210S-D
D902	8-719-929-15	DIODE HZS9.1NB2
D903	8-719-929-15	DIODE HZS9.1NB2
D904	8-719-109-97	DIODE RD6.8ES-B2
D905	8-719-109-97	DIODE RD6.8ES-B2
D906	8-719-923-60	DIODE MTZJ-T-77-9.1A
D907	8-719-923-60	DIODE MTZJ-T-77-9.1A
D908	8-719-923-60	DIODE MTZJ-T-77-9.1A

< IC >

IC900	8-742-180-30	HYB IC SBX3081-51(20)

< JACK >

J900	1-750-264-11	JACK
J901	1-779-947-12	TERMINAL BLOCK, S

< COIL >

L900	1-414-740-21	INDUCTOR	4.7UH
L901	1-414-740-21	INDUCTOR	4.7UH
L902	1-414-934-21	INDUCTOR	10UH
L903	1-414-934-21	INDUCTOR	10UH
L904	1-410-119-21	INDUCTOR	1MH

< RESISTOR >

R900	1-247-807-91	CARBON	100	5%	1/4W
R901	1-249-427-91	CARBON	6.8K	5%	1/4W
R902	1-535-143-61	LEAD, JUMPER (5.0MM)			
R903	1-249-406-91	CARBON	120	5%	1/4W
R904	1-249-406-91	CARBON	120	5%	1/4W
R908	1-249-401-91	CARBON	47	5%	1/4W
R909	1-247-895-91	CARBON	470K	5%	1/4W
R910	1-247-895-91	CARBON	470K	5%	1/4W
R911	1-249-431-91	CARBON	15K	5%	1/4W
R912	1-249-429-91	CARBON	10K	5%	1/4W
R913	1-247-843-91	CARBON	3.3K	5%	1/4W
R914	1-249-419-91	CARBON	1.5K	5%	1/4W
R915	1-249-406-91	CARBON	120	5%	1/4W
R916	1-249-406-91	CARBON	120	5%	1/4W
R917	1-247-807-91	CARBON	100	5%	1/4W
R918	1-247-807-91	CARBON	100	5%	1/4W

< SWITCH >

S900	1-692-979-11	SWITCH, TACTILE
S901	1-692-979-11	SWITCH, TACTILE
S902	1-692-979-11	SWITCH, TACTILE

Note : The components identified by shading and marked ⚠ are critical for safety. Replace only with the part numbers specified in the parts list.

REF.NO.	PART.NO	DESCRIPTION	REMARK

MISCELLANEOUS

⚠	1-571-433-31	SWITCH, PUSH (AC POWER)	
⚠	1-783-083-11	CORD, POWER (WITH FILTER)	
	1-424-733-11	COIL, PFC CHOKE 65MMH	
⚠	1-453-308-31	TRANSFORMER ASSY, FLYBACK (NX4521//Z2B4)	
	8-598-535-10	FRONTEND BTF-EF411 (KV-25FX30B/29FX30B)	
	8-598-533-00	FRONTEND BTF-EC411 (KV-25FX30E/25FX30K KV-29FX30E/29FX30K)	
	1-529-988-11	SPEAKER (4.2X24CM)	
⚠	8-753-250-05	PICTURE TUBE (A60LPN70X) (KV-25FX30)	
⚠	8-753-053-05	PICTURE TUBE (M68LNH060X) (KV-29FX30)	
	1-451-475-11	DEFLECTION YOKE (Y25RSA) (KV-25FX30)	
	8-451-494-51	DEFLECTION YOKE (Y29RSA-L) (KV-29FX30)	
	1-452-896-11	COIL, NA ROTATION (RT-200)	
⚠	1-419-142-11	COIL DEGAUSSING (KV-25FX30)	
⚠	1-416-654-11	COIL DEMAGNETIC (KV-29FX30)	
	8-453-011-11	NECK ASSY, NA299M	
⚠	1-251-537-22	CAP ASSY, HIGH VOLTAGE	
	1-452-094-11	MAGNET, ROTATABLE DISK; 15MM	
	1-452-032-11	MAGNET, DISK; 10MM	

ACCESSORIES AND PACKAGING MATERIALS

	*4-029-168-01	BAG, PROTECTION
	*4-204-807-01	CUSHION (LOWER) (ASSY) (KV-25FX30)
	*4-204-780-01	CUSHION (LOWER) (ASSY) (KV-29FX30)
	*4-204-810-01	CUSHION (UPPER) (ASSY) (KV-25FX30)
	*4-204-783-01	CUSHION (UPPER) (ASSY) (KV-29FX30)
	*4-204-811-11	INDIVIDUAL CARTON (KV-25FX30)
	*4-204-784-11	INDIVIDUAL CARTON (KV-29FX30)
	4-206-062-21	INSTRUCTION MANUAL (KV-25FX30B/29FX30B) (GERMAN/FRENCH/ITALIAN/DUTCH)
	4-206-060-11	INSTRUCTION MANUAL (KV-25FX30E/29FX30E) (ITALIAN)
	4-206-060-51	INSTRUCTION MANUAL (KV-25FX30E/29FX30E) (GERMAN/GREEK/TURKISH)
	4-206-060-61	INSTRUCTION MANUAL (KV-25FX30E/29FX30E) (DANISH/SPANISH/NORWEGIAN/PORTUGUESE/ SWEDISH/FINNISH)
	4-206-060-31	INSTRUCTION MANUAL (KV-25FX30K/29FX30K) (BULGARIAN/CZECH/ENGLISH/HUNGARIAN/ POLISH/RUSSIAN)

REMOTE COMMANDER

	1-418-476-21	COMMANDER, STANDARD (RM-887)